

# **IBISCHK7**

**IBISCHK7 (IBIS Golden Parser) User Guide**

**Version 7.0.1**

December 31, 2019 WIP1



Copyright 2019 IBIS Open Forum

## Contents

<b>1</b>	<b>Introduction.....</b>	<b>3</b>
<b>2</b>	<b>IBISCHK7 Usage .....</b>	<b>4</b>
2.1	Input File FLAGS .....	4
2.2	Output FLAGS.....	5
2.3	Return Status.....	5
2.4	Platform Considerations .....	5
<b>3</b>	<b>Output Message Categories .....</b>	<b>6</b>
<b>4</b>	<b>Message Listing By Codes.....</b>	<b>8</b>
4.1	Message Codes 0 to 499 .....	9
4.2	Message Codes 500 to 999 .....	21
4.3	Message Codes 1000 to 1499 .....	33
4.4	Message Codes 1500 to 1999 .....	38
4.5	Message Codes 2000 to 2499 .....	47
4.6	Message Codes 2500 to 2999 .....	58
4.7	Message Codes 3000 to 3499 .....	64
4.8	Message Codes 3500 to 3999 .....	74
4.9	Message Codes 4000 to 4499 .....	79
4.10	Message Codes 4500 to 4999 .....	88
4.11	Message Codes 5000 to 5499 .....	102
4.12	Message Codes 5500 to 5999 .....	107
4.13	Message Codes 6000 to 6499 .....	110

## 1 INTRODUCTION

This document describes the usage, functionality, and message codes of the IBISCHK7 Version 7.0.1 source code and its associated executable programs. IBISCHK7 is used to test files for conformance with IBIS (I/O Buffer Information Specification) Version 7.0.

- The IBIS Version 7.0 Specification is available at [www.ibis.org/ver7.0](http://www.ibis.org/ver7.0).
- The IBISCHK7 executable program is freely available at [www.ibis.org/ibischk7](http://www.ibis.org/ibischk7).
- Checks performed by IBISCHK7 are documented here.
- A high-level description of the source code package is provided, but actual documentation and utilities exist in the source code package. The license to be filled out is located with the executables, and the source code package is available from the IBIS Open Forum.

IBIS Version 7.0 describes formats named IBS, PKG (Define Package Model), EBD (Electrical Board Description), IMS (Interconnect Model Set), and AMI (Algorithmic Model Interface). IBISCHK7 parses files with .ibs, .pkg, .ebd, .ims, and .ami extensions. The first four file formats are keyword based with keywords enclosed by square brackets. The .ami format is tree-structure based where a parameter hierarchy is delineated by parentheses.

Note that this user guide was first written for IBISCHK6 Version 6.0.0. As the IBIS specification evolves, the IBISCHK executable program and this IBISCHK user guide will evolve and be numbered in parallel with IBISCHK version numbers.

The source code consists of C language modules (.c and .h files) and makefile scripts to create the executable code for the operating system being used. Windows and Linux makefiles are supplied along with compiled executables.

In addition, multiple suites of QA (quality assurance) tests are provided for major and minor version levels starting with IBISCHK3. The test cases consist of IBIS files, their outputs, also their golden results. These test cases often relate to the feature set evolution (through the BIRD buffer issue resolution document revision process) and through code corrections (documented with BUG reports). The links below are:

- BIRDS: <http://www.ibis.org/birds>
- BUGs: [http://www.ibis.org/ibis\\_bugs](http://www.ibis.org/ibis_bugs)

## 2 IBISCHK7 USAGE

When “ibischk7\_64” (see section 2.3 PLATFORM CONSIDERATIONS) is run with no arguments, it prints this help message:

```
IBISCHK7 V7.0.1

IBISfile validation:
This program has been provided free to the electrical
engineering community by the IBIS Open Forum.  The
purpose of this program is to validate that the contents
of ASCII device data in a file specified conform to the
IBIS specification.
Usage: ibischk7_64      <IBS filename>
      : ibischk7_64 -ebd <EBD filename>
      : ibischk7_64 -pkg <PKG filename>
      : ibischk7_64 -ami <AMI filename>
      : ibischk7_64 -ims <IMS filename>
Usage: ibischk7_64 -caution -numbered      <IBS filename>
      : ibischk7_64 -caution -numbered -ebd <EBD filename>
      : ibischk7_64 -caution -numbered -pkg <PKG filename>
      : ibischk7_64 -caution -numbered -ami <AMI filename>
      : ibischk7_64 -caution -numbered -ims <IMS filename>
The flags prior to the file name can be in any order, and the -caution
and/or -numbered flags are optional.
```

One (and only one) file name argument must be provided to perform checking, and the file name extension must be consistent with the file type flag.

### 2.1 INPUT FILE FLAGS

The following option flags are required for files other than those in the **.ibs** format.

- pkg**        Use this option if the file is in Define Package Model format, described in section 7 of the IBIS 7.0 Specification.
- ebd**        Use this option if the file is in Electrical Board Description format, described in section 8 of the IBIS 7.0 Specification.
- ami**        Use this option if the file is in Algorithmic Model Interface format, described in section 10.3 of the IBIS 7.0 Specification.
- ims**        Use this option if the file is in Interconnect Model Set format, described in section 11 of the IBIS 7.0 Specification.

Note: if a top-level file calls other IBIS (IBS, PKG, EBD, IMS, and AMI) files, then all referenced files are checked with one call. For example, an EBD file can contain other EBD references and also IBS file references that in turn can reference PKG, IMS and AMI files. Furthermore, IBS and IMS files can reference IBIS-ISS and SnP (Touchstone) files. The top-level EBD file check will initiate checking for that EBD file plus checking for all referenced files. These referenced files could also be checked individually by using the appropriate input file flags.

## 2.2 OUTPUT FLAGS

Printed output messages can be modified using the following flags:

- caution** Additional Cautions level messages will be printed only when the -caution flag is used. Their meaning is described further below and in section 3.
- numbered** The -numbered flag gives alphanumeric message codes rather than generic codes. The generic codes messages begin with ERROR, WARNING, NOTE, INTERNAL ERROR, or CAUTION (when using the -caution flag). With the -numbered flag, the message format is <single-letter-category><four-digit-number>, discussed later. For example, one generic message begins with WARNING (without the -numbered flag) or W1113 (with the -numbered flag).

## 2.3 RETURN STATUS

The exit status returned by IBISCHK7 will be one of the following:

- 0 Successful execution.
- 1 A bad program argument or no file argument has been provided.
- 2 The [IBIS Ver] keyword could not be found.
- 3 The value of [IBIS Ver] is not a valid IBIS version number.

Note that IBISCHK7 will return 0 status even if errors are found in the checked file(s).

## 2.4 PLATFORM CONSIDERATIONS

IBISCHK7 performs platform-specific checks where executable IBIS-AMI models are present. It will load and check all IBIS-AMI executable files (.dll/.so files) that are suitable for the platform on which IBISCHK7 is currently running, where the platform is defined by operating system and address bit size. IBISCHK7 is downloadable for Windows, Linux, and MacOS operating systems. For each operating system both “ibischk6\_32” and “ibischk6\_64” programs are available, for 32 bit and 64 bit addressing.

Complete checking of an IBIS file may require running IBISCHK7 on each operating system and bit size supported by any IBIS-AMI models in an IBIS file. When IBIS-AMI models are present IBISCHK7 prints a platform summary report near the end:

```
... Status of [Algorithmic Model] Executables for Windows 32:
icg_64.dll: Windows 64:      Not Checked
icg_32.dll: Windows 32:      Checked
icg_64.so:  Linux 64:        Not Checked
icg_32.so:  Linux 32:        Not Checked
... This IBISCHK7 executable supports Windows 32 bit only
```

The example above indicates that models for 64-bit Windows, 64-bit Linux, and 32-bit Linux were present, but were not tested because IBISCHK7 was running on 32-bit Windows. To fully check the model it would be necessary to repeat IBISCHK7 on systems running the other three platforms.

### 3 OUTPUT MESSAGE CATEGORIES

Message categories with their single-letter-categories in parentheses are described below by descending severity. ERROR messages and some INTERNAL ERROR messages indicate a model file that should not be used. Most EDA tools will reject models that produce these messages. Models with WARNING, CAUTION, and NOTE messages should be reviewed manually or graphically to understand if the noted issues are important.

As IBISCHK has evolved, some messages have been promoted to a stronger level and some have been demoted. While the category code has changed, the message number remains the same. The Messages with their single-letter-category in parentheses are described below:

#### **(E) ERROR MESSAGES**

Error messages are issued if there is a documented specification violation based on a syntax rule, a syntax argument violation, or some required combination of keywords, or subparameters and arguments. In some cases an unstated major violation (such as I-V to V-T table mismatch beyond 10%) is deemed an Error, because better matching is expected by proper extraction rules based on IBIS Version 7.0 Section 9 “Notes on Data Derivation Method”.

#### **(B) INTERNAL ERROR (BUG) MESSAGES**

Internal Error messages flag system errors that are not necessarily related to the model data (for example, memory allocation errors), and functional errors that are expected to be rare but are not easily documented by any means other than giving code file name and line number. In some cases the Internal Error messages reveal IBISCHK7 program bugs where the message should have been documented as an Error. We request that suspected program bugs be reported to [ibis-bug@eda.org](mailto:ibis-bug@eda.org).

#### **(W) WARNING MESSAGES**

Warning messages are issued based on expected common practice and expected range of data values. They alert the user that something is likely to be wrong with the IBIS file. Usually no rule stated for these Warnings in the IBIS specification, but the model may contain suspicious data or may have missing subparameters that make it unusable for high-speed signal integrity application in common EDA tools. For example, limits on C\_comp values are checked to warn the model developer about excessively high values (such that might have occurred if the modeler incorrectly entered 1F instead of 1nF).

#### **(C) CAUTION MESSAGES**

Caution messages require the –caution flag and are issued where even a Warning message can be incorrect for some cases or where a problem has no impact on simulation and a Warning message would cause many Warnings to appear in older models. For example, the [Ramp] dV values can now be checked for validity, but a flawed dV entry should have no impact on simulation. Older models developed without a dV check (prior to IBISCHK5) could exhibit many failures. Also, in some rare I/O models, Vmeas can fall outside of the Vinh and Vinl. For this case, a Caution message is issued to alert the modeler of a possible data entry mistake.

#### **(N) NOTE MESSAGES**

Note messages are also cautionary, but no option flag is required to produce them. So far, Note messages are used only for cases where I-V data contains non-monotonic data points. Monotonic data for I-V tables is not required in the IBIS Specification. However, it is very useful to know if any of the I-V data is non-monotonic, or if combined I-V tables (where all clamp tables are included) are monotonic. Combined tables with non-monotonic points might cause simulation

problems in some EDA tools. Sometimes there is no impact, especially if some of the detected non-monotonic points are very small (numerical noise) and in regions that are outside the normal simulation region. Inspecting or graphically viewing the tables is advised. In earlier versions of IBISCHK, the non-monotonic I-V reports were issued as Warnings. This was objectionable because some model vendors and users require having zero Errors and Warnings.

### **UNUSED MESSAGES**

Unused messages are old messages that still exist in “dead” code and should never be encountered due to subsequent code changes. The messages are retained for historical source code documentation and also for the cases where they might show up when using earlier versions of IBISCHK.

## 4 MESSAGE LISTING BY CODES

Message Codes along with their Symbols and Messages issued by IBISCHK7 are shown in the next sub-sections below. Each message has a shaded and unshaded row and the following columns:

1. **Code** – In the shaded row the alphanumeric Code consisting of a <single-letter-category><four-digit-number> (for example “E0102”) is given. Alphanumeric Codes are issued by IBISCHK7 when the **–numbered** option is used and the documented problem is encountered.
2. **Symbol** – In the shaded row the message symbol found in the IBISCHK7 source code is given. The Symbol name identifies the source code module in which the message is encoded. For example, MDL\_ERR\_0 can be located in mdl.c. Each distinct Symbol name within a module has a distinct trailing integer (for example MDL\_ERR\_1, MDL\_ERR\_2, etc.). The symbol always has ERR regardless of its actual category.
3. **Message/Comments** – The shaded row shows the printed message with variable portions denoted by labels (where actual names or numerical information is substituted) enclosed in {curly brackets}. The unshaded row of each message contains a comment with further details or clarifications. Some comments still need to be refined and others still need to be filled in. If the message is not used in IBISCHK7, “Unused” is shown in the Comment field.

**The Message Codes are organized and indexed in groups of 500 for easier location. Usually a contiguous set of Codes will correspond to a contiguous set of Symbols. Numerical gaps exist in the message Codes to allow room for new messages. So while the actual Code numbers range from 0050 through 6204, this document contains only 1466 messages codes.**

An example of a message without and with the **–numbered** flag, respectively, is shown below:

```
WARNING - Model BUFFER: GND Clamp : Typical value never becomes zero
W1113 - Model BUFFER: GND Clamp : Typical value never becomes zero
```

The table entry located by its four-digit-number is:

W1113	CRV_ERR_13	{label} {name}: {curveName} : Typical value never becomes zero
-------	------------	--

*A general message indicating that the section with name has a curve whose typical current never becomes zero*

This message exists in crv.c. The {label} is “Model”, the {name} is “BUFFER”, the {curveName} is “Gnd Clamp”, and the message is printed as shown above. An expanded comment is given in the unshaded row.

The message listing follows in the sections below.



## 4.1 MESSAGE CODES 0 TO 499

Code	Symbol	Message/Comments
<b>E0050</b>	MAIN_ERR_0	Couldn't find Version. Exiting <i>The IBIS, EBD or PKG version could not be determined. Possibly empty file.</i>
<b>B0100</b>	MDL_ERR_0	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>UNUSED,The code failed to allocate memory</i>
<b>B0101</b>	MDL_ERR_1	Unable to get IBIS structure {sourceFile} {sourceLinenum} <i>Program data structures are corrupt</i>
<b>E0102</b>	MDL_ERR_2	( line {lineNum} ) - Orphan Model keyword. <i>Model keyword found but not within a Model declaration</i>
<b>E0103</b>	MDL_ERR_3	( line {lineNum} ) - Illegal Digital Port (not allowed in SPICE/IBIS-ISS Ports section) <i>Improper use of Digital port</i>
<b>E0104</b>	MDL_ERR_4	( line {lineNum} ) - D_switch not allowed with (D_drive,D_receive,or D_enable) in Ports/A2D/D2A Section <i>Improper use of D_switch</i>
<b>E0105</b>	MDL_ERR_5	( line {lineNum} ) - {portName} not allowed with D_switch in Ports/A2D/D2A Section <i>(D_receive; D_enable; D_drive) are not allowed with D_switch</i>
<b>E0106</b>	MDL_ERR_6	( line {lineNum} ) - Reserved Digital Port used as analog port <i>Improper use of Reserved Digital port</i>
<b>E0107</b>	MDL_ERR_7	( line {lineNum} ) - Orphan data line with no associated keyword. <i>A Model related data line was found where none was expected</i>
<b>E0108</b>	MDL_ERR_8	( line {lineNum} ) - TTgnd Typical value should be > 0 <i>Improper TTgnd typical value</i>
<b>E0109</b>	MDL_ERR_9	( line {lineNum} ) - TTgnd Min value should be > 0 <i>Improper TTgnd minimum value</i>
<b>E0110</b>	MDL_ERR_10	( line {lineNum} ) - TTgnd Max value should be > 0 <i>Improper TTgnd maximum value</i>
<b>W0111</b>	MDL_ERR_11	TTgnd typ value is not in between Min and Max <i>Improper range for TTgnd</i>
<b>E0112</b>	MDL_ERR_12	( line {lineNum} ) - TTpower Typical value should be > 0 <i>Improper TTpower typical value</i>
<b>E0113</b>	MDL_ERR_13	( line {lineNum} ) - TTpower Min value should be > 0 <i>Improper TTpower minimum value</i>
<b>E0114</b>	MDL_ERR_14	( line {lineNum} ) - TTpower Max value should be > 0 <i>Improper TTPower maximum value</i>
<b>W0115</b>	MDL_ERR_15	TTpower typ value is not in between Min and Max <i>Improper range for TTPower</i>

Code	Symbol	Message/Comments
E0116	MDL_ERR_16	( line {lineNum} ) - [Model Spec] should be specified immediately after all the subparameters of a model and before the other keywords of a model <i>Improper positioning of [Model Spec]</i>
W0117	MDL_ERR_17	( line {lineNum} ) - [Receiver Thresholds] should not be specified for model type {modelType} <i>Receiver thresholds are not allowed for a which is not an Input or I/O model type</i>
E0118	MDL_ERR_18	( line {lineNum} ) - [Add Submodel] should be specified before other keywords for a model <i>UNUSED,Improper positioning of [Ad Submodel]</i>
E0119	MDL_ERR_19	( line {lineNum} ) - {subparam/keyword} Already Defined For Model '{modelName}' <i>A model was already defined for</i>
E0120	MDL_ERR_20	( line {lineNum} ) - [Receiver Thresholds] should be specified immediately after all the subparameters of a model and before the other keywords of a model except [Model Spec] <i>Improper positioning of [Receiver Thresholds] keyword</i>
E0121	MDL_ERR_21	( line {lineNum} ) - Expecting Keyword. Invalid Line <i>An invalid line was found where a keyword was expected</i>
B0122	MDL_ERR_22	Should Not Be Here: {sourceFile}, {sourceLinenum} <i>The code has a bug</i>
E0123	MDL_ERR_23	( line {lineNum} ) - Expecting [End External Model]. Invalid Line,FATAL ERROR <i>Some data other than [End External Model] found</i>
E0124	MDL_ERR_24	( line {lineNum} ) - Expecting [End External Model]. Invalid Line <i>UNUSED,Some data other than [End External Model] found</i>
B0125	MDL_ERR_25	( line {lineNum} ) - Unable to eat keyword : {sourceFile} {sourceLinenum} <i>Error in parsing keyword</i>
E0126	MDL_ERR_26	Unable to Save Model Name <i>UNUSED,The code failed to allocate the required memory</i>
E0127	MDL_ERR_27	'Model' Keyword Missing name <i>The name of the model was not specified with the [Mode] keyword</i>
E0128	MDL_ERR_28	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For Keyword {keyword}: Expecting {numberOfItemsExpected} <i>The keyword should have had items on the keyword line but only number of data items were found</i>
E0129	MDL_ERR_29	( line {lineNum} ) - Model Name Over {maxModelNameChars} Characters Long <i>UNUSED,The model name specified exceeded the max size</i>
E0130	MDL_ERR_30	( line {lineNum} ) - Invalid Model Name ('{reservedWord}'), Reserved Word. <i>A reserved word was used as a model name</i>
E0131	MDL_ERR_31	( line {lineNum} ) - Model Name Previously Defined ('{modelName}')

Code	Symbol	Message/Comments
		<i>A new model is being defined with the same name as a previously defined model.</i>
<b>E0132</b>	MDL_ERR_32	( line {lineNum} ) - Redundant a_port for A2D, n <i>UNUSED,not used</i>
<b>E0133</b>	MDL_ERR_33	( line {lineNum} ) - Digital Port already used in previous A2D for this corner <i>The digital port has already been used in a previous A2D section</i>
<b>B0134</b>	MDL_ERR_34	Unable to Parse {errorString}: {sourceFile} {sourceLinenum} <i>A generic error message which indicates that a parsing error related to</i>
<b>E0135</b>	MDL_ERR_35	( line {lineNum} ) - Duplicate External Language Line <i>The Language subparameter is already defined for an [External Model] section</i>
<b>E0136</b>	MDL_ERR_36	( line {lineNum} ) - Invalid {subparam/keyword} ('{badValue}') (try '{options}') <i>A generic error message which indicates that a wrong value was specified for a particular . The user must specify from one of the</i>
<b>E0137</b>	MDL_ERR_37	Incorrect Number of Line Items ({lineNum}) For {numberOfItemsFound}: Expecting {numberOfItemsExpected} <i>The sub parameter should have had items on the keyword line but only number of data items were found</i>
<b>E0138</b>	MDL_ERR_38	( line {lineNum} ) - Missing Language sub-parameter. Language must be defined <i>The Language subparameter was not defined in an [External Model] section</i>
<b>E0139</b>	MDL_ERR_39	( line {lineNum} ) - Duplicate Typ Corner <i>The Typ corner was specified multiple times in [External Model] Corner sub parameter</i>
<b>E0140</b>	MDL_ERR_40	( line {lineNum} ) - Duplicate Max Corner <i>The Max corner was specified multiple times in [External Model] Corner sub parameter</i>
<b>E0141</b>	MDL_ERR_41	( line {lineNum} ) - Duplicate Min Corner <i>The Min corner was specified multiple times in [External Model] Corner sub parameter</i>
<b>E0142</b>	MDL_ERR_42	( line {lineNum} ) - Wrong number of args in PORT_TYPE <i>Non spec check</i>
<b>E0143</b>	MDL_ERR_43	( line {lineNum} ) - Port_type not allowed <i>Non spec check</i>
<b>E0144</b>	MDL_ERR_44	( line {lineNum} ) - Language must be defined before D2A <i>The Language subparam should be specified before the D_to_A subparam</i>
<b>E0145</b>	MDL_ERR_45	( line {lineNum} ) - D2A only allowed for language = SPICE or language = IBIS-ISS <i>The subparam D2A can only be specified if the Language suparam is SPICE</i>
<b>E0146</b>	MDL_ERR_46	( line {lineNum} ) - No Typ Corner Defined... required <i>The Typ corner was not specified in [External Model] Corner sub parameter</i>
<b>W0147</b>	MDL_ERR_47	( line {lineNum} ) - No Min Corner Defined for D2A. using Typ

Code	Symbol	Message/Comments
		<i>UNUSED,The Min corner was not specified in [External Model] Corner sub parameter</i>
<b>W0148</b>	MDL_ERR_48	( line {lineNum} ) - No Max Corner Defined for D2A. Using Typ <i>UNUSED,The Max corner was not specified in [External Model] Corner sub parameter</i>
<b>E0149</b>	MDL_ERR_49	Invalid {lineNum} Value ('{badValue}') <i>An invalid Corner was specified in the [External Model] section</i>
<b>E0150</b>	MDL_ERR_50	( line {lineNum} ) - trise < 0,[{tRiseval}] <i>The tRise specified on the D_to_A subparam is less than 0</i>
<b>E0151</b>	MDL_ERR_51	( line {lineNum} ) - tfall < 0,[{tFallval}] <i>The tFall specified on the D_to_A subparam is less than 0</i>
<b>E0152</b>	MDL_ERR_52	( line {lineNum} ) - Vlow >= Vhigh [{lowValue} >= {highValue}] <i>The Vlow is greater Vhigh for the D_to_A subparam in an [External Model] section</i>
<b>E0153</b>	MDL_ERR_53	( line {lineNum} ) - Illegal Analog Port {portName},not in port list
<b>E0154</b>	MDL_ERR_54	( line {lineNum} ) - Language must be defined before A2D <i>The Language subparam should be specified before the A_to_D subparam</i>
<b>E0155</b>	MDL_ERR_55	( line {lineNum} ) - NO Typ Corner defined for A2D
<b>W0156</b>	MDL_ERR_56	( line {lineNum} ) - NO Min Corner defined for A2D. Using Typ <i>UNUSED</i>
<b>W0157</b>	MDL_ERR_57	( line {lineNum} ) - NO Max Corner defined for A2D. Using Typ <i>UNUSED</i>
<b>E0158</b>	MDL_ERR_58	( line {lineNum} ) - Invalid {subparam} ('{value}') <i>A Generic error to display that the [Model] subparameter (Enable; IOType; Polarity) has an invalid value . Also used for [Add SubModel] Mode subparameter. This error message is also used incorrectly for invalid [External Model] subparameters.</i>
<b>W0159</b>	MDL_ERR_59	( line {lineNum} ) - Vinl should not be specified for model type {modelType} <i>is not an Input and IO modeltype and hence Vinl cannot be specified</i>
<b>W0160</b>	MDL_ERR_60	( line {lineNum} ) - {subType} should not be specified for model type {modelType} <i>UNUSED,not used</i>
<b>W0161</b>	MDL_ERR_61	( line {lineNum} ) - Vinh should not be specified for model type {modelType} <i>is not an Input and IO modeltype and hence Vinh cannot be specified</i>
<b>E0162</b>	MDL_ERR_62	( line {lineNum} ) - Sub Parameter Cref_diff is valid only for IBIS version >= 4.1 <i>Cref_diff is not valid for IBIS file versions less than 4.1</i>
<b>W0163</b>	MDL_ERR_63	( line {lineNum} ) - Creff_diff should not be specified for model type {modelType} <i>is not an output model type hence Creff_diff is not valid</i>
<b>E0164</b>	MDL_ERR_64	( line {lineNum} ) - Sub Parameter Rref_diff is valid only for IBIS version >= 4.1

Code	Symbol	Message/Comments
		<i>Rref_diff is not valid for IBIS file versions less than 4.1</i>
<b>W0165</b>	MDL_ERR_65	( line {lineNum} ) - Rreff_diff should not be specified for model type {modelType} <i>is not an output model type hence Rref_diff is not valid</i>
<b>W0166</b>	MDL_ERR_66	( line {lineNum} ) - Vmeas should not be specified for model type {modelType} <i>is one of Input; Input_Diff; Input_Ecl; Terminator; Series; Series_switch hence Vmes is not valid</i>
<b>W0167</b>	MDL_ERR_67	( line {lineNum} ) - Cref should not be specified for model type {modelType} <i>is one of Input; Input_Diff; Input_Ecl; Terminator; Series; Series_switch hence Cref is not valid</i>
<b>W0168</b>	MDL_ERR_68	( line {lineNum} ) - Rref should not be specified for model type {modelType} <i>is one of Input; Input_Diff; Input_Ecl; Terminator; Series; Series_switch hence Rref is not valid</i>
<b>W0169</b>	MDL_ERR_69	( line {lineNum} ) - Vref should not be specified for model type {modelType} <i>is one of Input; Input_Diff; Input_Ecl; Terminator; Series; Series_switch hence Vref is not valid</i>
<b>E0170</b>	MDL_ERR_70	( line {lineNum} ) - Sub Parameter C_comp_pullup is valid only for IBIS version >= 4.0 <i>C_comp_pullup is not valid for IBIS file versions less than 4.0</i>
<b>E0171</b>	MDL_ERR_71	( line {lineNum} ) - Sub Parameter C_comp_pulldown is valid only for IBIS version >= 4.0 <i>C_comp_pulldown is not valid for IBIS file versions less than 4.1</i>
<b>E0172</b>	MDL_ERR_72	( line {lineNum} ) - Sub Parameter C_comp_power_clamp is valid only for IBIS version >= 4.0 <i>C_comp_power_clamp is not valid for IBIS file versions less than 4.2</i>
<b>E0173</b>	MDL_ERR_73	( line {lineNum} ) - Sub Parameter C_comp_gnd_clamp is valid only for IBIS version >= 4.0 <i>C_comp_gnd_clamp is not valid for IBIS file versions less than 4.2</i>
<b>E0174</b>	MDL_ERR_74	( line {lineNum} ) - Unknown Line Among Model Data <i>A line was found in the [Model] section wich was not a valid line</i>
<b>E0175</b>	MDL_ERR_75	( line {lineNum} ) - '{subparam}' Subparameter Missing Setting <i>There was no value specified for model subparameter</i>
<b>E0176</b>	MDL_ERR_76	( line {lineNum} ) - Invalid {subparam} Line <i>The line corresponding to mdeol subparameter has an invalid syntax</i>
<b>W0177</b>	MDL_ERR_77	( line {lineNum} ) - Model {modelName}: {subparam} min value is not the smallest value listed <i>Unused</i>
<b>E0178</b>	MDL_ERR_78	( line {lineNum} ) - 'NA' Not Allowed For Typical Value <i>Unused</i>
<b>W0179</b>	MDL_ERR_79	Model {modelName}: {subparam} max value is not the largest value listed

Code	Symbol	Message/Comments
		<i>Unused</i>
<b>E0180</b>	MDL_ERR_80	Model '{modelName}': {Model_type} Not Defined <i>The Model Type is not defined for Model</i>
<b>E0181</b>	MDL_ERR_81	Model {modelName}: One of C_comp,C_comp_pullup,C_comp_pulldown,C_comp_power_clamp,C_comp_gnd_clamp must be defined <i>A mandatory sub-parameter is missing for</i>
<b>C0182</b>	MDL_ERR_82	Vmeas is <= Vinl for model {modelName} <i>Vmeas must be greater than Vinl but is not so for</i>
<b>C0183</b>	MDL_ERR_83	Vmeas is >= Vinh for model {modelName} <i>Vmeas must be less than Vinh but is not so for</i>
<b>W0184</b>	MDL_ERR_84	Model '{modelName}': Model_type '{modelType}' must have {subparam} set <i>A generic message indicating that for Model which is of type the Vinl or Vinh parameter should be set</i>
<b>E0185</b>	MDL_ERR_85	Model '{modelName}': {subparam} is set when Model_type is not Terminator <i>Model is not Terminator type; but corresponding to Rgnd; Rpower; Rac; or Cac has been defined</i>
<b>E0186</b>	MDL_ERR_86	Model '{modelName}': Rac must be defined when Cac is <i>For Model which is of type Terminator; Cac is defined but Rac is not</i>
<b>E0187</b>	MDL_ERR_87	Model '{modelName}': Cac must be defined when Rac is <i>For Model which is of type Terminator; Rac is defined but Cac is not</i>
<b>E0188</b>	MDL_ERR_88	Model '{modelName}': {clampReference} Required when No Voltage Range is Specified <i>For model ; the [Voltage Range] is not specified; so the Reference must be specified (Pullup_reference; Pulldown_reference; Power_clamp_reference; Gnd_clamp_reference are all required if [Voltage Range] is not specified)</i>
<b>E0189</b>	MDL_ERR_89	Model '{modelName}': Ramp Not Allowed for Series and Series_switch <i>Model is of type Series or Series_switch and hence the [Ramp] keyword is not allowed</i>
<b>E0190</b>	MDL_ERR_90	Model '{modelName}': Ramp Not Defined <i>[Ramp] needs to be defined for all model types except Input types; Series; Series_switch and Terminator and was not defined for Model</i>
<b>W0191</b>	MDL_ERR_91	Model '{modelName}': {keyword} is not allowed when Model_type is Series <i>Any of Pullup; Pulldown; POWER_Clamp; GND_Clamp; Rising Waveform; Falling Waveform; TTgnd; TTpower; Driver Schedule; Model Spec should not be defined for model type Series but it it was defined for</i>
<b>W0192</b>	MDL_ERR_92	Model '{modelName}': {keyword} is not allowed when Model_type is Series_switch <i>Any of Pullup; Pulldown; POWER_Clamp; GND_Clamp; Rising Waveform; Falling Waveform; TTgnd; TTpower; Driver Schedule; Model Spec should not be defined for model type Series_switch ; but it was defined for</i>
<b>E0193</b>	MDL_ERR_93	Model {modelName} is of type Series_switch. [On] keyword is required

Code	Symbol	Message/Comments
		<i>An [Off] section was not defined for Model which is of type Series_switch</i>
<b>E0194</b>	MDL_ERR_94	Model {modelName} is of type Series_switch. [Off] keyword is required <i>An [On] section was not defined for Model which is of type Series_switch</i>
<b>E0195</b>	MDL_ERR_95	Model {modelName}: Receiver Thresholds use POWER Clamp Reference which is not defined in this Model <i>The reference_supply subparameter of Receiver Threshold was set to POWER_Clamp_Ref but there is no [POWER Clamp Reference] section specified for Model</i>
<b>E0196</b>	MDL_ERR_96	Model {modelName}: Receiver Thresholds use GND Clamp Reference which is not defined in this Model <i>The reference_supply subparameter of Receiver Threshold was set to GND_Clamp_Ref but there is no [GND Clamp Reference] section specified for Model</i>
<b>E0197</b>	MDL_ERR_97	Model {modelName}: Receiver Thresholds use Pullup Reference which is not defined in this Model <i>The reference_supply subparameter of Receiver Threshold was set to Pullup_Ref but there is no [Pullup Reference] section specified for Model</i>
<b>E0198</b>	MDL_ERR_98	Model {modelName}: Receiver Thresholds use Pulldown Reference which is not defined in this Model <i>The reference_supply subparameter of Receiver Threshold was set to Pulldown_Ref but there is no [Pulldown Reference] section specified for Model</i>
<b>E0199</b>	MDL_ERR_99	Model {modelName}: Receiver Thresholds use External Reference which is not defined in this Model <i>The reference_supply subparameter of Receiver Threshold was set to Ext_Ref but there is no [External Reference] section specified for Model</i>
<b>W0200</b>	MDL_ERR_100	Model '{modelName}': Vmeas,Vref and Rref timing test load parameters should be specified <i>Since is Open_drain or Open_sink or ECL type; one of Vmeas or Vref or Rref is mandatory</i>
<b>W0201</b>	MDL_ERR_101	Model '{modelName}': Vmeas timing test load parameter should be specified <i>Since is an I/O type or Output type or Tri-state type; Vmeas is mandatory</i>
<b>W0202</b>	MDL_ERR_102	Model '{modelName}': Rref_diff or Cref_diff timing test load parameters should be specified <i>Since is of type IO_Diff; Output_Diff or Tri-state_Diff; Rref_diff or Cref_diff are mandatory</i>
<b>E0203</b>	MDL_ERR_103	( line {lineNum} ) - External Model language wrong or not specified <i>UNUSED</i>
<b>E0204</b>	MDL_ERR_104	( line {lineNum} ) - Model '{modelName}' is of type Series_switch. {subparam} should be defined before the [On] and [Off] sections <i>Model is of type Series_switch so corresponding to one of the keywords Voltage Range; Temperature Change; Pullup Reference; Pulldown Reference; GND Clamp Reference; POWER Clamp Reference should be defined before the [On] or [Off] keywords</i>

Code	Symbol	Message/Comments
E0205	MDL_ERR_105	( line {lineNum} ) - Keyword is valid only for Series_switch models <i>[On] and [Off] keywords are only valid for Series_switch models</i>
E0206	MDL_ERR_106	( line {lineNum} ) - Keyword is valid only for Series and Series_switch models <i>[On] keyword is only valid for Series and Series_switch models</i>
E0207	MDL_ERR_107	( line {lineNum} ) - No preceding [On] or [Off] keyword found. Assuming [On] <i>A keyword associated with Series_switch models should be preceded with an [On] or [Off] keyword.</i>
E0208	MDL_ERR_108	( line {lineNum} ) - Add sub model: Already Defined for this model <i>Only a single [Add Submodel] section is allowed in a model</i>
E0209	MDL_ERR_109	( line {lineNum} ) - Add Submodel is not allowed for Series or Series_switch models <i>[Add Submodel] section is not allowed for models which have type Series or Series_switch</i>
E0210	MDL_ERR_110	( line {lineNum} ) - Invalid Add Submodel Line. Expecting two items only <i>More than 2 items were defined on the [Add Submodel] keyword line</i>
E0211	MDL_ERR_111	( line {lineNum} ) - Add Submodel Name not found <i>The Add Submodel line did not have a submodel name specified</i>
E0212	MDL_ERR_112	( line {lineNum} ) - Add Submodel Name Over {maxSubModelChars} Characters Long <i>A submodel name cannot be more than ; ie; 40</i>
E0213	MDL_ERR_113	( line {lineNum} ) - Invalid Submodel Name ('{submodelName}'), Reserved Word. <i>A reserved word was used as a sub model name</i>
E0214	MDL_ERR_114	( line {lineNum} ) - Duplicate Add Submodel Name {submodelName} <i>UNUSED,Unused</i>
E0215	MDL_ERR_115	( line {lineNum} ) - Add Submodel Mode not found <i>The mode 'Driving' or 'Non-Driving' was not specified for an [Add SubModel]</i>
E0216	MDL_ERR_116	( line {lineNum} ) - Driving mode is not valid for input model types <i>If a Model is of type Input; then the added Submodel cannot be in Driving mode</i>
E0217	MDL_ERR_117	( line {lineNum} ) - Non-Driving mode is not valid for output model types <i>If a Model is of type Output; the the added Submodel cannot be in Non-driving mode</i>
E0218	MDL_ERR_118	Could not find definition for Submodel {submodelName} of Model {modelName} <i>The model has an added submodel but the submodel definition was not found</i>
W0219	MDL_ERR_119	Model {modelName} not referenced in any [Pin],[Model Selector], <i>The Model has not been referenced anywhere in a [Pin] or [Model Selector] section</i>
W0220	MDL_ERR_120	Submodel {submodelName} is not referenced by any model [Add Submodel] keyword <i>The SubModel has not been referenced by any [Add Submodel] section in any model</i>
E0221	MDL_ERR_121	( line {lineNum} ) - No Paramter list for model {modelName}n <i>(Though this error message is referenced in code; that code is never invoked)</i>



Code	Symbol	Message/Comments
E0222	MDL_ERR_122	[External Model] type does not contain reserved port REQUIRED <i>A Reserved Port reference is missing in an External Model of type extModelType</i>
E0223	MDL_ERR_123	[External Model] type contains reserved port ILLEGAL <i>Illegal Reserved Port reference in an External Model of type extModelType</i>
E0224	MDL_ERR_124	Illegal type or program bugn
E0225	MDL_ERR_125	[EXTERNAL CIRCUIT] : corner Port : used as digital and analog
E0226	MDL_ERR_126	MODEL Corner line: {lineNum} has A2D not matching TYP A2D:
E0227	MDL_ERR_127	MODEL Corner line: {lineNum} has D2A not matching TYP D2A:
W0228	MDL_ERR_128	MODEL Corner has no A2d matching TYP: .. adding by default <i>UNUSED</i>
W0229	MDL_ERR_129	MODEL Corner has no D2A matching TYP: .. adding by default <i>UNUSED,not used</i>
E0230	MDL_ERR_130	( line {lineNum} ) - [End_External_Model] with no corresponding [External Model]
E0231	MDL_ERR_131	( line {lineNum} ) - No Typ Corner Defined for [External Model](required) <i>The Typ corner was not specified in [External Model] Corner sub parameter</i>
W0232	MDL_ERR_132	External Model for has suspiciously few PORTS ({numPorts})
E0233	MDL_ERR_133	( line {lineNum} ) - No A2D or D2A for Typ corner in model {modelName} <i>UNUSED,not used</i>
W0234	MDL_ERR_134	( line {lineNum} ) - No A2D or D2A for Min corner in model {modelName},will use Typ corner <i>UNUSED,not used</i>
W0235	MDL_ERR_135	( line {lineNum} ) - No A2D or D2A for Max corner in model {modelName},will use Typ Corner <i>UNUSED,not used</i>
E0236	MDL_ERR_136	( line {lineNum} ) - Illegal (not specified and not reserved) port name in <i>Port name can't be used for [External Model] or [External Circuit] type.</i>
E0237	MDL_ERR_137	( line {lineNum} ) - Reserved Analog Port used as digital port
E0238	MDL_ERR_138	( line {lineNum} ) - Redundant port1 in D2A <i>UNUSED,not used</i>

Code	Symbol	Message/Comments
E0239	MDL_ERR_139	( line {lineNum} ) - Illegal Digital Port in D2A
E0240	MDL_ERR_140	( line {lineNum} ) - Illegal Digital Port in A2D (must use D_receive)
E0241	MDL_ERR_141	( line {lineNum} ) - Illegal Digital Port in A2D (use D_receive or a User Defined)
E0242	MDL_ERR_142	( line {lineNum} ) - Vlow > Vhigh [{Vlow} >= {Vhigh}]
E0243	MDL_ERR_143	( line {lineNum} ) - PORT2 must be reserved word analog port <i>UNUSED</i>
E0244	MDL_ERR_144	( line {lineNum} ) - [End External Circuit] with no corresponding [External Circuit] <i>An [End External Circuit] keyword was found with no associated [External Circuit] keyword</i>
W0245	MDL_ERR_145	[External Circuit] has suspiciously few PORTS ({portCount})
W0246	MDL_ERR_146	( line {lineNum} ) - No A2D or D2A for Typ corner in Circuit {cktName} <i>UNUSED</i>
W0247	MDL_ERR_147	( line {lineNum} ) - No A2D or D2A for Min corner in Circuit {cktName},will use Typ corner <i>UNUSED</i>
W0248	MDL_ERR_148	( line {lineNum} ) - No A2D or D2A for Max corner in circuit {cktName},will use Typ Corner <i>UNUSED</i>
E0249	MDL_ERR_149	( line {lineNum} ) - Orphan External Cucuit keyword.
E0250	MDL_ERR_150	Unable to Save External Circuit Name <i>The code failed to allocate the required memory</i>
E0251	MDL_ERR_151	( line {lineNum} ) - 'External Circuit' Keyword Missing name <i>There was no name specified on the [External Circuit] keyword line</i>
E0252	MDL_ERR_152	( line {lineNum} ) - External Circuit Name Over {maxLength} Characters Long <i>UNUSED,The nme of the external circuit is greater than (40) characters</i>
E0253	MDL_ERR_153	( line {lineNum} ) - Invalid External Circuit Name ('{cktName}'), Reserved Word. <i>The name specified for an external circuit is invalid as it is a reserved word</i>
E0254	MDL_ERR_154	( line {lineNum} ) - External Circuit Name Previously Defined ('{cktName}') <i>An external circuit with name is already defined</i>
E0255	MDL_ERR_155	External Model D2A Line Illegal connection,2 analog reference/driver ports

Code	Symbol	Message/Comments
E0256	MDL_ERR_156	( line {lineNum} ) - A2D only allowed for language = SPICE or language = IBIS-ISS
E0257	MDL_ERR_157	( line {lineNum} ) - [Composite Current] should be preceded by a [Rising Waveform] or [Falling Waveform] section  <i>A [Composite Current] section in a model should be immediately be preceded by a [Rising Waveform] or [Falling Waveform] section</i>
E0258	MDL_ERR_158	( line {lineNum} ) - No previous Rising or Falling Waveform found with which to associate the Composite Current  <i>A [Composite Current] section in a model was preceded by a [Rising Waveform] or [Falling Waveform] section but due to some error the [Rising Waveform] or [Falling Waveform] section was not parsed so the parser is unable to associate a Rising or Falling waveform with the Composite current</i>
E0259	MDL_ERR_159	( line {lineNum} ) - Missing [End Algorithmic Model] keyword  <i>An [Algorithmic Model] section was not terminate with an [End Algorithmic Model] keyword</i>
E0260	MDL_ERR_160	( line {lineNum} ) - [End Emi Model] keyword expected  <i>The [End Emi Model] keyword was expected to finish off a previously started [Begin Emi Model] section</i>
E0261	MDL_ERR_161	( line {lineNum} ) - Orphan [End Algorithmic Model] keyword found  <i>An [End Algorithmic Model] keyword was found without an associated [Algorithmic Model] keyword</i>
E0262	MDL_ERR_162	( line {lineNum} ) - Orphan [End EMI Model] keyword found  <i>An [End EMI Model] keyword was found without an associated [Begin EMI Model] keyword</i>
B0263	MDL_ERR_163	( line {lineNum} ) - Composite Current is already associated with the last Waveform  <i>More than one [Composite Current] section has been defined for Rising or Falling waveform</i>
E0264	MDL_ERR_164	( line {lineNum} ) - Invalid {subparam} assignment. Too many tokens found  <i>UNUSED,The [External Model] or [External Circuit] sub parameter (Parameters or Converter Parameters) has an invalid assignment syntax</i>
E0265	MDL_ERR_165	( line {lineNum} ) - Invalid {subparam} assignment. Each assignment should be defined on a separate line  <i>UNUSED,There can only be a single [External Model] or [External Circuit] sub parameter (Parameters or Converter Parameters) assignment on one line</i>
E0266	MDL_ERR_166	( line {lineNum} ) - Converter Parameter {paramname} is not Numeric  <i>UNUSED,The Converter Parameter was not a number</i>
E0267	MDL_ERR_167	( line {lineNum} ) - The parameter {paramname} reference '{paramreference}' has mismatched parenthesis  <i>UNUSED,The Parameter or Converter Parameter uses a parameter file reference which is syntactically not correct ( has mismatched parenthesis)</i>

Code	Symbol	Message/Comments
E0268	MDL_ERR_168	( line {lineNum} ) - Invalid D2A polarity '{polarity}': Can only be 'Inverting' or 'Non-Inverting' <i>UNUSED,The polarity specified on the D_to_A line is illegal</i>
E0269	MDL_ERR_169	( line {lineNum} ) - The D2A d_port should be 'D_drive' when polarity is specified <i>UNUSED,The polarity argument may only be used with D_to_A converters which are connected to the d_port name D_drive.</i>
E0270	MDL_ERR_170	Mdl '{modename}' D2A corner '{corner}': When polarity is specified, there should two D2A defined with opposite polarities <i>UNUSED,For the Model ; in the D_to_A associated with corner ; since the the polarity argument is used; two D_to_A converter lines are required; one defined as Non-Inverting and another defined as Inverting.</i>
E0271	MDL_ERR_171	( line {lineNum} ) - Invalid Converter Parameter line. Should contain a single parameter assignment <i>UNUSED,The Converter Parameter line should consist of only a single parameter assignment</i>
E0272	MDL_ERR_172	( line {lineNum} ) - Parameters are not allowed for language=SPICE <i>UNUSED,If language is specified as SPICE in an [External Model] then the sub-parameter Parameters cannot be specified</i>
E0273	MDL_ERR_173	Model {modelname} has [Initial Delay] sub parameter {subparam} specified but it has no {section} <i>Model has [Initial Delay] sub-parametr (V-T, I-T) specified but the corressponding [Rising/Falling Waveform] or [Composite Current] is missing</i>
W0274	MDL_ERR_174	Vinl > Vinh for model {modelname} <i>Vinl is greater than Vinh in</i>
E0275	MDL_ERR_175	{keyword} {modelname} : Port '{portname}' is not a reserved port name and is not used a D2A or A2D port <i>The model associated with keyword [External Model] or [External Circuit] has a port which is not defined as a D2A or A2D port</i>
E0276	MDL_ERR_176	[End External Circuit] keyword expected. <i>Missing [End External Circuit] keyword</i>
E0277	MDL_ERR_177	( line {lineNum} ) - [External Model] {corner} Corner file {filename} not found <i>A file specified with an external model corner was not found</i>

## 4.2 MESSAGE CODES 500 TO 999

Code	Symbol	Message/Comments
<b>B0500</b>	CMPNT_ERR_0	{sourceFile}:{sourceLinenum}:Unable to get IBIS. <i>UNUSED,Program data structures are corrupt in program file</i>
<b>E0501</b>	CMPNT_ERR_1	( line {lineNum} ) - Orphan Component keyword. <i>Component keyword found but not within a Component declaration</i>
<b>B0502</b>	CMPNT_ERR_2	( line {lineNum} ) - Orphan data line keyword. <i>A non keyword line was found when no Component keyword section was active</i>
<b>E0503</b>	CMPNT_ERR_3	( line {lineNum} ) - Unexpected End Alternate Package Models keyword <i>Found [End Alternate Package Modes] where it was not expected</i>
<b>E0504</b>	CMPNT_ERR_4	( line {lineNum} ) - Expecting End Alternate Package Models keyword <i>Did not find [End Alternate Package Models] keyword where it was expected</i>
<b>B0505</b>	CMPNT_ERR_5	{fileName}:{lineNum}:Illegal keyword passed to cmpnt. <i>Program data structures are corrupt in program file</i>
<b>E0506</b>	CMPNT_ERR_6	( line {lineNum} ) - Data on this line appears to be for the Component keyword,which does not allow data on subsequent lines. <i>There should be no additional lines associated with the [Component] keyword</i>
<b>E0507</b>	CMPNT_ERR_7	( line {lineNum} ) - Data on this line appears to be for the Manufacturer keyword,which does not allow data on subsequent lines. <i>There should be no additional lines associated with the [Manufacturer] keyword</i>
<b>E0508</b>	CMPNT_ERR_8	( line {lineNum} ) - Data on this line appears to be for the Package Model keyword,which does not allow data on subsequent lines. <i>There should be no additional lines associated with the [Package Model] keyword</i>
<b>E0509</b>	CMPNT_ERR_9	(line {lineNum}) - Orphan data line with no associated keyword <i>Orphan Data Line (not within a keyword)</i>
<b>B0510</b>	CMPNT_ERR_10	{fileName}:{lineNum}:Illegal line type passed to cmpnt. <i>Program data structures are corrupt in program file</i>
<b>E0511</b>	CMPNT_ERR_11	Component '{compName}' is duplicated within the .ibs file. <i>UNUSED,The same is specified with different [Component] keywords</i>
<b>E0512</b>	CMPNT_ERR_12	( line {lineNum} ) - Unable to create new CMPNT. <i>Memory allocation for a new Component failed</i>
<b>W0513</b>	CMPNT_ERR_13	( line {lineNum} ) - Component '{compName}' contains a blank character. <i>Blank characters are illegal in a ( ; ; ; ; and )</i>
<b>E0514</b>	CMPNT_ERR_14	Required keyword 'Manufacturer' not defined for Component '{compName}'. <i>UNUSED,The [Manufacturer] keyword was not defined for Component</i>
<b>B0515</b>	CMPNT_ERR_15	{sourceFile}:{sourceLinenum}:Unable to get IBIS? <i>Program data structures are corrupt in program file</i>
<b>E0516</b>	CMPNT_ERR_16	Unable to find Package Model '{pkgName}' for Component '{compName}'

Code	Symbol	Message/Comments
		<i>UNUSED,The [Package Model] defined for the Component cannot be found in the .ibs file or in an associated .pkg file</i>
<b>E0517</b>	CMPNT_ERR_17	( line {lineNum} ) - Duplicate Package keyword. <i>The [Package] section should be defined only once within a component</i>
<b>E0518</b>	CMPNT_ERR_18	( line {lineNum} ) - Unknown data after Package keyword. <i>The [Package] keyword line should have no data following the keyword.</i>
<b>E0519</b>	CMPNT_ERR_19	Keyword 'Package' not defined for Component '{compName}'. <i>UNUSED,The [Package] section was not defined for Component</i>
<b>E0520</b>	CMPNT_ERR_20	( line {lineNum} ) - Duplicate [Alternate Package Models] keyword. <i>The [Alternate Package Models] section should be defined only once within a component</i>
<b>E0521</b>	CMPNT_ERR_21	( line {lineNum} ) - Unknown data after [Alternate Package Models] keyword. <i>The [Alternate Package Models] keyword line should have no data following the keyword.</i>
<b>E0522</b>	CMPNT_ERR_22	( line {lineNum} ) - Unknown data after {keyword} keyword. {data} <i>The keyword line should have no data following the keyword.</i>
<b>E0523</b>	CMPNT_ERR_23	( line {lineNum} ) - Duplicate Pin keyword found. <i>The [Pin] section should be defined at most once within a component</i>
<b>E0524</b>	CMPNT_ERR_24	Unable to find Pin keyword data for Component '{compName}'. <i>UNUSED,No [Pin] section was defined for Component</i>
<b>E0525</b>	CMPNT_ERR_25	( line {lineNum} ) - Duplicate Pin_Mapping keyword found. <i>The [Pin Mapping] section should be defined at most once within a component</i>
<b>E0526</b>	CMPNT_ERR_26	( line {lineNum} ) - [Diff Pin] keyword column count must be 3,5 or 6 found {numColumns} columns. <i>UNUSED,A [Diff Pin] section should have at 3 or 5 or 6 columns but the parser found</i>
<b>E0527</b>	CMPNT_ERR_27	( line {lineNum} ) - Duplicate Diff_Pin keyword found. <i>A [Diff Pin] section should be defined at most once within a component</i>
<b>E0528</b>	CMPNT_ERR_28	( line {lineNum} ) - Unable to find column headers after {keyword} keyword. <i>If is one of Pin; Pin Mapping; Diff Pin or Series Pin Mapping then a set of column headers is expected but were not found</i>
<b>E0529</b>	CMPNT_ERR_29	( line {lineNum} ) - '{columnName}' column header not found or out of order. <i>A associated with a Pin; Pin Mapping; Diff Pin or Series Pin Mapping keyword was not found or found in the incorrect position</i>
<b>E0530</b>	CMPNT_ERR_30	( line {lineNum} ) - Unknown column header '{columnName}' or out of order. <i>A associated with a Pin; Pin Mapping; Diff Pin or Series Pin Mapping keyword was not recognized or found in an incorrect position</i>
<b>E0531</b>	CMPNT_ERR_31	( line {lineNum} ) - Duplicate column header '{columnName}' .

Code	Symbol	Message/Comments
		<i>A associated with a Pin; Pin Mapping; Diff Pin or Series Pin Mapping keyword was specified more than once</i>
<b>E0532</b>	CMPNT_ERR_32	( line {lineNum} ) - {keyword} keyword column count must be {minHeaders} or {maxHeaders},found {actualHeaders} columns.  <i>UNUSED,A [Pin] section should have 3-6 column headers; a [Diff Pin] section should have 4-6 colum headers; a [Pin Mapping] section should have 3-5 column headers and a [Series Pin Mapping] section should have 3-4 colum headers. However number of column headers were found for the</i>
<b>E0533</b>	CMPNT_ERR_33	( line {lineNum} ) - Unable to add data for {keyword} keyword.  <i>There was an error trying to create the data structures associated with keyword</i>
<b>B0534</b>	CMPNT_ERR_34	Unable to Parse {text}: {sourceFile} {sourceLinenum}  <i>A generic error message which indicates that a parsing error related to</i>
<b>E0535</b>	CMPNT_ERR_35	( line {lineNum} ) - Unknown Line after Component Description  <i>A Timing_location or SI_location line was expected</i>
<b>B0536</b>	CMPNT_ERR_36	Should Not Be Here: {sourceFile},{sourceLinenum}  <i>The code has a bug</i>
<b>E0537</b>	CMPNT_ERR_37	( line {lineNum} ) - {subparam} Already Defined For Component '{compName}'  <i>The subparameter (SI_location or Timing_location) was already defined for component</i>
<b>E0538</b>	CMPNT_ERR_38	( line {lineNum} ) - '{subparam}' Subparameter Missing Setting  <i>The subparameter (SI_location or Timing_location) did not have a value associated with it</i>
<b>E0539</b>	CMPNT_ERR_39	( line {lineNum} ) - Incorrect Number of Line Items ( {numberOfItemsFound} ) For {paramName}: Expecting {numberOfItemsExpected}  <i>The sub parameter should have had items on the keyword line but only number of data items were found</i>
<b>E0540</b>	CMPNT_ERR_40	( line {lineNum} ) - Invalid {subparam/keyword} ('{badValue}') (try '{options}')  <i>A generic error message which indicates that a wrong value was specified for a particular . The user must specify from one of the</i>
<b>E0541</b>	CMPNT_ERR_41	( line {lineNum} ) - Invalid {subparam} ('{badValue}')  <i>The subparameter (Si_location or Timing_location) has an invalid value specified. Should be 'Die' or 'Pin'.</i>
<b>E0542</b>	CMPNT_ERR_42	( line {lineNum} ) - Duplicate Series_Pin_Mapping keyword found.  <i>A [Series Pin Mapping] section should be defined at most once in a component</i>
<b>E0543</b>	CMPNT_ERR_43	( line {lineNum} ) - Unknown column header after 'function_table_group'  <i>An unknown columnHeader was found after the 'function_table_group' header on the [Series Pin Mapping] keyword line</i>
<b>E0544</b>	CMPNT_ERR_44	Model {modelName} has Model_type {modelType} (true differential) and requires an [External Model].  <i>A Diff model type should have an External Model defined</i>

Code	Symbol	Message/Comments
E0545	CMPNT_ERR_45	Component pin model type using [External Model] without corresponding [Diff_Pin]
E0546	CMPNT_ERR_46	( line {lineNum} ) - Duplicate [Series_Switch_Groups] keyword found. <i>A [Series Switch Groups] section should be defined at most once in a component</i>
E0547	CMPNT_ERR_47	No Components defined. <i>No components were defined</i>
E0548	CMPNT_ERR_48	( line {lineNum} ) - Duplicate Node Declaration keyword found. <i>A [Node Declaration] section is already defined for the component</i>
E0549	CMPNT_ERR_49	( line {lineNum} ) - Unable to create new NODE LIST. <i>The code failed to allocate the required memory</i>
E0550	CMPNT_ERR_50	( line {lineNum} ) - Unable to create new {keyword} (malloc). <i>Memory allocation for a new keyword failed</i>
U0551	CMPNT_ERR_51	[End Emi Component] Keyword expected <i>UNUSED,An [End EMI Component] was expected to terminate an existing [Begin EMI Component] block</i>
U0552	CMPNT_ERR_52	Unexpected [End Emi Component] Keyword <i>UNUSED,An [End EMI Component] keyword was found without a preceding [Begin EMI Component] keyword</i>
E0553	CMPNT_ERR_53	( line {lineNum} ) - Unexpected Keyword in a [Component EMI] block <i>The only keywords allowed within a [Begin EMI Component] block are [Pin EMI] and [Pin Domain EMI] but an unexpected keyword was found</i>
E0554	CMPNT_ERR_54	( line {lineNum} ) - Duplicate {keyword} keyword found. <i>They keyword was repeated</i>
E0555	CMPNT_ERR_55	( line {lineNum} ) - {keyword} keyword expected. <i>A particular keyword was expected</i>
E0556	CMPNT_ERR_56	( line {lineNum} ) - {startkeyword} with no corresponding {endkeyword} <i>The start and end keyword pairs were not matched</i>
E0557	CMPNT_ERR_57	[End Node Declarations] with no corresponding [Node Declarations] <i>Unexpected [End Node Declarations] keyword</i>
W0557	CMPNT_ERR_57	( line {lineNum} ) - {reserved}: Reserved word used for {keyword} <i>A reserved word was used as a Keyword name</i>
E0558	CMPNT_ERR_58	( line {lineNum} ) - {keyword} Name Previously Defined '{keywordname}' <i>A keyword name was already used earlier</i>
E0559	CMPNT_ERR_59	( line {lineNum} ) - {keyword}: Missing Name <i>A keyword name is missing</i>
E0600	PIN_ERR_0	( line {lineNum} ) - Unable to add the line of Pin data. <i>Memory allocation failed when trying to create the data structures for a Pin</i>



Code	Symbol	Message/Comments
<b>E0601</b>	PIN_ERR_1	( line {lineNum} ) - Pin not found. <i>A Pin was not specified in a data line in the [Pin] Section</i>
<b>E0602</b>	PIN_ERR_2	( line {lineNum} ) - Signal name not found. <i>The signal_name was not specified in a data line in the [Pin] section</i>
<b>E0603</b>	PIN_ERR_3	( line {lineNum} ) - Model name not found. <i>The model_name was not specified in a data line in the [Pin] section</i>
<b>E0604</b>	PIN_ERR_4	( line {lineNum} ) - Each line of Pin data must contain either 3 or 6 columns. <i>A data line in the [Pin] section should have either 3 (if the package parameters are not specified) or 6 (if the package parameters are specified) values</i>
<b>E0605</b>	PIN_ERR_5	( line {lineNum} ) - When using 6 columns, the headers R_pin,L_pin,and C_pin must be listed. <i>If package parameters are specified for a pin in the [Pin] section; then the headers R_pin; L_pin and C_pin must be specified on the [Pin] keyword line</i>
<b>E0606</b>	PIN_ERR_6	( line {lineNum} ) - Duplicate Pin '{pinName}'. <i>The same was defined more than once in the [Pin] section</i>
<b>B0607</b>	PIN_ERR_7	{sourceFile}:{sourceLinenum}:Unable to get IBIS? <i>Program data structures are corrupt in program file</i>
<b>E0608</b>	PIN_ERR_8	Component '{compName}': Model '{modelName}' for Pin '{pinName}' not defined. <i>The model associated with pin for component was not defined elsewhere in the file</i>
<b>C0609</b>	PIN_ERR_9	Pin {pinName} is not referenced as a [Diff Pin] though the associated Model Selector {modelSelectorName} is referenced by a [Diff Pin] <i>The pin is associated with a model selector which was found to be associated with a differential model but the pin is not defined as a differential pin</i>
<b>E0610</b>	PIN_ERR_10	Component '{compName}': Pin '{pinName}': Model '{modelName}': model type for a Pin cannot be Series or Series_switch. <i>UNUSED,The model associated with pin for component is of type Series or Series_switch( which is not allowed)</i>
<b>C0611</b>	PIN_ERR_11	Pin {pinName} is not referenced as a [Diff Pin] though the associated Model {modelName} is referenced by a [Diff Pin] <i>The pin is associated with a model which was found to be differential but the pin is not defined as a differential pin</i>
<b>E0612</b>	PIN_ERR_12	Component '{compName}': Pin '{pinName}' not referenced in Pin Mappings. <i>The Pin of Component is not referenced in the component's [Pin Mapping] section</i>
<b>E0613</b>	PIN_ERR_13	Pin '{pinName}' found in Package_Model '{pkgName}' Pin_Numbers list not found in Component '{compName}' Pin list. <i>The Pin was referenced in the [Pin Numbers] section of the package model but is not defined in the [Pin] section of the associated component</i>
<b>E0614</b>	PIN_ERR_14	( line {lineNum} ) - Unable to allocate new PIN. <i>Memory allocation for a new pin failed while trying to parse the [Pin] section</i>

Code	Symbol	Message/Comments
<b>E0615</b>	PIN_ERR_15	Pin {pinName} referenced in the [Merged Pins] section of Package {pkgName} is not defined as POWER or GND in Component {compName} Pin list  <i>The Pin is referenced in the [Merged Pins] section of Package pkgName of Component but is not defined as a POWER or GND pin in the [Pins] section of the component</i>
<b>E0616</b>	PIN_ERR_16	Pin {pinName} referenced in the [Merged Pins] section of Package {pkgName} is not defined in Component {compName} Pin list  <i>The Pin is referenced in the [Merged Pins] section of Package pkgName of Component but is not defined as a Pin in the [Pins] section of the component</i>
<b>E0617</b>	PIN_ERR_17	Component {compName}: {type} Pin {pinName} referenced in the [Merged Pins] section of Package {pkgName} is merged with a {type} Pin {pinNameMerged}  <i>In Component and Package, a Pin of POWER is merged with a Pin of GND or a Pin of GND is merged with a Pin of POWER</i>
<b>E0618</b>	PIN_ERR_18	[Component] {compName} with [Package Model] {pkgName} has pin and pad mismatch because [Merged Pins] pins ({mergingPin}, {mergedPin}) point to different buses ({mergingPinBus},{mergedPinBus}) in [Pin Mapping]  <i>In Component and Package, a Pin is merged with a Pin but they are connected to different busses, in the [Pin Mapping] section</i>
<b>E0619</b>	PIN_ERR_19	[Package Model] {pkgName} with [Merged Pins] requires [Pin Mapping] in [Component] {compName}  <i>The Package in Component has a [Merged Pins] section but no [Pin Mapping] section</i>
<b>E0620</b>	PIN_ERR_20	Component {compName}: Pin '{pinName}' is associated with a Model Selector '{mselName}' which references model of type '{modelType}'  <i>In Component compName&gt;, the Pin is associated with a Model Selector which has an illegal reference to a model of type</i>
<b>E0621</b>	PIN_ERR_21	Component {compName}: Pin '{pinName}' has model '{modelName}', but Pin '{pinName}' which has the same signal_name '{signalName}' has a model '{modelName}'  <i>In Component, two pinNames with the same signalName have different modelNames (POWER, GND)</i>
<b>E0700</b>	PINMPG_ERR_0	( line {lineNum} ) - Extra data columns on this line.  <i>There was some extraneous data specified at the end of the data line in the [Pin Mapping] section</i>
<b>E0701</b>	PINMPG_ERR_1	( line {lineNum} ) - No Pin number.  <i>A pin number was not specified on a data line in the [Pin Mapping] section</i>
<b>E0702</b>	PINMPG_ERR_2	( line {lineNum} ) - No pulldown_ref data.  <i>The pulldown reference was not specified on a data line in the [Pin Mapping] section</i>
<b>E0703</b>	PINMPG_ERR_3	( line {lineNum} ) - No pullup_ref data.  <i>The pullup reference was not specified on a data line in the [Pin Mapping] section</i>
<b>E0704</b>	PINMPG_ERR_4	( line {lineNum} ) - Pin Mapping data lines must contain either 3,5 or 6 columns.

Code	Symbol	Message/Comments
		<i>A data line in the [Pin Mapping] section should contain 3 entries (when the pin number; pullup reference and pulldown reference are specified) or 5 entries ( when the external reference is not specified) and 6 entries when the pin number; pulldown reference; pullup reference; gnd clamp reference; power clamp reference and external reference are all specified)</i>
<b>E0705</b>	PINMPG_ERR_5	( line {lineNum} ) - Pin Mapping data lines must contain either 3 or 5 columns.  <i>In IBIS versions earlier than 4.1; a data line in the [Pin Mapping] section should contain 3 entries (when the pin number; pullup reference and pulldown reference are only specified) or 5 entries ( when the pin number; pullup reference; pulldown reference; power clamp reference and gnd clamp reference are specified)</i>
<b>E0706</b>	PINMPG_ERR_6	( line {lineNum} ) - When 5 columns are specified,the headings gnd_clamp_ref and power_clamp_ref must be used.  <i>The column headings gnd_clamp_ref and power_clamp_ref must be specified on the [Pin Mapping] keyword line when a data line contains 5 entries</i>
<b>E0707</b>	PINMPG_ERR_7	( line {lineNum} ) - When 6 columns are specified,the headings gnd_clamp_ref, power_clamp_ref and ext_ref must be used.  <i>The column headings gnd_clamp_ref and power_clamp_ref and ext_ref must be specified on the [Pin Mapping] keyword line when a data line contains 6 entries</i>
<b>E0708</b>	PINMPG_ERR_8	( line {lineNum} ) - Duplicate Pin Mapping Pin.  <i>A pin must be referenced at most once within a [Pin Mapping] section</i>
<b>W0709</b>	PINMPG_ERR_9	( line {lineNum} ) - Component {compName} Pin {pinName} is a POWER pin. Usually only has Pullup_ref in Pin Mapping  <i>Pin of Component has a model type of POWER and hence should only have a Pullup_ref associated with it in the [Pin Mapping] section</i>
<b>W0710</b>	PINMPG_ERR_10	( line {lineNum} ) - Pin {pinName} is a POWER pin. Usually only has Pullup_ref in Pin Mapping  <i>Pin has a model type of POWER and hence should only have a Pullup_ref associated with it in the [Pin Mapping] section</i>
<b>W0711</b>	PINMPG_ERR_11	( line {lineNum} ) - Component {compName} Pin {pinName} is a GND pin. Usually only has Pulldown_ref in Pin Mapping  <i>Pin of Component has a model type of GND and hence should only have a Pulldown_ref associated with it in the [Pin Mapping] section</i>
<b>W0712</b>	PINMPG_ERR_12	( line {lineNum} ) - Pin {pinName} is a GND pin. Usually only has Pulldown_ref in Pin Mapping  <i>Pin has a model type of GND and hence should only have a Pulldown_ref associated with it in the [Pin Mapping] section</i>
<b>W0713</b>	PINMPG_ERR_13	( line {lineNum} ) - Component {compName} Pin {pinName} is NC. Should not have any references in Pin Mapping  <i>The pin in Component is of model type NC and hence should not be associated with any references in the [Pin Mapping] section</i>
<b>W0714</b>	PINMPG_ERR_14	( line {lineNum} ) - Pin {pinName} is NC. Should not have any references in Pin Mapping

Code	Symbol	Message/Comments
		<i>The pin is of model type NC and hence should not be associated with any references in the [Pin Mapping] section</i>
<b>E0715</b>	PINMPG_ERR_15	Component '{compName}': Pin Mapping Pin '{pinName}' not previously declared in Pin section.  <i>The pin has been referenced in the [Pin Mapping] section of component but the pin has no definition in the [Pin] section of the component</i>
<b>E0716</b>	PINMPG_ERR_16	Component '{compName}': Pin Mapping pulldown_ref entry '{pdRef}' is not connected to at least one pin whose model_name is POWER or GND.  <i>In component ; the pull down reference in the [Pin Mapping] section is not associated with a pin whose model is POWER or GND</i>
<b>C0717</b>	PINMPG_ERR_17	Component '{compName}': Pin Mapping '{pdRef}': pulldown_ref entry is usually connected to GND.  <i>In component ; the pull down reference in the [Pin Mapping] section is associated with a pin whose model is POWER; but the expectation is that it would be associated with a pin whose model is GND</i>
<b>C0718</b>	PINMPG_ERR_18	Component {compName}: Pulldown Reference {pdRef} is also used as a Pullup Reference  <i>In component ; in the [Pin Mapping] section; the pulldown reference is also used as a pullup reference. This message is only generated for IBIS versions &gt;= 4.</i>
<b>C0719</b>	PINMPG_ERR_19	Pulldown Reference {pdRef} is also used as a Pullup Reference  <i>In the [Pin Mapping] section; the pulldown reference is also used as a pullup reference. This message is only generated for IBIS versions &lt; 4.</i>
<b>E0720</b>	PINMPG_ERR_20	Component '{compName}': Pin Mapping pullup_ref entry '{puRef}' is not connected to at least one pin whose model_name is POWER or GND.  <i>In component ; the pull up reference in the [Pin Mapping] section is not associated with a pin whose model is POWER or GND</i>
<b>C0721</b>	PINMPG_ERR_21	Component '{compName}': Pin Mapping '{puRef}': pullup_ref entry is usually connected to POWER.  <i>In component ; the pull up reference in the [Pin Mapping] section is associated with a pin whose model is GND; but the expectation is that it would be associated with a pin whose model is POWER</i>
<b>E0722</b>	PINMPG_ERR_22	Component '{compName}': Pin Mapping gnd_clamp_ref entry '{gcRef}' is not connected to at least one pin whose model_name is POWER or GND.  <i>In component ; the gnd clamp reference in the [Pin Mapping] section is not associated with a pin whose model is POWER or GND</i>
<b>C0723</b>	PINMPG_ERR_23	Component '{compName}': Pin Mapping '{gcRef}': gnd_clamp_ref entry is usually connected to GND.  <i>In component ; the gnd clamp reference in the [Pin Mapping] section is associated with a pin whose model is POWER; but the expectation is that it would be associated with a pin whose model is GND</i>
<b>E0724</b>	PINMPG_ERR_24	Component '{compName}': Pin Mapping power_clamp_ref entry '{pcRef}' is not connected to at least one pin whose model_name is POWER or GND.

Code	Symbol	Message/Comments
		<i>In component ; the power clamp reference in the [Pin Mapping] section is not associated with a pin whose model is POWER or GND</i>
<b>C0725</b>	PINMPG_ERR_25	Component '{compName}': Pin Mapping '{pcRef}': power_clamp_ref entry is usually connected to POWER.  <i>In component ; the power clamp reference in the [Pin Mapping] section is associated with a pin whose model is GND but the expectation is that it would be associated with a pin whose model is POWER</i>
<b>E0726</b>	PINMPG_ERR_26	Component '{compName}': Pin Mapping ext_ref entry '{extRefName}' is not connected to at least one pin whose model_name is POWER or GND.  <i>In component ; the external reference in the [Pin Mapping] section is not associated with a pin whose model is POWER or GND</i>
<b>C0727</b>	PINMPG_ERR_27	Component '{compName}': Pin Mapping '{extRefName}': ext_ref entry is usually connected to POWER.  <i>In component ; the external reference in the [Pin Mapping] section is associated with a pin whose model is GND but the expectation is that it would be associated with a pin whose model is POWER</i>
<b>E0728</b>	PINMPG_ERR_28	( line {lineNum} ) - Unable to alloc new PINMPG.  <i>Memory allocation failed when trying to create the data structures for a [Pin Mapping]</i>
<b>E0729</b>	PINMPG_ERR_29	( line {lineNum} ) - {badValue} is an invalid Pin_Mapping column entry.  <i>A 'NA' has been specified on a row in the [Pin Mapping] section</i>
<b>E0730</b>	PINMPG_ERR_30	Component '{compName}': Pins '{pinName}' and '{pinName}' with model '{modelName}' have the same '{refName}' '{refBusName}' but different signal_names '{signalName}' and '{signalName}'  <i>In Component two pins have the same modelName and reference names but different signalNames</i>
<b>E0800</b>	DIFPIN_ERR_0	( line {lineNum} ) - Unable to alloc DIFPIN.  <i>Memory allocation failed when trying to create the data structures for a [Diff Pin]</i>
<b>E0801</b>	DIFPIN_ERR_1	( line {lineNum} ) - Too many Diff Pin data columns.  <i>There are too many tokens on a data line in the [Diff Pin] section</i>
<b>E0802</b>	DIFPIN_ERR_2	( line {lineNum} ) - No Diff_Pin column entry.  <i>Diff_pin was not specified on a data line in the [Diff Pin] section</i>
<b>E0803</b>	DIFPIN_ERR_3	( line {lineNum} ) - No inv_pin column entry.  <i>inv_pin was not specified on a data line in the [Diff Pin] section</i>
<b>E0804</b>	DIFPIN_ERR_4	( line {lineNum} ) - Diff_Pin column pin same as inv_pin column pin.  <i>The diff pin and the inv pin on a data line in the [Diff Pin] section should not be the same</i>
<b>E0805</b>	DIFPIN_ERR_5	( line {lineNum} ) - No vdiff column entry.  <i>Vdiff was not specified on a data line in the [Diff Pin] section</i>
<b>E0806</b>	DIFPIN_ERR_6	( line {lineNum} ) - No tdelay_typ column entry.

Code	Symbol	Message/Comments
		<i>tdelay_typ was not specified on a data line in the [Diff Pin] section</i>
<b>W0807</b>	DIFPIN_ERR_7	( line {lineNum} ) - Typ value is not in between Min and Max  <i>The tdelay_typ value does not lie between the min and max values in a [Diff Pin] section</i>
<b>E0808</b>	DIFPIN_ERR_8	( line {lineNum} ) - Diff_Pin data line column count must be 4 or 6.  <i>A data line in the [Diff Pin] section should contain 6 colums; ie; Diff_pin; inv_pin; vdiff; tdelay_typ; tdelay_min; tdelay_max or 4 columns; ie; Diff_pin; inv_pin; vdiff; tdelay_typ</i>
<b>E0809</b>	DIFPIN_ERR_9	( line {lineNum} ) - When using 6 columns,the tdelay_min and tdelay_max headers must be used.  <i>A data line in the [Diff Pin] section contains 6 values but only 4 headers were specified on the keyword line</i>
<b>E0810</b>	DIFPIN_ERR_10	Component '{compName}': Diff_Pin '{pinName}' not previously declared in Pin section.  <i>The pin was referred to in the [Diff Pin] section of component but not defined in the [Pin] section of the component</i>
<b>E0811</b>	DIFPIN_ERR_11	Component '{compName}': inv_pin '{pinName}' not previously declared in Pin section.  <i>The pin was referred to in the [Inv Pin] section of component but not defined in the [Pin] section of the component</i>
<b>W0812</b>	DIFPIN_ERR_12	Component '{compName}': Diff_Pin '{pinName}' is not unique.  <i>The Diff_pin has been referenced more than once in the [Diff Pin] section of component</i>
<b>E0813</b>	DIFPIN_ERR_13	Component '{compName}': Inv_pin '{pinName}' already in use as a Diff_pin.  <i>The inv_pin has been referenced as a Diff_pin in the [Diff Pin] section of component</i>
<b>E0814</b>	DIFPIN_ERR_14	Component '{compName}': Diff_pin '{pinName}' already in use as an inv_pin.  <i>The Diff_pin has been referenced as an inv_pin in the [Diff Pin] section of component</i>
<b>W0815</b>	DIFPIN_ERR_15	Component '{compName}': inv_pin '{pinName}' is not unique.  <i>The inv_pin has been referenced more than once in the [Diff Pin] section of component</i>
<b>E0816</b>	DIFPIN_ERR_16	( line {lineNum} ) - Bad value for {columnName} column.  <i>One fo the numeric values of tdelay column has invalid syntax</i>
<b>W0817</b>	DIFPIN_ERR_17	( line {lineNum} ) - Suspicious value for {columnName} column.  <i>One fo the numeric values of tdelay column has a bad scale factor perhaps</i>
<b>B0818</b>	DIFPIN_ERR_18	Unknown value returned by CMN_GetValueOrNA(). {sourceFile} {sourceLinenum}  <i>The code has a bug</i>
<b>E0900</b>	PARSE_ERR_0	Could not determine Version for file {fileName}  <i>There was an error parsing the IBIS File Version for the IBIS file</i>
<b>W0901</b>	PARSE_ERR_1	Filename '{fileName}' should be lowercase

Code	Symbol	Message/Comments
		<i>The input file name should only used lower case letters</i>
E0902	PARSE_ERR_2	( line {lineNum} ) - Non-comment line exists after 'End' keyword. <i>There should be no more no comment lines after the [End] keyword</i>
E0903	PARSE_ERR_3	Required keyword 'End' not found. <i>The [End] keyword should be the last keyword in the IBIS file</i>
B0904	PARSE_ERR_4	( line {lineNum} ) - Unknown enumerated keyword code. <i>Internal data structures were found to be corrupt</i>
E0905	PARSE_ERR_5	( line {lineNum} ) - Exceeds {maxLineLength} characters. <i>UNUSED,The number of characters on the line has exceeded ie; 120 characters</i>
E0906	PARSE_ERR_6	( line {lineNum} ) - Keywords Must Begin In Column 1. <i>A keyword was found which did not start from the first column in a line</i>
E0907	PARSE_ERR_7	( line {lineNum} ) - Data for unknown keyword.n{text} <i>The code has a bug trying to parse</i>
B0908	PARSE_ERR_8	{sourceFile}:{sourceLinenum}:Unknown current keyword. <i>The code has a bug</i>
E0909	PARSE_ERR_9	( line {lineNum} ) - Previous keyword not terminated properly. Possibly missing a ' <i>A new keyword exists on a continuation line from a previous section</i>
E0910	PARSE_ERR_10	( line {lineNum} ) - Duplicate IBIS_Ver keyword. <i>The [IBIS_Ver] keyword was found more than once in the IBIS file</i>
E0911	PARSE_ERR_11	( line {lineNum} ) - Illegal keyword for a '.pkg' file. <i>A keyword found in a '.pkg' file ws not a valid keyword</i>
E0912	PARSE_ERR_12	( line {lineNum} ) - Illegal keyword for a '.ebd' file. <i>A keyword found in a '.ebd' file ws not a valid keyword</i>
E0913	PARSE_ERR_13	( line {lineNum} ) - Illegal keyword for a '{fileType}' file. <i>A keyword found in a file of type fileType ws not a valid keyword</i>
E0914	PARSE_ERR_14	( line {lineNum} ) - Keyword Missing Ending Bracket (']'). <i>A keyword should be terminated with a ']' character</i>
E0915	PARSE_ERR_15	( line {lineNum} ) - Invalid Keyword. <i>A keyword is found which is too long or an empty string</i>
E0916	PARSE_ERR_16	( line {lineNum} ) - Invalid Keyword: {keyword} <i>An unrecognized keyword was found</i>
E0917	PARSE_ERR_17	( line {lineNum} ) - Invalid Comment Character Definition. <i>The comment character was not defined properly ( possible missing the suffix _char )</i>
E0918	PARSE_ERR_18	( line {lineNum} ) - Invalid Comment Character '{badChar}'.

Code	Symbol	Message/Comments
		<i>is not allowed as a valid comment character (cannot be any of these '0123456789abcdefghijklmnopqrstuvwxyZABCDEFGHIJKLMNopQRSTUVWXYZ[]._/=+-')</i>
<b>E0919</b>	PARSE_ERR_19	( line {lineNum} ) - Too Many Line Items For Keyword COMMENT_CHAR. <i>There is extraneous data on the [Comment Char] keyword line</i>
<b>E0920</b>	PARSE_ERR_20	( line {lineNum} ) - Extraneous data on End keyword line. <i>The [End] keyword should not have any other data after it</i>
<b>W0921</b>	PARSE_ERR_21	( line {lineNum} ) - IBIS files should not contain tab characters. <i>Tab characters should be avoided in an IBIS file</i>
<b>E0922</b>	PARSE_ERR_22	Unable to Allocate Memory: {fileName} {lineNum} <i>The code failed to allocate memory</i>
<b>E0923</b>	PARSE_ERR_23	Description line in file (at line no {lineNum}) is greater than {maxChars} characters <i>UNUSED,The line associated with a Description in an .ami file at line is greater than characters long (ie; 120 characters)</i>
<b>E0924</b>	PARSE_ERR_24	Unterminated string detected. Possibly started at line {lineNum} <i>A string literal was not terminated in an AMI file ( it possibly originated at line )</i>
<b>E0925</b>	PARSE_ERR_25	Parsing aborted <i>The parsing was aborted because of an unrecoverable error</i>



## 4.3 MESSAGE CODES 1000 TO 1499

Code	Symbol	Message/Comments
<b>B1000</b>	HDR_ERR_0	Unable to get ptr to IBIS struct? <i>Internal data structures were found to be corrupt</i>
<b>E1001</b>	HDR_ERR_1	( line {lineNum} ) - Orphan File Header keyword. <i>A header keyword [IBIS Ver]; [File Name]; [File Rev]; [Date]; [Source]; [Notes]; [Disclaimer]; [Copyright] was specified where it was not expected</i>
<b>E1002</b>	HDR_ERR_2	( line {lineNum} ) - Orphan Data Line. <i>A line was identified as a data line for a header keyword but the header definition is not in progress</i>
<b>B1003</b>	HDR_ERR_3	( line {lineNum} ) - Bad keyword type passed to hdr. <i>The code has a bug while parsing the header keywords</i>
<b>B1004</b>	HDR_ERR_4	( line {lineNum} ) - Bad line type passed to hdr. <i>The code has a bug while parsing the header keywords</i>
<b>E1005</b>	HDR_ERR_5	( line {lineNum} ) - Duplicate IBIS_Ver keyword <i>The [IBIS_Ver] keyword was found more than once in the input file</i>
<b>E1006</b>	HDR_ERR_6	Unable to create new File Header structure. <i>The code failed to allocate the required memory</i>
<b>E1007</b>	HDR_ERR_7	( line {lineNum} ) - IBIS_Version must be first keyword.n <i>The first keyword in an IBIS file should be [IBIS Ver]</i>
<b>E1008</b>	HDR_ERR_8	( line {lineNum} ) - Illegal IBIS_Version '{badVersion}'. <i>An invalid version was specified as the IBIS version</i>
<b>E1009</b>	HDR_ERR_9	( line {lineNum} ) - Duplicate File_name keyword. <i>The [File Name] keyword was found more than once in the input file</i>
<b>E1010</b>	HDR_ERR_10	File_name '{fileName}' contains an upper case character '{character}'. <i>Input file name should only used lower case characters but an upper case character was found</i>
<b>E1011</b>	HDR_ERR_11	File_name '{fileName}' contains a character '{character}' that is illegal for DOS. <i>Input file name contains a character that is not allowed in DOS/Windows</i>
<b>E1012</b>	HDR_ERR_12	File_name '{fileName}' contains more than one period. <i>Input file name contains more than one period '.' character</i>
<b>E1013</b>	HDR_ERR_13	File_name '{fileName}' must contain one period. <i>Input file name contains no period '.' characters</i>
<b>E1014</b>	HDR_ERR_14	( line {lineNum} ) - File name opened '{actualFileName}' not the same as File_name '{keywordFileName}'. <i>The file name that was providing on the command line to the parser; is not the same as the file name specified with the [File Name] keyword</i>
<b>E1015</b>	HDR_ERR_15	( line {lineNum} ) - Duplicate File_Rev keyword.

Code	Symbol	Message/Comments
		<i>The [File Rev] keyword was found more than once in the input file</i>
<b>E1016</b>	HDR_ERR_16	( line {lineNum} ) - Duplicate Date keyword. <i>The [Date] keyword was found more than once in the input file</i>
<b>E1017</b>	HDR_ERR_17	( line {lineNum} ) - Duplicate Source keyword. <i>The [Source] keyword was found more than once in the input file</i>
<b>E1018</b>	HDR_ERR_18	( line {lineNum} ) - Duplicate Notes keyword. <i>The [Notes] keyword was found more than once in the input file</i>
<b>E1019</b>	HDR_ERR_19	( line {lineNum} ) - Duplicate Copyright keyword. <i>The [Copyright] keyword was found more than once in the input file</i>
<b>E1020</b>	HDR_ERR_20	( line {lineNum} ) - Unable to add text. <i>The code failed to allocate the required memory</i>
<b>E1100</b>	CRV_ERR_0	( line {lineNum} ) - {curveName} Already Defined <i>The curve has already been defined</i>
<b>B1101</b>	CRV_ERR_1	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>
<b>B1102</b>	CRV_ERR_2	Should Not Be Here: {sourceFile},{sourceLinenum} <i>The code has a bug</i>
<b>B1103</b>	CRV_ERR_3	Unable to Parse {text}: {sourceFile} {sourceLinenum} <i>A generic error message which indicates that a parsing error related to</i>
<b>E1104</b>	CRV_ERR_4	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For {paramName}: Expecting {numberOfItemsExpected} <i>The sub parameter should have had items on the keyword line but only number of data items were found</i>
<b>B1105</b>	CRV_ERR_5	Out of Memory <i>The code failed to allocate the required memory</i>
<b>E1106</b>	CRV_ERR_6	( line {lineNum} ) - Voltage Value Cannot Be 'NA' <i>The Voltage value has to be specified as a numeric value in a data line for a curve</i>
<b>E1107</b>	CRV_ERR_7	( line {lineNum} ) - More Than {maxPoints} Voltage Points Provided For {curveName} <i>More than data points (ie; 100) were sepcified for curve</i>
<b>E1108</b>	CRV_ERR_8	Require at least 2 Voltage Points for {lineNum} Beginning at Line {curveName} <i>The curve defined on line has less than 2 data points</i>
<b>E1109</b>	CRV_ERR_9	{First Last} {Typ Min Max} Value Cannot Be 'NA' for {curveName} Beginning at Line {lineNum} <i>A general message indicating that the (the first or the last) (typValue; min or max) value for the curve defined on line cannot be NA</i>
<b>N1110</b>	CRV_ERR_10	( line {lineNum} ) - {curveName} {Typ Min Max} data is non-monotonic

Code	Symbol	Message/Comments
		<i>The is non monotonic</i>
W1111	CRV_ERR_11	{label} {name}: {curveName} has Decreasing Current <i>A general message indicating that the section with name has a curve which has decreasing current</i>
W1112	CRV_ERR_12	{label} {name}: {curveName} has Increasing Current <i>A general message indicating that the section with name has a curve which has increasing current</i>
W1113	CRV_ERR_13	{label} {name}: {curveName} : Typical value never becomes zero <i>A general message indicating that the section with name has a curve whose typical current never becomes zero</i>
W1114	CRV_ERR_14	{label} {name}: {curveName} : Minimum value never becomes zero <i>A general message indicating that the section with name has a curve whose minimum current never becomes zero</i>
W1115	CRV_ERR_15	{label} {name}: {curveName} : Maximum value never becomes zero <i>A general message indicating that the section with name has a curve whose maximum current never becomes zero</i>
E1200	PKG_ERR_0	( line {lineNum} ) - Unable to allocate a Package <i>Memory allocation for a Package while parsing the [Package] section</i>
E1201	PKG_ERR_1	( line {lineNum} ) - Package sub-parameters must start in column 1. <i>The package sub parameters R_pkg; L_pkg; C_pkg should be defined starting at column 1</i>
E1202	PKG_ERR_2	( line {lineNum} ) - Expected {expected} columns in Package sub-parameter line,found {actualColumns} columns. <i>Each data line in a [Package] section should have (ie; 4) number of values but number were specified</i>
E1203	PKG_ERR_3	( line {lineNum} ) - Duplicate R_pkg sub-parameter. <i>The R_pkg subparameter was multiply defined</i>
E1204	PKG_ERR_4	( line {lineNum} ) - Duplicate L_pkg sub-parameter. <i>The L_pkg subparameter was multiply defined</i>
E1205	PKG_ERR_5	( line {lineNum} ) - Duplicate C_pkg sub-parameter. <i>The C_pkg subparameter was multiply defined</i>
E1206	PKG_ERR_6	( line {lineNum} ) - Unknown Package subparameter. <i>An unknown subparameter was specified in the [Package] section</i>
E1207	PKG_ERR_7	( line {lineNum} ) - Unable to parse data for Package subparameter '{subparam}'. <i>A generic error message which indicates that a parsing error related to</i>
B1208	PKG_ERR_8	( line {lineNum} ) - Unknown Package subparameter <i>The code which handles Package sub parameters has a bug</i>
E1209	PKG_ERR_9	( line {lineNum} ) - The typical column must be specified.

Code	Symbol	Message/Comments
		<i>The typical column for a Package subparameter should be specified as a numeric value</i>
E1210	PKG_ERR_10	( line {lineNum} ) - The minimum column must be specified or NA. <i>The minimum column for a Package subparameter should be specified as a numeric value or as NA</i>
E1211	PKG_ERR_11	( line {lineNum} ) - The maximum column must be specified or NA. <i>The maximum column for a Package subparameter should be specified as a numeric value or as NA</i>
E1212	PKG_ERR_12	( line {lineNum} ) - Required sub-parameter R_pkg not found. <i>UNUSED,Not used</i>
E1213	PKG_ERR_13	Component '{compName}': Required sub-parameter R_pkg not found. <i>The R_pkg subparameter was not defined in the [Pacakge] section for component</i>
E1214	PKG_ERR_14	( line {lineNum} ) - Required sub-parameter L_pkg not found. <i>UNUSED,Not used</i>
E1215	PKG_ERR_15	Component '{compName}': Required sub-parameter L_pkg not found. <i>The L_pkg subparameter was not defined in the [Pacakge] section for component</i>
E1216	PKG_ERR_16	( line {lineNum} ) - Required sub-parameter C_pkg not found. <i>UNUSED,Not used</i>
E1217	PKG_ERR_17	Component '{compName}': Required sub-parameter C_pkg not found. <i>The C_pkg subparameter was not defined in the [Pacakge] section for component</i>
E1300	RAMP_ERR_0	( line {lineNum} ) - Ramp Already Defined <i>A [Ramp] section can only be defined once in a model</i>
B1301	RAMP_ERR_1	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>
B1302	RAMP_ERR_2	Should Not Be Here: {sourceFile},{sourceLinenum} <i>The code has a bug</i>
B1303	RAMP_ERR_3	Unable to Parse {errorString}: {sourceFile} {sourceLinenum} <i>A generic error message which indicates that a parsing error related to</i>
E1304	RAMP_ERR_4	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For {paramName}: Expecting {numberOfItemsExpected} <i>The sub parameter should have had items on the keyword line but only number of data items were found</i>
E1305	RAMP_ERR_5	( line {lineNum} ) - Unknown Line Among Ramp Data <i>An unrecognized line was found in the [Ramp] section</i>
E1306	RAMP_ERR_6	{lineNum} Not Defined For Ramp Beginning on Line {paramName} <i>The parameter was not specified for the [Ramp] section defined on line</i>
E1307	RAMP_ERR_7	( line {lineNum} ) - {paramName} Already Defined For Model '{modelName}'

Code	Symbol	Message/Comments
		<i>The [Ramp] section parameter is already defined in model</i>
E1308	RAMP_ERR_8	( line {lineNum} ) - No {Typ Min Max} Value Was Provided for {paramName}
E1309	RAMP_ERR_9	( line {lineNum} ) - 'NA' not allowed for {paramName} Typical value <i>The typical value in a Range cannot be NA; but for [Ramp] parameter it is not so</i>
E1310	RAMP_ERR_10	( line {lineNum} ) - {dv_dt} must be greater than 0 in a Ramp specification <i>The value for dv or dt in [Ramp] spec should be greater than 0 but it is not so for</i>
W1311	RAMP_ERR_11	( line {lineNum} ) - Suspicious {paramName} {columnName} Value ('{actualValue}'), Numeric in Scale <i>The numeric value for a column of parameter was somewhat incorrect ( possibly in the scale factor) in a [Ramp] section</i>
E1312	RAMP_ERR_12	( line {lineNum} ) - Invalid {paramName} {rampColumn} Value ('{actualValue}') <i>The numeric value for a column of parameter was invalid in a [Ramp] section</i>
E1313	RAMP_ERR_13	( line {lineNum} ) - Invalid Ramp {Rload} Line <i>The syntax of the line in a [Ramp] section is invalid</i>
E1314	RAMP_ERR_14	( line {lineNum} ) - Invalid {Rload} Value ('{value}') <i>An invalid numeric value was found for in a [Ramp] section</i>
B1400	RNGP_ERR_0	Unable to parse {subparam} arguments
E1401	RNGP_ERR_1	( line {lineNum} ) - No {Typ Min Max} Value Was Provided for {subparam}
E1402	RNGP_ERR_2	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For {paramName}: Expecting {numberOfItemsExpected} <i>The sub parameter should have had items on the keyword line but only number of data items were found</i>
W1403	RNGP_ERR_3	( line {lineNum} ) - Value {tableValue} repeated in the First Column
B1404	RNGP_ERR_4	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>

## 4.4 MESSAGE CODES 1500 TO 1999

Code	Symbol	Message/Comments
W1500	ACDC_ERR_0	Model '{model}': {Typ Min Max} VI curves cannot drive through Vmeas={Vmeas}Vn given load Rref={Rref} Ohms to Vref={Vref}V
W1501	ACDC_ERR_1	INFO: v_dc L/H = {VdcLow} {VdcHigh}n <i>UNUSED,not used</i>
W1502	ACDC_ERR_2	Model '{model}': {Typ Min Max} AC {Rise Fall} Endpoints ({VacLow}V,{VacHigh}V) not within n,{Vtol}V ({percTol}%) of ({VdcLow}V,{VdcHigh}V) on VI curves for {Rfixture} Ohms to {Vfixture}V <i>UNUSED</i>
W1503	ACDC_ERR_3	Model {model}: The [{Rise Fall} Waveform] nwith [R_fixture]={Rfixture} Ohms and [{Vfixture}]= {Typ Min Max} Vnhas {VacLow} column DC endpoints of {VacHigh}V and na difference of {percTol}% and {VdcLow}%%{VdcHigh}v,butnan equivalent load applied to the model's I-V tables yieldsndifferent voltages ({diffLow}V and {diffHigh}V),respectively.
W1504	ACDC_ERR_4	Model '{modelName}': {Typ Min Max} AC {Rise Fall} Endpoints ({VacLow}V,{VacHigh}V) *ARE* WITHIN n,{Vtol}V ({percTol}%) of ({VdcLow}V,{VdcHigh}V) on VI curves for {Rfixture} Ohms to {Vfixture}V <i>UNUSED</i>
W1505	ACDC_ERR_5	INFO low t/vac/vdc {TacLow} {VacLow} {VdcLow} high {TacHigh} {VacHigh} {VdcHigh} rfix vfix {Rfixture} {Vfixture}n <i>UNUSED,ACDC_DEBUG must be enabled.</i>
W1506	ACDC_ERR_6	Model '{model}': Extreme currents present in {corner} {curveName} VI Curve ({current}A @ {voltage}V)
E1507	ACDC_ERR_7	Model '{model}': Currents <> 0.0mA in 'Pullup' for Open_drain/Open_sink device
E1508	ACDC_ERR_8	Model '{model}': Currents <> 0.0mA in 'Pulldown' for Open_source device
N1509	ACDC_ERR_9	{process} {model} {curveName} data is non-monotonic
E1510	ACDC_ERR_10	Model '{modelName}': Currents <> 0.0mA in 'ISSO PU' for Open_drain/Open_sink device
E1511	ACDC_ERR_11	Model '{modelName}': Currents <> 0.0mA in 'ISSO PD' for Open_source device
W1512	ACDC_ERR_12	Model {modelName}: {Typ Min Max} {ISSO_PD PU} current ({current}A) at 0V is not within {percTol}% of {Pullup Pulldown} current ({current}A) at reference ({PuPdRefV}V)

Code	Symbol	Message/Comments
		<i>percTol = 5%</i>
<b>W1513</b>	ACDC_ERR_13	Model {modelName}: {Typ Min Max} {ISSO_PD PU} current ({current}A) at {Pullup Pulldown} reference ({PuPdRefV}V) - table value ({voltage}V) is non-zero (> {maxCurrent}A)
<b>C1514</b>	ACDC_ERR_14	[Ramp] dV ({RisedV FalldV}V) not within {percentLimit}% of I-V table dV ({calcdV}V) calculation: Model {modelName}: Process: {Typ Min Max}: ({Rise Fall})  <i>UNUSED,percentLimit = 5%</i>
<b>W1515</b>	ACDC_ERR_15	Model '{modelName}': {Typ Min Max} {Rising Falling} VI curves cannot drive through Vmeas={Vmeas}Vngiven load Rref={Rref} Ohms to Vref={Vref}V
<b>E1516</b>	ACDC_ERR_16	[Ramp] dV data cannot be compared against I-V dV, as I-V table data is not present in Model {modelName}.  <i>Ramp checks cannot be performed if there are no IV tables</i>
<b>E1517</b>	ACDC_ERR_17	[Ramp] dV data cannot be compared against I-V dV, as [External Model] is used in place of I-V table data in Model {modelName}.  <i>Ramp checks cannot be performed if an external model is referenced</i>
<b>E1600</b>	APKG_ERR_0	( line {lineNum} ) - Invalid Package Model name: '{modelName}' is too long.
<b>E1601</b>	APKG_ERR_1	( line {lineNum} ) - Missing Package Model name
<b>E1602</b>	APKG_ERR_2	( line {lineNum} ) - Unable to create new APKG.
<b>E1603</b>	APKG_ERR_3	( line {lineNum} ) - Alternate Package Model has no package models defined
<b>W1604</b>	APKG_ERR_4	( line {lineNum} ) - Alternate Package Model has only one package model defined
<b>E1605</b>	APKG_ERR_5	( line {lineNum} ) - Package Model Name Previously Defined ('{pkgModelName}')  <i>APKG_ERR_5</i>
<b>W1700</b>	CHK_ERR_0	CMPT '{compName}',Pin '{pinName}': Pin Resistance {resistance} Ohms greater than {maxR} Ohms  <i>The resistance of pin of component is greater than (5.0E+01)</i>
<b>W1701</b>	CHK_ERR_1	CMPT '{compName}',Pin '{pinName}': Pin Inductance {inductance}nH greater than {maxL}nH  <i>The inductance of pin of component is greater than (1.0E-03)</i>
<b>W1702</b>	CHK_ERR_2	CMPT '{compName}',Pin '{pinName}': Pin Capacitance {capacitance}pF greater than {maxC}pF

Code	Symbol	Message/Comments
		<i>The capacitance of pin of component is greater than (1.0E+06)</i>
W1703	CHK_ERR_3	{modelSubmodel} '{modelName}': {Typ Min Max} {Rise Fall} Ramptime {rampDt}nsec unusually large (> {maxT}nsec )
W1704	CHK_ERR_4	[Model] {modelName} has no description of the buffer's high stateDC drive characteristics (no [Pullup] table). This warning can be silenced by using an open drain Model_type or by adding a [Pullup] table. <i>The [Pullup] table for model is missing</i>
W1705	CHK_ERR_5	[Model] {modelName} has no description of the buffer's low state DC drive characteristics (no [Pulldown] table). This warning can be silenced by using an open source Model_type or by adding a [Pulldown] table. <i>The [Pulldown] table for model is missing</i>
W1706	CHK_ERR_6	[Model] {modelName} has no description of the buffer's low state DC drive characteristics (no [Pulldown] table). This warning can be silenced by changing the Model_type or by adding an [Pulldown] table. <i>The [Pulldown] table for model is missing</i>
W1707	CHK_ERR_7	[Model] {modelName} has no description of the buffer's high stateDC drive characteristics (no [Pullup] table). This warning can be silenced by changing the Model_type or by adding an [Pullup] table. <i>The [Pullup] table for model is missing</i>
E1708	CHK_ERR_8	Component : Duplicate Node Name
E1709	CHK_ERR_9	Component : Illegal Node: same as pin
W1710	CHK_ERR_10	CMPT '{compName}': Rpkg {Typ Min Max} value {Rpkg} Ohms not within expected range ({minR} Ohms, {maxR} Ohms) <i>UNUSED, minR = 0; maxR = 50</i>
W1711	CHK_ERR_11	CMPT '{compName}': Rpkg Max value < Min value <i>UNUSED</i>
W1712	CHK_ERR_12	CMPT '{compName}': Lpkg {Typ Min Max} value {Lpkg}nH not within expected range ({minL}nH, {maxL}nH) <i>UNUSED, minL = 0; maxL = 1000nh</i>
W1713	CHK_ERR_13	CMPT '{compName}': Lpkg Max value < Min value <i>UNUSED</i>
W1714	CHK_ERR_14	CMPT '{compName}': Cpkg {Typ Min Max} value {Cpkg}pF not within expected range ({minC}pF, {maxC}pF) <i>UNUSED, minC = 0; maxC = 1000pF</i>
W1715	CHK_ERR_15	CMPT '{compName}': Cpkg Max value < Min value <i>UNUSED</i>



Code	Symbol	Message/Comments
W1716	CHK_ERR_16	Model '{modelName}': C_comp {Typ Min Max} value {Ccomp}pF out of expected range ({minC}pF, {maxC}pF) <i>UNUSED,minC = 0; maxC = 1000pF</i>
W1717	CHK_ERR_17	Model '{modelName}': C_comp_pullup {Typ Min Max} value {Ccomp}pF out of expected range ({minC}pF,{maxC}pF) <i>UNUSED,minC = 0; maxC = 1000pF</i>
W1718	CHK_ERR_18	Model '{modelName}': C_comp_pulldown {Typ Min Max} value {Ccomp}pF out of expected range ({minC}pF,{maxC}pF) <i>UNUSED,minC = 0; maxC = 1000pF</i>
W1719	CHK_ERR_19	Model '{modelName}': C_comp_power_clamp {Typ Min Max} value {Ccomp}pF out of expected range ({minC}pF, {maxC}pF) <i>UNUSED,minC = 0; maxC = 1000pF</i>
W1720	CHK_ERR_20	Model '{modelName}': C_comp_gnd_clamp {Typ Min Max} value {Ccomp}pF out of expected range ({minC}pF,{maxC}pF) <i>UNUSED,minC = 0; maxC = 1000pF</i>
W1721	CHK_ERR_21	Model '{modelName}' is of type {modelType} and should not have any {keyword} section <i>Check on various keywords based on modelType</i>
E1800	CIRCUIT_ERR_0	( line {lineNum} ) - Too Many Signal Pins (only one instance of Signal_pin,Diff_signal_pins, or Series_pins is allowed)
E1801	CIRCUIT_ERR_1	( line {lineNum} ) - Redundant use of port
E1802	CIRCUIT_ERR_2	( line {lineNum} ) - Use of reserved port in Port Map
B1803	CIRCUIT_ERR_3	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>
E1804	CIRCUIT_ERR_4	( line {lineNum} ) - Illegal parameter
E1805	CIRCUIT_ERR_5	( line {lineNum} ) - Not Enough arguments to {paramName}
E1806	CIRCUIT_ERR_6	( line {lineNum} ) - Extra Charaters on PIN line
E1807	CIRCUIT_ERR_7	( line {lineNum} ) - Missing port or pad name in Port_map
E1808	CIRCUIT_ERR_8	(Line {lineNum}) No [External Circuit] {cktName} for [Circuit Call]
B1809	CIRCUIT_ERR_9	Node not found {nodeName} {sourceFile} {sourceLinenum}n

Code	Symbol	Message/Comments
		<i>UNUSED</i>
<b>B1810</b>	CIRCUIT_ERR_10	should not be here {sourceFile} {sourceLinenum} <i>The code has a bug</i>
<b>B1811</b>	CIRCUIT_ERR_11	should not be here <i>The code has a bug</i>
<b>B1812</b>	CIRCUIT_ERR_12	should not get here <i>The code has a bug</i>
<b>B1813</b>	CIRCUIT_ERR_13	should not be here {fileName} {lineNum} {sourceFile} {sourceLinenum}n <i>The code has a bug</i>
<b>B1814</b>	CIRCUIT_ERR_14	should not get here {sourceFile} {sourceLinenum} <i>The code has a bug</i>
<b>E1815</b>	CIRCUIT_ERR_15	[CIRCUIT CALL] Line: Redundant use of port
<b>E1816</b>	CIRCUIT_ERR_16	CCALL Line A2D Line Illegal connection,2 analog reference/driver ports = =
<b>E1817</b>	CIRCUIT_ERR_17	Circuit Call Line {cktLinenum} instantiates External Circuit at {cktdefLinenum} with Floating Internal Node type {nodeType}
<b>E1818</b>	CIRCUIT_ERR_18	Internal Node ,External Circuit at {lineNum}: is analog and digital
<b>E1819</b>	CIRCUIT_ERR_19	CCALL Line A2D Line Illegal connection,n2 analog reference/driver ports =={temp1}{temp2}
<b>B1820</b>	CIRCUIT_ERR_20	should not get here {sourceFile} {sourceLinenum}n
<b>E1821</b>	CIRCUIT_ERR_21	Component Floating Node (1 connection){cktCall}
<b>W1822</b>	CIRCUIT_ERR_22	Component Unused Node (0 connection){cktCall}
<b>E1823</b>	CIRCUIT_ERR_23	Component Floating Pin (no connections but used in CIRCIUT CALL)
<b>E1824</b>	CIRCUIT_ERR_24	Component {compName} Node : is analog and digital{digitalOrAnalog}
<b>E1825</b>	CIRCUIT_ERR_25	Component Node: has a digital receiver but no digital driver{portName}
<b>W1826</b>	CIRCUIT_ERR_26	Component Node: has a digital receiver but no obvious digital drivernThis indicates connection to a AMS port that 'may' be digital {portName}

Code	Symbol	Message/Comments
E1827	CIRCUIT_ERR_27	Component Node: has a digital driver but no digital receiver{portName}
W1828	CIRCUIT_ERR_28	Component Node: has a digital driver but no obvious digital receiver This indicates connection to a AMS port that 'may' be digital {portName}
E1829	CIRCUIT_ERR_29	Component Node: has no defined drivers{portName}
E1830	CIRCUIT_ERR_30	Component Node: has a analog receiver but no analog driver{portName}
W1831	CIRCUIT_ERR_31	Component Node: has a analog receiver but no obvious analog driver This indicates connection to a AMS port that 'may' be analog {portName}
E1832	CIRCUIT_ERR_32	Component Node: has a analog driver but no analog receiver{portName}
W1833	CIRCUIT_ERR_33	Component Node: has a analog driver but no obvious analog receiver This indicates connection to a AMS port that 'may' be analog {portName}
E1834	CIRCUIT_ERR_34	Component Pin Used as Digital in CIRCUIT CALL(s)(pins are analog){portName}
E1835	CIRCUIT_ERR_35	is connect to a reserved port <i>UNUSED</i>
E1836	CIRCUIT_ERR_36	Component Pin Used as Digital in CIRCUIT CALL(s)(pins are analog) <i>UNUSED</i>
E1837	CIRCUIT_ERR_37	Component Node Used as Analog and Digital in CIRCUIT CALL(s) <i>UNUSED</i>
E1838	CIRCUIT_ERR_38	(line {lineNum}) No [External Circuit] for [Circuit Call] {cktCall} in Component {compName}
E1839	CIRCUIT_ERR_39	CMPT ,[Circuit Call] at (line {cktLinenum}) references illegal pin:
E1840	CIRCUIT_ERR_40	[Circuit Call] at (line {lineNum}) first reference pin is not declared CIRCUITCALL in [Pin] section
E1841	CIRCUIT_ERR_41	[Circuit Call] at (line {lineNum}) second reference pin is not declared CIRCUITCALL in [Pin] section
E1842	CIRCUIT_ERR_42	CMPT ,[CIRCUIT CALL] at (line {lineNum}) references same pin twice:

Code	Symbol	Message/Comments
E1843	CIRCUIT_ERR_43	CMPT ,[CIRCUIT CALL] at (line {lineNum}) no reference pin (need Signal_pin, Diff_signal_pins, Series_pins) <i>UNUSED</i>
E1844	CIRCUIT_ERR_44	Circuit : Floating User Defined Digital Port <i>UNUSED</i>
E1845	CIRCUIT_ERR_45	[Circuit Call] at (line {lineNum}),no port in [External Circuit] {cktCall}
E1846	CIRCUIT_ERR_46	[Circuit Call] at (line {lineNum}),no node/pin in Component {compName}
E1900	CMN_ERR_0	File Name Requires '.ibs' Extension. <i>The input file name was specified with an extension other than then the expected '.ibs'</i>
E1901	CMN_ERR_1	Unable to append filename extension. <i>The input file name was specified without an extension but the base filename length and the '.ibs' extension length together become greater than the allowed filename length (ie; 1024 characters)</i>
E1902	CMN_ERR_2	File Name Requires '.ebd' Extension. <i>The input file name was specified with an extension other than then the expected '.ebd'</i>
E1903	CMN_ERR_3	File Name Requires '.pkg' Extension. <i>The input file name was specified with an extension other than then the expected '.pkg'</i>
E1904	CMN_ERR_4	Unable to assemble filename. <i>The input file directory path length and the input filename length together become greater than the allowed filename length (ie; 1024 characters)</i>
E1905	CMN_ERR_5	Unable To Open File '{filePath}{fileName}' <i>There was an error trying to open the file</i>
E1906	CMN_ERR_6	Memory allocation failed. This request {size}.n <i>The code failed to allocate bytes of memory</i>
E1907	CMN_ERR_7	Memory reallocation failed. This request {size}.n <i>The code failed to reallocate bytes of memory</i>
B1908	CMN_ERR_8	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>
E1909	CMN_ERR_9	( line {lineNum} ) - Invalid {columnName} Value ('{actualValue}') <i>A numeric value or 'NA' was expected for column but the value specified was invalid</i>
W1910	CMN_ERR_10	( line {lineNum} ) - Suspicious {columnName} {paramName} Value ('{actualValue}'), Numeric in Scale

Code	Symbol	Message/Comments
		<i>The numeric value for parameter was somewhat incorrect ( possibly in the scale factor)</i>
E1911	CMN_ERR_11	( line {lineNum} ) - Duplicate '{keyword}' keyword. <i>A keyword has been defined more than once</i>
E1912	CMN_ERR_12	( line {lineNum} ) - {keyword} string '{value}' is too long, truncating to {maxChars} characters. <i>The value specified for keyword was too long and was truncated to characters</i>
E1913	CMN_ERR_13	( line {lineNum} ) - Zero length value for keyword '{keyword}'. <i>The value specified for keyword was an empty string</i>
E1914	CMN_ERR_14	( line {lineNum} ) - {keyword} string '{value}' is too long, maximum length {maxChars} allowed. <i>The value specified for keyword was too long (more than characters)</i>
E1915	CMN_ERR_15	Required keyword '{keyword}' not found in file '{fileName}'. <i>The mandatory keyword was not specified in input file</i>
E1916	CMN_ERR_16	( line {lineNum} ) - Illegal use of Reserved Word '{reservedWord}'. <i>A reserved word was used inappropriately</i>
E1917	CMN_ERR_17	( line {lineNum} ) - Found illegal {type} character (code {hexCode}).{message} <i>An invalid character of type of hex code was found in the input which could be converted to a space character as per the message</i>
E1918	CMN_ERR_18	( line {lineNum} ) - Unexpected '=' found <i>A character '=' was found where not expected</i>
E1919	CMN_ERR_19	( line {lineNum} ) - Unexpected token '{text}' found in R/L/C section <i>A token other than Len; R; L or C was found</i>
E1920	CMN_ERR_20	( line {lineNum} ) - Premature end of R/L/C section <i>A complete line was not specified</i>
E1921	CMN_ERR_21	( line {lineNum} ) - Error parsing R/L/C section. Missing '=' <i>The character '=' was expected but not found</i>
E1922	CMN_ERR_22	( line {lineNum} ) - Illegal number found '{text}' <i>An invalid numeric value was found</i>
E1923	CMN_ERR_23	( line {lineNum} ) - Numerical value expected <i>A number was expected but not found</i>
E1924	CMN_ERR_24	File Name '{fileName}' requires a '{extension}' Extension. <i>A particular file type requires a particular extension</i>
E1925	CMN_ERR_25	File Name '{fileName}' has a Stem length {stemLen} which is longer than {maxLen} characters. <i>The stem of a fileName was found to be longer than the maximum allowed</i>
E1926	CMN_ERR_26	File Name '{fileName}' has an absolute path. File paths should be relative.

Code	Symbol	Message/Comments
		<i>Filenames cannot have an absolute filepath</i>
<b>E1927</b>	CMN_ERR_27	File Name '{fileName}' has an illegal character with ASCII code {asciicode} <i>The fileName was found to have an illegal character</i>
<b>E1928</b>	CMN_ERR_28	File Name '{fileName}' has an illegal character sequence '{charasequence}' <i>The fileName was found to contain an illegal character sequence</i>
<b>E1929</b>	CMN_ERR_29	File Name '{fileName}' has a zero length Stem <i>The fileName has no stem</i>

## 4.5 MESSAGE CODES 2000 TO 2499

Code	Symbol	Message/Comments
E2000	WVFRM_ERR_0	( line {lineNum} ) - More than 100 {rowType}s are defined
B2001	WVFRM_ERR_1	Should Not Be Here: {sourceFile},{sourceLinenum} <i>The code has a bug</i>
B2002	WVFRM_ERR_2	Unable to Parse {errorString}: {sourceFile} {sourceLinenum} <i>A generic error message which indicates that a parsing error related to</i>
E2003	WVFRM_ERR_3	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For {paramName}: Expecting {numberOfItemsExpected} <i>The sub parameter should have had items on the keyword line but only number of data items were found</i>
E2004	WVFRM_ERR_4	{fixtureName} Not Defined For {waveName} Waveform Beginning on Line {lineNum} <i>Fixture (R_fixture; V_fixture) was not defined for waveform defined on line</i>
E2005	WVFRM_ERR_5	Require at least 2 Data Points for {waveName} Waveform Beginning at Line {lineNum} <i>The waveform defined on line contains less than 2 points</i>
E2006	WVFRM_ERR_6	{First Last} {Typ Min Max} Value Cannot Be 'NA' for {waveName} Waveform Beginning at Line {lineNum} <i>A general message indicating that the (the first or the last) (typValue; min or max) value for the waveform defined on line cannot be NA</i>
E2007	WVFRM_ERR_7	First {Typ Min Max} Value should be the same as the Last for {waveName} Waveform Beginning at Line {lineNum} <i>The first (typValue; minValue; max) value should be the same as the last value for the waveform (GND_Pulse or POWER_Pulse) defined on line</i>
W2008	WVFRM_ERR_8	Found some {waveName} ({Typ Min Max}) offsets less than 0 for Table Beginning at Line {lineNum} <i>The waveform (GND Pulse Table) defined on line has some offsets less than 0</i>
W2009	WVFRM_ERR_9	Found some {waveName} ({Typ Min Max}) offsets greater than 0 for Table Beginning at Line {lineNum} <i>The waveform (POWER Pulse Table) defined on line has some offsets greater than 0</i>
E2010	WVFRM_ERR_10	( line {lineNum} ) - SubParameters are not allowed in Golden Waveforms <i>No fixture or dut subparams can be specified for Golden Waveforms</i>
E2011	WVFRM_ERR_11	( line {lineNum} ) - Unknown Line Among {waveName} Data <i>A line was found in the Waveform which does not seem to be a valid line</i>
B2012	WVFRM_ERR_12	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>
E2013	WVFRM_ERR_13	( line {lineNum} ) - {subparam} specified after beginning of timing data

Code	Symbol	Message/Comments
		<i>A sub param was found after timing data was already specified</i>
<b>E2014</b>	WVFRM_ERR_14	( line {lineNum} ) - Duplicate definition for {keyword} {subparam} <i>The sub parameter was multiply defined in waveform</i>
<b>E2015</b>	WVFRM_ERR_15	( line {lineNum} ) - Invalid {keyword} line <i>A data line has a syntax error in waveform</i>
<b>W2016</b>	WVFRM_ERR_16	( line {lineNum} ) - Suspicious {waveName} {paramName} Value ('{actualValue}'), Numeric in Scale <i>The numeric value for parameter of waveform was somewhat incorrect ( possibly in the scale factor)</i>
<b>E2017</b>	WVFRM_ERR_17	( line {lineNum} ) - Invalid {waveName} Value ('{badValue}') <i>A bad numeric value was found in waveform</i>
<b>E2018</b>	WVFRM_ERR_18	( line {lineNum} ) - More than {maxPoints} data points provided for {waveName} table <i>More than data points were sepcified for waveform</i>
<b>E2019</b>	WVFRM_ERR_19	'NA' not allowed for {lineNum} value <i>The Time value in a wavefrom cannot have a value which is NA</i>
<b>E2020</b>	WVFRM_ERR_20	( line {lineNum} ) - Time value did not increase <i>The Time values should always increase in a waveform</i>
<b>C2021</b>	WVFRM_ERR_21	Model {modelName}: {Rise Fall} Waveform [{waveNumber}] and its Composite Current don't have identical time points <i>The 'Rising' or 'Falling' waveform occurrence for model does not have identical timepoints with its [Composite Current] waveform</i>
<b>B2100</b>	STRING_ERR_0	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>
<b>B2101</b>	STRING_ERR_1	Should not be here {sourceFile} {sourceLinenum} <i>The code has a bug</i>
<b>B2200</b>	TESTLOAD_ERR_0	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>
<b>B2201</b>	TESTLOAD_ERR_1	Unable to get IBIS structure <i>Program data structures are corrupt</i>
<b>E2202</b>	TESTLOAD_ERR_2	( line {lineNum} ) - Orphan Test Load keyword. <i>A [Test Load] keyword was found where not expected</i>
<b>E2203</b>	TESTLOAD_ERR_3	( line {lineNum} ) - Orphan data line keyword. <i>A data line for a [Test Load] keyword was found when no [Test Load] section was active</i>
<b>B2204</b>	TESTLOAD_ERR_4	{sourceFile}:{sourceLinenum}:Illegal keyword. <i>Program data structures are corrupt in program file</i>
<b>E2205</b>	TESTLOAD_ERR_5	( line {lineNum} ) - Orphan Data line.



Code	Symbol	Message/Comments
		<i>A data line for a [Test Load] keyword was found when no [Test Load] section was active</i>
<b>B2206</b>	TESTLOAD_ERR_6	Unable to eat keyword : {sourceFile} {sourceLinenum} <i>The code has a bugwhen trying to parse Testload</i>
<b>E2207</b>	TESTLOAD_ERR_7	Unable to Save Test Load Name <i>The code could not allocate the required memory</i>
<b>E2208</b>	TESTLOAD_ERR_8	( line {lineNum} ) - 'Test Load' Keyword Missing name <i>The name was not specified on the [Test Load] keyword line</i>
<b>E2209</b>	TESTLOAD_ERR_9	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For Keyword {keyword}: Expecting {numberOfItemsExpected} <i>The keyword should have had items on the keyword line but only number of data items were found</i>
<b>E2210</b>	TESTLOAD_ERR_10	( line {lineNum} ) - Test Load Name Over {maxLength} Characters Long <i>The name specified on the [Test Load] line is greater than (109) characters</i>
<b>E2211</b>	TESTLOAD_ERR_11	( line {lineNum} ) - Invalid Test Load Name ('{name}'), Reserved Word. <i>A reserved word was used as the name for a [Test Load] section name</i>
<b>E2212</b>	TESTLOAD_ERR_12	( line {lineNum} ) - TestLoad Name Previously Defined ('{name}') <i>A [Test Load] section with name is already defined</i>
<b>B2213</b>	TESTLOAD_ERR_13	Unable to Parse {text}: {sourceFile} {sourceLinenum} <i>A generic error message which indicates that a parsing error related to</i>
<b>E2214</b>	TESTLOAD_ERR_14	( line {lineNum} ) - Unknown Line Among Test Load <i>A line was found in the [Test Load] section wich was not a valid line</i>
<b>B2215</b>	TESTLOAD_ERR_15	Should Not Be Here: {sourceFile},{sourceLinenum} <i>The code has a bug</i>
<b>E2216</b>	TESTLOAD_ERR_16	( line {lineNum} ) - {Test_load_type} Already Defined For Test Load '{testloadName}' <i>The Test_load_type is already defined for [Test Load]</i>
<b>E2217</b>	TESTLOAD_ERR_17	( line {lineNum} ) - '{Test_load_type}' Subparameter Missing Setting <i>The value for the 'Test_load_type' subparam is missing</i>
<b>E2218</b>	TESTLOAD_ERR_18	( line {lineNum} ) - Invalid {Test_load_type} Line <i>There is a syntax error on the 'Test_load_type' data line</i>
<b>E2219</b>	TESTLOAD_ERR_19	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For {paramName}: Expecting {numberOfItemsExpected} <i>The sub parameter should have had items on the keyword line but only number of data items were found</i>
<b>E2220</b>	TESTLOAD_ERR_20	( line {lineNum} ) - Invalid {subparam/keyword} ('{badValue}') (try '{optionslist}')

Code	Symbol	Message/Comments
		<i>A generic error message which indicates that a wrong value was specified for a particular . The user must specify from one of the</i>
E2221	TESTLOAD_ERR_21	( line {lineNum} ) - Invalid {Test_load_type} ('{badValue}') <i>The Test_load_type has an illegal value</i>
E2222	TESTLOAD_ERR_22	( line {lineNum} ) - {name} Name Over {maxLength} Characters Long <i>UNUSED,The Test Load subparam has a value which is more than characters long</i>
E2223	TESTLOAD_ERR_23	( line {lineNum} ) - Invalid {name} ('{badValue}'), Reserved Word. <i>The Test Load subparam has an illegal value</i>
E2224	TESTLOAD_ERR_24	Test Load '{testloadName}': {Test_load_type} Not Defined <i>In the [Test Load] ; the Test_load_type is not defined</i>
E2225	TESTLOAD_ERR_25	Test Load '{testloadName}': If Td is specified then Zo must be specified also <i>In the [Test Load] since Td is specified; then Zo must also be specified</i>
E2226	TESTLOAD_ERR_26	Test Load '{testloadName}': V_term1 must be specified when Rp1_near or Rp1_far is specified <i>In the [Test Load] since Rp1_near or Rp1_far are specified; V_term1 should be specified also</i>
E2227	TESTLOAD_ERR_27	Test Load '{testloadName}': V_term2 must be specified when Rp2_near or Rp2_far is specified <i>In the [Test Load] since Rp2_near or Rp2_far are specified; V_term2 should be specified also</i>
W2228	TESTLOAD_ERR_28	Test Load '{testloadName}': R_diff_near specified for Test_load_type which is not Differential <i>In the [Test Load] which is not of type Differential; R_diff_near should not be specified</i>
W2229	TESTLOAD_ERR_29	Test Load '{testloadName}': R_diff_far specified for Test_load_type which is not Differential <i>In the [Test Load] which is not of type Differential; R_diff_far should not be specified</i>
W2230	TESTLOAD_ERR_30	Test Load '{testloadName}': Receiver_model_inv specified for Test_load_type which is not Differential <i>In the [Test Load] which is not of type Differential; Receiver_model_inv should not be specified</i>
B2231	TESTLOAD_ERR_31	{sourceFile}:{sourceLinenum}:Unable to get IBIS? <i>Program data structures are corrupt in program file</i>
E2232	TESTLOAD_ERR_32	Test Load '{name}' references undefined models <i>The Test Load references undefined models</i>
E2233	TESTLOAD_ERR_33	Receiver_model '{rcvrModel}' in Test Load '{testloadName}' is not defined in the file

Code	Symbol	Message/Comments
W2234	TESTLOAD_ERR_34	Driver_model '{rcvrModel}' in Test Load '{testloadName}' is not an input type. <i>NOTE: Driver_model actually needs to be a Receiver_model</i>
E2235	TESTLOAD_ERR_35	Receiver_model_inv '{rcvrModel}' in Test Load '{testloadName}' is not defined in the file
W2236	TESTLOAD_ERR_36	Receiver_model_inv '{rcvrModel}' in Test Load '{testloadName}' is not associated with a Differential Pin.
E2237	TESTLOAD_ERR_37	( line {lineNum} ) - {subparam} Already Defined For Test Load
E2238	TESTLOAD_ERR_38	( line {lineNum} ) - Invalid {subparam} Value ('{value}')
E2239	TESTLOAD_ERR_39	( line {lineNum} ) - 'NA' Not Allowed For Typical Value <i>The typical value in a Range cannot be NA</i>
B2300	TESTDATA_ERR_0	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>
B2301	TESTDATA_ERR_1	Unable to get IBIS structure <i>Program data structures are corrupt</i>
E2302	TESTDATA_ERR_2	( line {lineNum} ) - Orphan Test Data keyword.
E2303	TESTDATA_ERR_3	( line {lineNum} ) - Orphan data line keyword.
E2304	TESTDATA_ERR_4	( line {lineNum} ) - [Rising Waveform Near] Already Defined
E2305	TESTDATA_ERR_5	( line {lineNum} ) - [Falling Waveform Near] Already Defined
E2306	TESTDATA_ERR_6	( line {lineNum} ) - [Rising Waveform Far] Already Defined
E2307	TESTDATA_ERR_7	( line {lineNum} ) - [Falling Waveform Far] Already Defined
E2308	TESTDATA_ERR_8	( line {lineNum} ) - [Diff Rising Waveform Near] Already Defined
E2309	TESTDATA_ERR_9	( line {lineNum} ) - [Diff Falling Waveform Near] Already Defined
E2310	TESTDATA_ERR_10	( line {lineNum} ) - [Diff Rising Waveform Far] Already Defined

Code	Symbol	Message/Comments
E2311	TESTDATA_ERR_11	( line {lineNum} ) - [Diff Falling Waveform Far] Already Defined
B2312	TESTDATA_ERR_12	{sourceFile}:{sourceLinenum}:Illegal keyword. <i>Program data structures are corrupt in program file</i>
E2313	TESTDATA_ERR_13	( line {lineNum} ) - Orphan Data line.
B2314	TESTDATA_ERR_14	Unable to eat keyword : {sourceFile} {sourceLinenum}
E2315	TESTDATA_ERR_15	Unable to Save Test Data Name
E2316	TESTDATA_ERR_16	( line {lineNum} ) - 'Test Data' Keyword Missing name
E2317	TESTDATA_ERR_17	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For Keyword {keyword}: Expecting {numberOfItemsExpected} <i>The keyword should have had items on the keyword line but only number of data items were found</i>
E2318	TESTDATA_ERR_18	( line {lineNum} ) - Test Data Name Over {maxChars} Characters Long
E2319	TESTDATA_ERR_19	( line {lineNum} ) - Invalid Test Data Name ('{name}'), Reserved Word.
E2320	TESTDATA_ERR_20	( line {lineNum} ) - TestData Name Previously Defined ('{name}')
B2321	TESTDATA_ERR_21	Unable to Parse {text}: {sourceFile} {sourceLinenum} <i>A generic error message which indicates that a parsing error related to</i>
E2322	TESTDATA_ERR_22	( line {lineNum} ) - Unknown Line Among Test Data <i>A line was found in the [Test Data] section wich was not a valid line</i>
B2323	TESTDATA_ERR_23	Should Not Be Here: {sourceFile},{sourceLinenum} <i>The code has a bug</i>
E2324	TESTDATA_ERR_24	{lineNum} Already Defined For Test Data '{keyword}'
E2325	TESTDATA_ERR_25	( line {lineNum} ) - '{subparam}' Subparameter Missing Setting
E2326	TESTDATA_ERR_26	( line {lineNum} ) - Invalid {subparam} Line
E2327	TESTDATA_ERR_27	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For {paramName}: Expecting {numberOfItemsExpected}

Code	Symbol	Message/Comments
		<i>The sub parameter should have had items on the keyword line but only number of data items were found</i>
<b>E2328</b>	TESTDATA_ERR_28	( line {lineNum} ) - Invalid {subparam/keyword} ('{badValue}') (try '{optionList}')
		<i>A generic error message which indicates that a wrong value was specified for a particular . The user must specify from one of the</i>
<b>E2329</b>	TESTDATA_ERR_29	( line {lineNum} ) - Invalid {subparam} ('{value}')
<b>E2330</b>	TESTDATA_ERR_30	( line {lineNum} ) - {subparam} Name Over {maxChars} Characters Long
<b>B2331</b>	TESTDATA_ERR_31	Invalid {sourceFile} ('{sourceLinenum}'), Reserved Word.
<b>E2332</b>	TESTDATA_ERR_32	Test Data '{testdataName}': {testdataType} Not Defined
<b>E2333</b>	TESTDATA_ERR_33	Test Data '{testdataName}': Driver_model_inv can only be specified with Differential Test_data_type
<b>E2334</b>	TESTDATA_ERR_34	Test Data '{testdataName}': At least one Rising/Falling Waveform must be specified
<b>E2335</b>	TESTDATA_ERR_35	Test Data '{testdataName}': Differential Rising/Falling Waveform can be specified only with Differential Test_data_type
<b>B2336</b>	TESTDATA_ERR_36	{sourceFile}:{sourceLinenum}:Unable to get IBIS? <i>Program data structures are corrupt in program file</i>
<b>E2337</b>	TESTDATA_ERR_37	Test Data '{testdataName}' references undefined models
<b>E2338</b>	TESTDATA_ERR_38	Driver_model '{modelName}' in Test Data '{testdataName}' is not defined in the file
<b>W2339</b>	TESTDATA_ERR_39	Driver_model '{modelName}' in Test Data '{testdataName}' is not an output type.
<b>E2340</b>	TESTDATA_ERR_40	Driver_model_inv '{modelName}' in Test Data '{testdataName}' is not defined in the file
<b>W2341</b>	TESTDATA_ERR_41	Driver_model_inv '{modelName}' in Test Data '{testdataName}' is not associated with a Differential Pin.

Code	Symbol	Message/Comments
E2342	TESTDATA_ERR_42	Test Data '{testdataName}' references undefined Test Loads
E2343	TESTDATA_ERR_43	Test Load '{testloadName}' referenced in Test Data '{testdataName}' is not defined in the file
E2344	TESTDATA_ERR_44	Test_data_type in Test Data '{testdataName}' is not the same as Test_load_type in referenced Test Load '{testloadName}'
B2400	SUBMDL_ERR_0	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>
B2401	SUBMDL_ERR_1	Unable to get IBIS structure {sourceFile} {sourceLinenum} <i>Program data structures are corrupt</i>
E2402	SUBMDL_ERR_2	( line {lineNum} ) - Orphan Sub Model keyword.
E2403	SUBMDL_ERR_3	( line {lineNum} ) - Orphan data line keyword.
E2404	SUBMDL_ERR_4	( line {lineNum} ) - [GND Pulse Table] Already Defined
E2405	SUBMDL_ERR_5	( line {lineNum} ) - [POWER Pulse Table] Already Defined
E2406	SUBMDL_ERR_6	( line {lineNum} ) - [Submodel Spec] should be specified before other keywords for a model
B2407	SUBMDL_ERR_7	Should Not Be Here: {sourceFile},{sourceLinenum} <i>The code has a bug</i>
B2408	SUBMDL_ERR_8	Unable to eat keyword : {sourceFile} {sourceLinenum}
E2409	SUBMDL_ERR_9	Unable to Save Sub Model Name
E2410	SUBMDL_ERR_10	( line {lineNum} ) - 'Sub Model' Keyword Missing name
E2411	SUBMDL_ERR_11	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For Keyword {keyword}: Expecting {numberOfItemsExpected} <i>The keyword should have had items on the keyword line but only number of data items were found</i>
E2412	SUBMDL_ERR_12	( line {lineNum} ) - Sub Model Name Over {maxChars} Characters Long

Code	Symbol	Message/Comments
E2413	SUBMDL_ERR_13	( line {lineNum} ) - Invalid Sub Model Name ('{submodelName}'), Reserved Word.
E2414	SUBMDL_ERR_14	( line {lineNum} ) - SubModel Name Previously Defined ('{submodelName}')
B2415	SUBMDL_ERR_15	Unable to Parse {text}: {sourceFile} {sourceLinenum} <i>A generic error message which indicates that a parsing error related to</i>
E2416	SUBMDL_ERR_16	( line {lineNum} ) - Unknown Line Among Sub Model Data <i>A line was found in the [Sub Model] section wich was not a valid line</i>
E2417	SUBMDL_ERR_17	{lineNum} Already Defined For Submodel '{submodelName}'
E2418	SUBMDL_ERR_18	'{lineNum}' Subparameter Missing Setting
E2419	SUBMDL_ERR_19	Invalid {lineNum} Line
E2420	SUBMDL_ERR_20	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For {paramName}: Expecting {numberOfItemsExpected} <i>The sub parameter should have had items on the keyword line but only number of data items were found</i>
E2421	SUBMDL_ERR_21	Invalid {lineNum} ('{type}') (try '{optionList}') <i>A generic error message which indicates that a wrong value was specified for a particular . The user must specify from one of the</i>
E2422	SUBMDL_ERR_22	Invalid {lineNum} ('{type}')
E2423	SUBMDL_ERR_23	Submodel '{submodelName}': '{Submodel_type}' Not Defined
E2424	SUBMDL_ERR_24	Submodel {submodelName}: [Submodel Spec] is required when Submodel_type is Bus_hold
E2425	SUBMDL_ERR_25	Submodel {submodelName}: [Submodel Spec] V_trigger_r is required when Submodel_type is Bus_hold
E2426	SUBMDL_ERR_26	Submodel {submodelName}: [Submodel Spec] V_trigger_f is required when Submodel_type is Bus_hold
E2427	SUBMDL_ERR_27	SubModel {submodelName}: Both Pullup and Pulldown cannot be specified when Off_delay is specified.

Code	Symbol	Message/Comments
E2428	SUBMDL_ERR_28	Submodel {submodelName}: [Ramp] is required when Submodel_type is Bus_hold
E2429	SUBMDL_ERR_29	Submodel {submodelName}: Either [Pullup] or [Pulldown] is required when Submodel_type is Bus_hold
E2430	SUBMDL_ERR_30	Submodel {submodelName}: [Submodel Spec] V_trigger_f is required when GND_Pulse is specified
E2431	SUBMDL_ERR_31	Submodel {submodelName}: [Submodel Spec] V_trigger_r is required when POWER_Pulse is specified
E2432	SUBMDL_ERR_32	Submodel {submodelName}: GND Pulse Table or POWER Pulse Table or GND Clamp or POWER Clamp is required when Submodel_type is Dynamic_clamp
E2433	SUBMDL_ERR_33	Submodel {submodelName}: [Submodel Spec] Off_delay cannot be specified with Dynamic_clamp submodels
E2434	SUBMDL_ERR_34	Submodel {submodelName}: [Submodel Spec] is required when Submodel_type is Fall_back
E2435	SUBMDL_ERR_35	Submodel {submodelName}: [Submodel Spec] V_trigger_r is required when Submodel_type is Fall_back
E2436	SUBMDL_ERR_36	Submodel {submodelName}: [Submodel Spec] V_trigger_f is required when Submodel_type is Fall_back
E2437	SUBMDL_ERR_37	Submodel {submodelName}: Either [Pullup] or [Pulldown] is required when Submodel_type is Fall_back
E2438	SUBMDL_ERR_38	Submodel {submodelName}: Pullup and Pulldown cannot both be specified with Fall_back submodels
E2439	SUBMDL_ERR_39	Submodel {submodelName}: [Ramp] is required when Submodel_type is Fall_back
E2440	SUBMDL_ERR_40	Submodel {submodelName}: [Submodel Spec] Off_delay cannot be specified with Fall_back submodels



Code	Symbol	Message/Comments
W2441	SUBMDL_ERR_41	Submodel {submodelName}: V_trigger_r ({Typ Min Max}) is less than the start of Rising Waveform
W2442	SUBMDL_ERR_42	Submodel {submodelName}: V_trigger_r ({Typ Min Max}) is greater than the end of Rising Waveform
W2443	SUBMDL_ERR_43	Submodel {submodelName}: V_trigger_f ({Typ Min Max}) is greater than the start of Falling Waveform
W2444	SUBMDL_ERR_44	Submodel {submodelName}: V_trigger_f ({Typ Min Max}) is less than the end of Falling Waveform
E2445	SUBMDL_ERR_45	SubModel {submodelName} has [Initial Delay] sub parameter {subparam} specified but it has no {section}
		<i>SubModel has [Initial Delay] sub-parametr (V-T, I-T) specified but the corresponding [Rising/Falling Waveform] or [Composite Current] is missing</i>

## 4.6 MESSAGE CODES 2500 TO 2999

Code	Symbol	Message/Comments
E2500	SSWCH_ERR_0	( line {lineNum} ) - Unknown sub parameter '{subparam}'
E2501	SSWCH_ERR_1	( line {lineNum} ) - Unable to add Series_Switch_Groups. <i>Internal memory allocation error</i>
E2502	SSWCH_ERR_2	( line {lineNum} ) - No Group names specified on this line
E2503	SSWCH_ERR_3	( line {lineNum} ) - Unable to allocate new Series Switch Group name. <i>Memory allocation for a Series Switch Group name failed while trying to parse a [Series Switch] section</i>
E2504	SSWCH_ERR_4	( line {lineNum} ) - Series switch Group name '{groupName}' over {maxChars} characters long
E2505	SSWCH_ERR_5	( line {lineNum} ) - Series switch Group name cannot be 'On' or 'Off'
E2506	SSWCH_ERR_6	( line {lineNum} ) - Duplicate Series switch Group name '{groupName}'
W2507	SSWCH_ERR_7	Component: {compName} Series Switch Function '{function}' is used but not defined
E2600	SSWCH_ERR_8	( line {lineNum} ) - Unable to allocate new SSWCH. <i>Memory allocation for a Series Switch failed while trying to parse a [Series Switch] section</i>
E2601	SPINMPG_ERR_0	( line {lineNum} ) - Extra data columns on this line.
E2602	SPINMPG_ERR_1	( line {lineNum} ) - No Pin1 specified. <i>The data line in a [Series Pin Mapping] section has no Pin1 specified</i>
E2603	SPINMPG_ERR_2	( line {lineNum} ) - No Pin2 specified. <i>The data line in a [Series Pin Mapping] section has no Pin2 specified</i>
E2604	SPINMPG_ERR_3	( line {lineNum} ) - No Model specified. <i>The data line in a [Series Pin Mapping] section has no Model specified</i>
E2605	SPINMPG_ERR_4	( line {lineNum} ) - [Series Pin Mapping] Data lines must contain either 3 or 4 columns. <i>The data line in a [Series Pin Mapping] section should have 3 values ( if no function group is specified ) or 4 values (if a function group is specified)</i>
E2606	SPINMPG_ERR_5	( line {lineNum} ) - [Series Pin Mapping] When 4 columns are specified, the heading 'function_table_group' must be used.

Code	Symbol	Message/Comments
		<i>If a data line in a [Series Pin Mapping] section has 4 values then the keyword line should also have the heading function_table_group defined</i>
<b>B2607</b>	SPINMPG_ERR_6	{sourceFile}:{sourceLinenum}:Unable to get IBIS?  <i>Program data structures are corrupt in program file</i>
<b>E2608</b>	SPINMPG_ERR_7	Component '{compName}': [Series Pin Mapping] Pin1 '{pinName}' not previously declared in Pin section.  <i>The Pin1 referred to in the [Series Pin Mapping] section of Component was not defined in the [Pin] section of the component</i>
<b>E2609</b>	SPINMPG_ERR_8	Component '{compName}': [Series Pin Mapping] Pin1 '{pinName}' has an unknown model.  <i>UNUSED</i>
<b>E2610</b>	SPINMPG_ERR_9	Component '{compName}': [Series Pin Mapping] Pin1 '{pinName}' has model '{model}' which neither TERMINATOR nor NC.  <i>UNUSED,The Pin1 referred to in the [Series Pin Mapping] section of Component has a model type which is neither Terminator nor NC</i>
<b>E2611</b>	SPINMPG_ERR_10	Component '{compName}': [Series Pin Mapping] Pin1 '{pinName}' has Model '{model}' with unknown type.  <i>UNUSED</i>
<b>E2612</b>	SPINMPG_ERR_11	Component '{compName}': [Series Pin Mapping] Pin2 '{pinName}' not previously declared in Pin section.  <i>The Pin2 referred to in the [Series Pin Mapping] section of Component was not defined in the [Pin] section of the component</i>
<b>E2613</b>	SPINMPG_ERR_12	Component '{compName}': [Series Pin Mapping] Pin2 '{pinName}' has an unknown model.  <i>UNUSED</i>
<b>E2614</b>	SPINMPG_ERR_13	Component '{compName}': [Series Pin Mapping] Pin2 '{pinName}' has model '{model}' which neither TERMINATOR nor NC.  <i>UNUSED,The Pin2 referred to in the [Series Pin Mapping] section of Component has a model type which is neither Terminator nor NC</i>
<b>E2615</b>	SPINMPG_ERR_14	Component '{compName}': [Series Pin Mapping] Pin2 '{pinName}' has Model '{modelName}' with unknown type.  <i>UNUSED,The Pin2 referred to in the [Series Pin Mapping] section of Component has a model whose type is not known</i>
<b>E2616</b>	SPINMPG_ERR_15	Component '{compName}': [Series Pin Mapping] Pin1 '{pinName}': model type cannot be Series or Series_switch.  <i>UNUSED,The Pin1 referred to in the [Series Pin Mapping] section of Component has an illegal model type (Series or Series_switch)</i>
<b>E2617</b>	SPINMPG_ERR_16	Component '{compName}': [Series Pin Mapping] Pin2 '{pinName}': model type cannot be Series or Series_switch.  <i>UNUSED,The Pin2 referred to in the [Series Pin Mapping] section of Component has an illegal model type (Series or Series_switch)</i>

Code	Symbol	Message/Comments
E2618	SPINMPG_ERR_17	Component '{compName}': [Series Pin Mapping] Model '{modelName}' is not defined. <i>The model referenced in the [Series Pin Mapping] of component is not defined</i>
E2619	SPINMPG_ERR_18	Component '{compName}': [Series Pin Mapping] defined but [Pins] not defined. <i>The component has a [Series Pin Mapping] section but no associated [Pin] section</i>
E2620	SPINMPG_ERR_19	( line {lineNum} ) - Unable to alloc new Series_Pin_Mapping. <i>Internal memory allocation error</i>
E2621	SPINMPG_ERR_20	Component '{compName}': [Series Pin Mapping] Model Selector '{modelSelectorName}' Model '{modelName}' is not of type Series_Switch. <i>The model selector name referenced in the [Series Pin Mapping] section of component refers to a model which is not of type Series_switch</i>
E2622	SPINMPG_ERR_21	Component '{compName}': [Series Pin Mapping] Model '{modelName}' is not of type Series_Switch. <i>The model referenced in the [Series Pin Mapping] section of component is not of type Series_switch</i>
E2623	SPINMPG_ERR_22	Component '{compName}': [Series Pin Mapping] Model Selector '{modelSelectorName}' Model '{modelName}' is not of type Series. <i>The model selector name referenced in the [Series Pin Mapping] section of component refers to a model which is not of type Series_switch</i>
E2624	SPINMPG_ERR_23	Component '{compName}': [Series Pin Mapping] Model '{modelName}' is not of type Series. <i>The model referenced in the [Series Pin Mapping] section of component is not of type Series</i>
W2625	SPINMPG_ERR_24	Component '{compName}': [Series Pin Mapping] Model Selector '{modelSelectorName}' Model '{modelName}' is of type Series so function_table_group '{groupName}' is ignored.
W2626	SPINMPG_ERR_25	Component '{compName}': [Series Pin Mapping] Model '{modelName}' is of type Series so function_table_group '{groupName}' is ignored.
E2627	SPINMPG_ERR_26	Component '{compName}': [Series Pin Mapping] Model Selector '{modelSelectorName}' Model '{modelName}' is of type Series_Switch so function_table_group is required.
E2628	SPINMPG_ERR_27	Component '{compName}': [Series Pin Mapping] Model '{modelName}' is of type Series_Switch so function_table_group is required.
E2629	SPINMPG_ERR_28	Component '{compName}': [Series Pin Mapping] Model Selector '{modelSelectorName}' Model '{modelName}' uses function {function} which is not defined.

Code	Symbol	Message/Comments
E2630	SPINMPG_ERR_29	Component '{compName}': [Series Pin Mapping] Model '{modelName}' uses function {function} which is not defined.
E2631	SPINMPG_ERR_30	Component '{compName}': [Series Pin Mapping] Model Selector '{modelSelectorName}' Model '{modelName}' is of unknown type. <i>The model selector name referenced in the [Series Pin Mapping] section of component refers to a model whose model type is not known</i>
E2632	SPINMPG_ERR_31	Component '{compName}': [Series Pin Mapping] Model '{modelName}' is of unknown type. <i>The model referenced in the [Series Pin Mapping] section of component is of unknown model type</i>
E2700	SMSPEC_ERR_0	( line {lineNum} ) - Sub Model Specification: Already Defined for this sub model
B2701	SMSPEC_ERR_1	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>
B2702	SMSPEC_ERR_2	Should Not Be Here: {sourceFile},{sourceLinenum} <i>The code has a bug</i>
B2703	SMSPEC_ERR_3	Unable to Parse {text}: {sourceFile} {sourceLinenum} <i>A generic error message which indicates that a parsing error related to</i>
E2704	SMSPEC_ERR_4	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For {paramName}: Expecting {numberOfItemsExpected} <i>The sub parameter should have had items on the keyword line but only number of data items were found</i>
E2705	SMSPEC_ERR_5	Submodel {submodelName}: Empty Submodel Spec <i>The [Submodel Spec] of submodel has no data defined</i>
E2706	SMSPEC_ERR_6	( line {lineNum} ) - Unknown Line Among Sub Model Spec Data <i>A line was found in the [Sub Model Spec] section wich was not a valid line</i>
E2707	SMSPEC_ERR_7	( line {lineNum} ) - {range} Already Defined For Submodel '{submodelName}' <i>The range (V_trigger_r; V_triggrer_f or Off_delay) was multiply defined for submodel</i>
E2708	SMSPEC_ERR_8	( line {lineNum} ) - 'NA' not allowed for Typical value <i>The typical value in a Range cannot be NA</i>
W2709	SMSPEC_ERR_9	{value1}({corner1}) is not less than {value2}({corner2}) for Model Spec defined on line {lineNum} <i>UNUSED</i>
E2800	SMOS_ERR_0	( line {lineNum} ) - More than 100 [Series_MOSFET]s are defined
B2801	SMOS_ERR_1	Should Not Be Here: {sourceFile},{sourceLinenum} <i>The code has a bug</i>

Code	Symbol	Message/Comments
<b>B2802</b>	SMOS_ERR_2	Unable to Parse {text}: {sourceFile} {sourceLinenum} <i>A generic error message which indicates that a parsing error related to</i>
<b>E2803</b>	SMOS_ERR_3	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For {paramName}: Expecting {numberOfItemsExpected} <i>The sub parameter should have had items on the keyword line but only number of data items were found</i>
<b>E2804</b>	SMOS_ERR_4	Model {modelName}: Vds not specified for [Series MOSFET] defined on line {lineNum} <i>Vds was not specified in the [Series MOSFET] section defined on line for model</i>
<b>E2805</b>	SMOS_ERR_5	Model {modelName}: Vds should be >= 0 for [Series MOSFET] defined on line {lineNum} <i>The Vds specified in the [Series MOSFET] section defined on line for model has a value which is less than 0</i>
<b>E2806</b>	SMOS_ERR_6	Model {modelName} {keyword}: Found two Series_MOSFETs with identical Vds value {Vds}
<b>E2807</b>	SMOS_ERR_7	( line {lineNum} ) - Unknown data line in Series_MOSFET
<b>E2808</b>	SMOS_ERR_8	( line {lineNum} ) - Vds is already defined <i>Vds was specified more than once in a [Series MOSFET] section</i>
<b>B2809</b>	SMOS_ERR_9	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>
<b>E2810</b>	SMOS_ERR_10	( line {lineNum} ) - Invalid {Vds} Line
<b>E2811</b>	SMOS_ERR_11	Invalid {lineNum} Value ('{value}')
<b>E2900</b>	SINFO_ERR_0	( line {lineNum} ) - {On Off} Series Info: Already Defined for this model
<b>B2901</b>	SINFO_ERR_1	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>
<b>B2902</b>	SINFO_ERR_2	Should Not Be Here: {sourceFile},{sourceLinenum} <i>The code has a bug</i>
<b>B2903</b>	SINFO_ERR_3	Unable to Parse {text}: {sourceFile} {sourceLinenum} <i>A generic error message which indicates that a parsing error related to</i>
<b>E2904</b>	SINFO_ERR_4	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For {paramName}: Expecting {numberOfItemsExpected} <i>The sub parameter should have had items on the keyword line but only number of data items were found</i>

Code	Symbol	Message/Comments
E2905	SINFO_ERR_5	Model {modelName} {On Off}: No series data found
E2906	SINFO_ERR_6	Model {modelName}: [Series_MOSFET] is not allowed in conjunction with the [Off] keyword
E2907	SINFO_ERR_7	Model {modelName} {On Off}: Rl_series cannot be specified if L_series is not specified
E2908	SINFO_ERR_8	Model {modelName} {On Off}: Rc_series cannot be specified if C_series is not specified
E2909	SINFO_ERR_9	Model {modelName} {On Off}: Lc_series cannot be specified if C_series is not specified

## 4.7 MESSAGE CODES 3000 TO 3499

Code	Symbol	Message/Comments
E3000	SECT_ERR_0	( line {lineNum} ) - Duplicate Len sub param in R/L/C section <i>There should be a single Len sub param in R/L/C section</i>
E3001	SECT_ERR_1	( line {lineNum} ) - Len should not be less than zero <i>The value of the Len subparam cannot be less than 0</i>
E3002	SECT_ERR_2	( line {lineNum} ) - Len should be specified before R <i>The Len subaparam should be defined before the R subparam</i>
E3003	SECT_ERR_3	( line {lineNum} ) - Duplicate R sub param in R/L/C section <i>There should be a single R subparam in an R/L/C section</i>
E3004	SECT_ERR_4	( line {lineNum} ) - R should not be less than zero <i>The value of the R subparam cannot be less than 0</i>
E3005	SECT_ERR_5	( line {lineNum} ) - Len should be specified before L <i>The Len subaparam should be defined before the L subparam</i>
E3006	SECT_ERR_6	( line {lineNum} ) - Duplicate L sub param in R/L/C section <i>There should be a single L subparam in an R/L/C section</i>
E3007	SECT_ERR_7	( line {lineNum} ) - L should not be less than zero <i>The value of the L subparam cannot be less than 0</i>
E3008	SECT_ERR_8	( line {lineNum} ) - Len should be specified before C <i>The Len subaparam should be defined before the C subparam</i>
E3009	SECT_ERR_9	( line {lineNum} ) - Duplicate C sub param in R/L/C section <i>There should be a single C subparam in an R/L/C section</i>
E3010	SECT_ERR_10	( line {lineNum} ) - C should not be less than zero <i>The value of the C subparam cannot be less than 0</i>
E3011	SECT_ERR_11	( line {lineNum} ) - Empty R/L/C section found
E3012	SECT_ERR_12	( line {lineNum} ) - L and C must be specified when Len != 0 <i>The L and C subparam are mandatory if the value of the Len subparam is non zero</i>
E3013	SECT_ERR_13	( line {lineNum} ) - Premature end of R/L/C section. Trailing '/' missing <i>An R/L?C section should be terminated with a trailing '/'</i>
B3014	SECT_ERR_14	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>
E3100	ROW_ERR_0	( line {lineNum} ) - Unable to find Pin in Package Model Pin_Number list.
E3101	ROW_ERR_1	( line {lineNum} ) - Repeated ROW .



Code	Symbol	Message/Comments
E3102	ROW_ERR_2	( line {lineNum} ) - Expected Pin at matrix row index {row},found at matrix row index {row}.
E3103	ROW_ERR_3	( line {lineNum} ) - Unable to convert row data.
W3104	ROW_ERR_4	( line {lineNum} ) - Suspicious row data.
E3105	ROW_ERR_5	( line {lineNum} ) - More row data than allowed for this row.
E3106	ROW_ERR_6	( line {lineNum} ) - Unable to add row data. <i>The code failed to allocate the required memory</i>
E3107	ROW_ERR_7	( line {lineNum} ) - Only {maxCols} columns of data allowed for this Row .
B3108	ROW_ERR_8	{sourceFile}:{sourceLinenum}:(uiNewColCount <= pLastRow->uiColumnCount
B3109	ROW_ERR_9	{sourceFile}:{sourceLinenum}:pRow->uiColumnCount > uiNewColumnCount
E3110	ROW_ERR_10	( line {lineNum} ) - No Column Index.
E3111	ROW_ERR_11	( line {lineNum} ) - This Row Column Index defines an entry in the lower matrix triangle.
B3112	ROW_ERR_12	{sourceFile}:{sourceLinenum}:(uiColIndex > pLastRow->uiColumnCount)
E3113	ROW_ERR_13	( line {lineNum} ) - Duplicate Row column index {columnIndex}.
E3114	ROW_ERR_14	( line {lineNum} ) - No row data.
E3115	ROW_ERR_15	( line {lineNum} ) - Excessive data ,only Index and Value should be specified for a Sparse_matrix.
E3116	ROW_ERR_16	Expected {lineNum} columns of Row data for [Row] {declaredColumns} in Matrix ending previous to this line,found {row} column{actualColumns}.
E3117	ROW_ERR_17	( line {lineNum} ) - Expected at least one column of Row data for [Row] {pinName} in Matrix ending previous to this line.

Code	Symbol	Message/Comments
E3118	ROW_ERR_18	( line {lineNum} ) - [Row] {pinName} must contain a self-coupled index and entry.
E3119	ROW_ERR_19	( line {lineNum} ) - Unable to add new matrix row.
E3120	ROW_ERR_20	( line {lineNum} ) - Unknown PIN NUMBER.
E3121	ROW_ERR_21	( line {lineNum} ) - PIN NUMBER string too long.
E3122	ROW_ERR_22	( line {lineNum} ) - Unable to add new matrix row,expected column count = 0.
E3123	ROW_ERR_23	( line {lineNum} ) - Unable to create pin entry array.
E3200	RCVTH_ERR_0	( line {lineNum} ) - Receiver Threshold: Already Defined for this model <i>There should be at most one [Receiver Thresholds] section in a model</i>
B3201	RCVTH_ERR_1	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>
B3202	RCVTH_ERR_2	Should Not Be Here: {sourceFile}, {sourceLinenum} <i>The code has a bug</i>
B3203	RCVTH_ERR_3	Unable to Parse {text}: {sourceFile} {sourceLinenum} <i>A generic error message which indicates that a parsing error related to</i>
E3204	RCVTH_ERR_4	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For {paramName}: Expecting {numberOfItemsExpected} <i>The sub parameter should have had items on the keyword line but only number of data items were found</i>
E3205	RCVTH_ERR_5	Model {modelName} Receiver Thresholds: Reference Supply must be specified when Threshold Sensitivity is specified <i>The Reference_supply parameter is mandatory when the Threshold_sensitivity parameter is specified in the [Receiver Thresholds] section but it is not so for Model</i>
W3206	RCVTH_ERR_6	Model {modelName} Receiver Thresholds: Vcross_low must be specified for differential receivers (Pin {pinName}) <i>The [Receiver Thresholds] section for Model does not have Vcross_low specified which is required for Pin which is a differential pin and associated with this model</i>
W3207	RCVTH_ERR_7	Model {modelName} Receiver Thresholds: Vcross_high must be specified for differential receivers (Pin {pinName}) <i>The [Receiver Thresholds] section for Model does not have Vcross_high specified which is required for Pin which is a differential pin and associated with this model</i>

Code	Symbol	Message/Comments
W3208	RCVTH_ERR_8	Model {modelName} Receiver Thresholds: Vdiff_ac must be specified for differential receivers (Pin {pinName})  <i>The [Receiver Thresholds] section for Model does not have Vdiff_ac specified which is required for Pin which is a differential pin and associated with this model</i>
W3209	RCVTH_ERR_9	Model {modelName} Receiver Thresholds: Vdiff_dc must be specified for differential receivers (Pin {pinName})  <i>The [Receiver Thresholds] section for Model does not have Vdiff_dc specified which is required for Pin which is a differential pin and associated with this model</i>
W3210	RCVTH_ERR_10	Model {modelName} Receiver Thresholds: Tdiffslew_ac must be specified for differential receivers (Pin {pinName})  <i>The [Receiver Thresholds] section for Model does not have Tdiffslew_ac specified which is required for Pin which is a differential pin and associated with this model</i>
W3211	RCVTH_ERR_11	Model {modelName} Receiver Thresholds: Vth must not be specified for differential receivers  <i>UNUSED,not used</i>
W3212	RCVTH_ERR_12	Model {modelName} Receiver Thresholds: Vth_min must not be specified for differential receivers  <i>UNUSED,not used</i>
W3213	RCVTH_ERR_13	Model {modelName} Receiver Thresholds: Vth_max must not be specified for differential receivers  <i>UNUSED,not used</i>
W3214	RCVTH_ERR_14	Model {modelName} Receiver Thresholds: Vinh_ac must not be specified for differential receivers  <i>UNUSED,not used</i>
W3215	RCVTH_ERR_15	Model {modelName} Receiver Thresholds: Vinl_ac must not be specified for differential receivers  <i>UNUSED,not used</i>
W3216	RCVTH_ERR_16	Model {modelName} Receiver Thresholds: Vinh_dc must not be specified for differential receivers  <i>UNUSED,not used</i>
W3217	RCVTH_ERR_17	Model {modelName} Receiver Thresholds: Vinl_dc must not be specified for differential receivers  <i>UNUSED,not used</i>
W3218	RCVTH_ERR_18	Model {modelName} Receiver Thresholds: Tslew_ac must not be specified for differential receivers  <i>UNUSED,not used</i>
W3219	RCVTH_ERR_19	Model {modelName} Receiver Thresholds: Vth must be specified for single ended receivers  <i>Model is associated with single ended pins and hence Vth is mandatory</i>
W3220	RCVTH_ERR_20	Model {modelName} Receiver Thresholds: Vinh_ac must be specified for single ended receivers

Code	Symbol	Message/Comments
		<i>Model is associated with single ended pins and hence Vinh_ac is mandatory</i>
W3221	RCVTH_ERR_21	Model {modelName} Receiver Thresholds: Vinl_ac must be specified for single ended receivers
		<i>Model is associated with single ended pins and hence Vinh_ac is mandatory</i>
W3222	RCVTH_ERR_22	Model {modelName} Receiver Thresholds: Vinh_dc must be specified for single ended receivers
		<i>Model is associated with single ended pins and hence Vinh_dc is mandatory</i>
W3223	RCVTH_ERR_23	Model {modelName} Receiver Thresholds: Vinl_dc must be specified for single ended receivers
		<i>Model is associated with single ended pins and hence Vinl_dc is mandatory</i>
W3224	RCVTH_ERR_24	Model {modelName} Receiver Thresholds: Tslew_ac must be specified for single ended receivers
		<i>Model is associated with single ended pins and hence Tslew_ac is mandatory</i>
W3225	RCVTH_ERR_25	Model {modelName} Receiver Thresholds: Vcross_low must not be specified for single ended receivers
		<i>UNUSED,not used</i>
W3226	RCVTH_ERR_26	Model {modelName} Receiver Thresholds: Vcross_high must not be specified for single ended receivers
		<i>UNUSED,not used</i>
W3227	RCVTH_ERR_27	Model {modelName} Receiver Thresholds: Vdiff_ac must not be specified for single ended receivers
		<i>UNUSED,not used</i>
W3228	RCVTH_ERR_28	Model {modelName} Receiver Thresholds: Vdiff_dc must not be specified for single ended receivers
		<i>UNUSED,not used</i>
W3229	RCVTH_ERR_29	Model {modelName} Receiver Thresholds: Tdiffslew_ac must not be specified for single ended receivers
		<i>UNUSED,not used</i>
E3230	RCVTH_ERR_30	( line {lineNum} ) - Unknown Line Among Receiver Threshold Data
		<i>A line was found in the [Receiver Threshold] section wich was not a valid line</i>
E3231	RCVTH_ERR_31	( line {lineNum} ) - {paramName} Already Defined For Receiver Threshold
		<i>The parameter has been defined more than once in a [Receiver Thresholds] section</i>
E3232	RCVTH_ERR_32	( line {lineNum} ) - Invalid {paramName} Line
		<i>The data line for of [Receiver Thresholds] has an incorrect syntax</i>
E3233	RCVTH_ERR_33	( line {lineNum} ) - Invalid {paramName} Value ('{paramValue}')
		<i>An invalid value was specified for parameter in a [Receiver Thresholds] section</i>
E3234	RCVTH_ERR_34	( line {lineNum} ) - Unknown Reference_supply {paramValue} specified

Code	Symbol	Message/Comments
		<i>The only allowed values for Reference_supply parameter are 'Pullup_reference'; 'Pulldown_reference'; 'Power_clamp_reference'; 'Gnd_clamp_reference'; 'Ext_reference' but an invalid value was found</i>
<b>B3300</b>	QUERY_ERR_0	Out of Memory <i>Internal memory allocation error</i>
<b>B3400</b>	PKGMDL_ERR_0	{sourceFile}:{sourceLinenum}:PKGMDL_Init unable to get IBIS? <i>Program data structures are corrupt in program file</i>
<b>E3401</b>	PKGMDL_ERR_1	( line {lineNum} ) - Orphan Package Model keyword.
<b>E3402</b>	PKGMDL_ERR_2	( line {lineNum} ) - Orphan Data Line.
<b>B3403</b>	PKGMDL_ERR_3	{sourceFile}:{sourceLinenum}:Illegal keyword. <i>Program data structures are corrupt in program file</i>
<b>E3404</b>	PKGMDL_ERR_4	( line {lineNum} ) - Orphan Data line.
<b>B3405</b>	PKGMDL_ERR_5	{sourceFile}:{sourceLinenum}:Illegal line type received. <i>Program data structures are corrupt in program file</i>
<b>B3406</b>	PKGMDL_ERR_6	COMMAND.COM not available? <i>Could not fire the command interpreter for the underlying OS</i>
<b>B3407</b>	PKGMDL_ERR_7	/bin/sh not available? <i>Could not fire the command interpreter for the underlying OS</i>
<b>B3408</b>	PKGMDL_ERR_8	tmpnam() failed. <i>There is a bug in the code</i>
<b>B3409</b>	PKGMDL_ERR_9	fopen({fileName}) failed. <i>Open of a temp file failed</i>
<b>E3410</b>	PKGMDL_ERR_10	Define_Package_Model '{defPkgModel}' is duplicated within the .ibs file.
<b>E3411</b>	PKGMDL_ERR_11	Resistance_Matrix cannot be specified when Number_Of_Sections is specified for Package Model {defPkgModel}.
<b>E3412</b>	PKGMDL_ERR_12	Inductance_Matrix cannot be specified when Number_Of_Sections is specified for Package Model {defPkgModel}.
<b>E3413</b>	PKGMDL_ERR_13	Inductance matrix not found for Package Model '{defPkgModel}'.
<b>E3414</b>	PKGMDL_ERR_14	Capacitance_Matrix cannot be specified when Number_Of_Sections is specified for Package Model {defPkgModel}.

Code	Symbol	Message/Comments
E3415	PKGMDL_ERR_15	Capacitance matrix not found for Package Model '{defPkgModel}'.
E3416	PKGMDL_ERR_16	( line {lineNum} ) - Unable to create new PKGMDL.
E3417	PKGMDL_ERR_17	Package Model keyword 'Define_Package_Model' not found or blank.
E3418	PKGMDL_ERR_18	OEM keyword not found for Package Model '{pkgModelName}'.
E3419	PKGMDL_ERR_19	Description keyword not found for Package Model '{pkgModelName}'.
E3420	PKGMDL_ERR_20	( line {lineNum} ) - Blank Number_of_Pins value.
E3421	PKGMDL_ERR_21	( line {lineNum} ) - Duplicate Number_of_Pins keyword.
W3422	PKGMDL_ERR_22	( line {lineNum} ) - Suspicious Number_of_Pins value.
E3423	PKGMDL_ERR_23	( line {lineNum} ) - Bad Number_of_Pins value.
E3424	PKGMDL_ERR_24	( line {lineNum} ) - Number_of_Pins = 0.
E3425	PKGMDL_ERR_25	( line {lineNum} ) - Blank Number_of_Sections value.
E3426	PKGMDL_ERR_26	( line {lineNum} ) - Duplicate Number_of_Sections keyword.
E3427	PKGMDL_ERR_27	( line {lineNum} ) - Number of Sections should be specified before Pin Numbers
W3428	PKGMDL_ERR_28	( line {lineNum} ) - Suspicious Number_of_Sections value.
E3429	PKGMDL_ERR_29	( line {lineNum} ) - Bad Number_of_Sections value.
E3430	PKGMDL_ERR_30	( line {lineNum} ) - Number_of_Sections = 0.
E3431	PKGMDL_ERR_31	Number_of_Pins keyword not found or value bad for Package Model '{pkgModelName}'.

Code	Symbol	Message/Comments
E3432	PKGMDL_ERR_32	( line {lineNum} ) - Pin Numbers name string too long. will be truncated.
E3433	PKGMDL_ERR_33	( line {lineNum} ) - Number of Pins is zero,unable to add Pin Number.
E3434	PKGMDL_ERR_34	( line {lineNum} ) - Unable to allocate Pin_Numbers array.
E3435	PKGMDL_ERR_35	( line {lineNum} ) - More Pin Numbers names than Number of pins.
E3436	PKGMDL_ERR_36	( line {lineNum} ) - Unable to allocate PIN. <i>Memory allocation for a new pin failed in the [Package Model] section</i>
E3437	PKGMDL_ERR_37	( line {lineNum} ) - Duplicate Pin .
E3438	PKGMDL_ERR_38	( line {lineNum} ) - Detected the start of an orphan R/L/C section
E3439	PKGMDL_ERR_39	( line {lineNum} ) - Cannot Nest Forks
E3440	PKGMDL_ERR_40	( line {lineNum} ) - Detected the start of an orphan 'Fork'
E3441	PKGMDL_ERR_41	( line {lineNum} ) - Detected the start of an orphan 'Endfork'
E3442	PKGMDL_ERR_42	( line {lineNum} ) - Empty Fork/Endfork found
E3443	PKGMDL_ERR_43	( line {lineNum} ) - Endfork found without enclosing Fork
E3444	PKGMDL_ERR_44	( line {lineNum} ) - A new Pin {pinName} has been defined before terminating a previous Fork with the corresponding Endfork
W3445	PKGMDL_ERR_45	( line {lineNum} ) - Found a Pin Name '{pinName}' containing '='. Possible syntax error
W3446	PKGMDL_ERR_46	( line {lineNum} ) - Found a Pin Name '{pinName}' containing '/'. Possible syntax error
W3447	PKGMDL_ERR_47	( line {lineNum} ) - Found a Pin Name '{pinName}'. Possible syntax error
E3448	PKGMDL_ERR_48	( line {lineNum} ) - Unable to allocate Pin_Sections array.

Code	Symbol	Message/Comments
E3449	PKGMDL_ERR_49	( line {lineNum} ) - No Sections were defined for this pin even though [Number of Sections] was defined.
E3450	PKGMDL_ERR_50	Some Fork sub parameters were not terminated with Endfork
E3451	PKGMDL_ERR_51	Pin '{pin}' has {actualSections} sections. This is greater than the Number of Sections {specSections} specified
E3452	PKGMDL_ERR_52	Required keyword Pin_Numbers not found for Package Model '{pkgModelName}'.
E3453	PKGMDL_ERR_53	No Pin Numbers names found for Package Model '{pkgModelName}'.
E3454	PKGMDL_ERR_54	Number of Pins not the same as count of Pin Numbers names found for Package Model '{pkgModelName}'.
E3455	PKGMDL_ERR_55	Required Model_Data keyword not found for package {defPkgModel}.
E3456	PKGMDL_ERR_56	Model_Data cannot be specified when Number_Of_Sections is specified for package {defPkgModel}.
E3457	PKGMDL_ERR_57	Required End_Model_Data keyword not found for package {defPkgModel}.
E3458	PKGMDL_ERR_58	End_Model_Data cannot be specified when Number_Of_Sections is specified for package {defPkgModel}.
E3459	PKGMDL_ERR_59	Required End_Package_Model keyword not found.
E3460	PKGMDL_ERR_60	( line {lineNum} ) - Duplicate Resistance Matrix.
E3461	PKGMDL_ERR_61	( line {lineNum} ) - Duplicate Inductance Matrix.
E3462	PKGMDL_ERR_62	( line {lineNum} ) - Duplicate Capacitance Matrix.
B3463	PKGMDL_ERR_63	{sourceFile}:{sourceLinenum}:Illegal current matrix.
E3464	PKGMDL_ERR_64	( line {lineNum} ) - Multiple Bandwidth keywords.



Code	Symbol	Message/Comments
E3465	PKGMDL_ERR_65	( line {lineNum} ) - Bandwidth keyword in wrong location.
E3466	PKGMDL_ERR_66	( line {lineNum} ) - Row keyword in wrong location.
E3467	PKGMDL_ERR_67	Keyword '{keyword}' not found or blank for Package Model '{pkgModelName}'.
E3468	PKGMDL_ERR_68	( line {lineNum} ) - Duplicate '{keyword}' keyword found.
E3469	PKGMDL_ERR_69	( line {lineNum} ) - Extraneous data on '{keyword}' line.
B3470	PKGMDL_ERR_70	Unable to remove({fileName}). <i>Temporary file could not be removed.</i>
E3471	PKGMDL_ERR_71	[Merged Pins] should be defined after [Pin Numbers] and before [Model Data] <i>[Merged Pins] should be defined after [Pin Numbers] and before [Model Data]</i>
E3472	PKGMDL_ERR_72	Package Model {pkgModelName}: [Merged Pins] can only be specified if [Model Data] is also specified <i>Package has a [Merged Pins] section but no [Model Data] section</i>
E3473	PKGMDL_ERR_73	[Merged Pins] Pin {pinName} not found in the [Pin Numbers] section <i>The Merged Pin is not defined in the [Pin Numbers] section of the Package</i>
E3474	PKGMDL_ERR_74	[Merged Pins] connecting Pin {pinName} must not be defined in [Pin Numbers] section <i>The Pin connected to a Merging Pin was found in the [Pin Numbers] section of the Package</i>
E3475	PKGMDL_ERR_75	No connecting pins found for [Merged Pins] defined on line {lineNum} <i>No Pins were connected to the Merging Pin defined in the [Merged Pins] section on line</i>

## 4.8 MESSAGE CODES 3500 TO 3999

Code	Symbol	Message/Comments
<b>B3600</b>	NODE_ERR_0	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>
<b>W3601</b>	NODE_ERR_1	Component {compName}: Empty [Node Declarations] found <i>The Component has an empty [Node Declarations] section</i>
<b>E3700</b>	MTX_ERR_0	( line {lineNum} ) - Unable to allocate MTX. <i>The code failed to allocate the required memory</i>
<b>E3701</b>	MTX_ERR_1	( line {lineNum} ) - Matrix type not specified.
<b>E3702</b>	MTX_ERR_2	( line {lineNum} ) - Unknown matrix type '{type}'.
<b>E3703</b>	MTX_ERR_3	( line {lineNum} ) - Bandwidth only allowed for Banded Matrices
<b>E3704</b>	MTX_ERR_4	( line {lineNum} ) - Bad Bandwidth value. <i>An invalid number value was specified</i>
<b>E3705</b>	MTX_ERR_5	( line {lineNum} ) - Suspicious Bandwidth value.
<b>E3706</b>	MTX_ERR_6	( line {lineNum} ) - Bandwidth must be less than Number_of_Pins .
<b>B3707</b>	MTX_ERR_7	( line {lineNum} ) - gpMtx is NULL,cannot reset banded wrap type.
<b>E3708</b>	MTX_ERR_8	( line {lineNum} ) - Bandwidth for this Banded, circle-back matrix exceeds the limit of {maxBandwidth}.
<b>B3709</b>	MTX_ERR_9	( line {lineNum} ) - gpMtx->eMatrixType is already banded wrap
<b>B3710</b>	MTX_ERR_10	( line {lineNum} ) - gpMtx->eMatrixType is not a banded type,cannot reset banded wrap type.
<b>B3711</b>	MTX_ERR_11	( line {lineNum} ) - gpMtx is NULL,cannot determine banded wrap type.
<b>B3712</b>	MTX_ERR_12	( line {lineNum} ) - gpMtx->eMatrixType is not a banded type, cannot determine banded wrap type.
<b>B3713</b>	MTX_ERR_13	( line {lineNum} ) - gpMtx is NULL,cannot determine row count.
<b>B3714</b>	MTX_ERR_14	( line {lineNum} ) - gpMtx is NULL,cannot determine bandwidth.

Code	Symbol	Message/Comments
B3715	MTX_ERR_15	( line {lineNum} ) - gpMtx is not banded type, cannot determine bandwidth.
E3716	MTX_ERR_16	The {matrixType} Matrix is Banded and requires the 'Bandwidth' keyword.
E3717	MTX_ERR_17	( line {lineNum} ) - Expected {declaredRows} Rows,found {actualRows} for Matrix ending previous to this line.
B3718	MTX_ERR_18	( line {lineNum} ) - gpMtx->eMatrixType is unknown,cannot determine CheckColumnCount.
E3719	MTX_ERR_19	Package {pkgModelName}: The {Resistance Inductance Capacitance} Matrix has diagonal element {value} at row {rowNum} which is negative
W3720	MTX_ERR_20	Package {pkgModelName}: The {Resistance Inductance} Matrix has diagonal element {diagVal} at row {rowNum} whose magnitude is less than off diagonal element {offDiagVal} at col {colNum}
E3721	MTX_ERR_21	Package {pkgModelName}: The {Capacitance} Matrix has diagonal element {diagVal} at row {rowNum} whose magnitude is less than the sum of off diagonal elements {offDiagVal}
E3722	MTX_ERR_22	Package {pkgModelName}: The {Capacitance} Matrix has off-diagonal element {offDiagVal} at row {rowNum} col {colNum} which is positive
E3800	MSPEC_ERR_0	( line {lineNum} ) - Model Specification: Already Defined for this model
B3801	MSPEC_ERR_1	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>
B3802	MSPEC_ERR_2	Should Not Be Here: {sourceFile},{sourceLinenum} <i>The code has a bug</i>
B3803	MSPEC_ERR_3	Unable to Parse {subparam}: {sourceFile} {sourceLinenum} <i>A generic error message which indicates that a parsing error related to</i>
E3804	MSPEC_ERR_4	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For {paramName}: Expecting {numberOfItemsExpected} <i>The sub parameter should have had items on the keyword line but only number of data items were found</i>
W3805	MSPEC_ERR_5	( line {lineNum} ) - {subparam} should not be specified for model type {modelType} <i>Indicates an illegal combination of Model Spec and the of the associated model. Vinl; Vinh; Vinl+; Vinl-; Vinh+ and Vinh- should be specified with model types which are</i>

Code	Symbol	Message/Comments
		<i>input or I/O; S_overshoot_high; S_overshoot_low; D_overshoot_high; D_overshoot_low and D_overshoot_time should not be specified for Series and Series_switch; Pulse_high; Pulse_low and Pulse_time should be specified with model types which are input or I/O; Vref; Rref; Cref; Vmeas; Vref_rising; Rref_rising; Cref_rising; Vmeas_rising; Vref_falling; Rref_falling; Cref_falling and Vmeas_falling should not be specified with Input; Input_ECL; Terminator; Series and Series_switch model types; Rref_diff and Cref_diff should be specified with Input_diff; I/O_diff; Output_diff and 3-state_diff.</i>
<b>E3806</b>	MSPEC_ERR_6	( line {lineNum} ) - Unknown Line Among Model Spec Data <i>A line was found in the [Model Spec] section which was not a valid line</i>
<b>E3807</b>	MSPEC_ERR_7	( line {lineNum} ) - {subparam} Already Defined For Model '{modelName}' <i>The sub parameter is defined more than once in the [Model Spec] section of model</i>
<b>E3808</b>	MSPEC_ERR_8	( line {lineNum} ) - 'NA' not allowed for Typical value <i>The typical value in a Range cannot be NA</i>
<b>W3809</b>	MSPEC_ERR_9	All {lineNum} Hystereis Thresholds should be specified for Model Spec defined on line {modelSpecLinenum} <i>Not all hysteresis thresholds (Vinl+; Vinl-; Vinh+; Vinh-) were defined in the [Model Spec] section which was defined on line</i>
<b>W3810</b>	MSPEC_ERR_10	{subparam} is greater than zero for Model Spec defined on line {modelSpecLinenum} <i>UNUSED,S_overshoot_low or D_overshoot_low specified in the [Model Spec] section beginning on line was greater than zero</i>
<b>W3811</b>	MSPEC_ERR_11	{subparam} is less than zero for Model Spec defined on line {modelSpecLinenum} <i>UNUSED,S_overshoot_high or D_overshoot_high specified in the [Model Spec] section beginning on line was less than zero</i>
<b>E3812</b>	MSPEC_ERR_12	{subparam1} requires {subparam2} to be specified for Model Spec defined on line {lineNum} <i>A generic error message which indicates that must be specified when is sepcified for [Model Spec] defined on . D_overshoot_low requires S_overshoot_low and D_overshoot_time; D_overshoot_high requires S_overshoot_high and D_overshoot_time; Pulse_low requires Pulse_time and Thresholds or Hysteresis Thresholds; Pulse_high requires Pulse_time and Thresholds or Hysteresis Thresholds.</i>
<b>E3813</b>	MSPEC_ERR_13	{subparam1} must be specified when {subparam2} is specified for [Model Spec] defined on line {modelSpecLinenum} <i>A generic error message which indicates that must be specified when is specified for [Model Spec] defined on . D_overshoot_area_h requires D_overshoot_ampl_h and D_overshoot_area_l requires D_overshoot_ampl_l.</i>
<b>W3814</b>	MSPEC_ERR_14	orphan {subparam} found for Model Spec defined on line {modelSpecLinenum} <i>A lone was specified for [Model Spec] defined on without other associated subparameters. Pulse_time was specified without Pulse_high or Pulse_low; or D_overshoot_time was specified without D_overshoot_high or D_overshoot_low</i>
<b>E3815</b>	MSPEC_ERR_15	{subparam1} must be specified when {subparam2} is specified

Code	Symbol	Message/Comments
		<i>A generic error which indicates that must also be specified when is specified in a [Model Spec] section. Vmeas_rising requires Vmeas_falling and vice versa; Vref_rising requires Vref_falling and vice versa; Rref_rising requires Rref_falling and vice versa; Cref_rising requires Cref_falling and vice versa</i>
E3816	MSPEC_ERR_16	{subparam1} must not be specified when {subparam2} is specified  <i>A generic error which indicates that must not be specified when is specified in a [Model Spec] section. Vmeas should not be specified when Vmeas_rising/falling are specified; Rref should not be specified when Rref_rising/falling are specified; Vref should not be specified when Vref_rising/falling are specified; Cref should not be specified when Cref_rising/falling are specified.</i>
W3817	MSPEC_ERR_17	{subparam1}({rangeType1}) is not less than {subparam2}({rangeType2}) for Model Spec defined on line {lineNum}  <i>The should be less than for the [Model Spec] section defined on . D_overshoot_low should be less than S_overshoot_low; Pulse_low should be less than Vinl+; Pulse_low should be less than Vinh;</i>
W3818	MSPEC_ERR_18	{subparam1}({rangeType1}) is not greater than {subparam2}({rangeType2}) for Model Spec defined on line {lineNum}  <i>The should be greater than for the [Model Spec] section defined on . D_overshoot_high should be greater than S_overshoot_high; Pulse_high should be greater than Vinl-; Pulse_high should be greater than Vinl</i>
W3819	MSPEC_ERR_19	{subparam1}({rangeType1}) is not less than or equal to {subparam2}({rangeType2}) for Model Spec defined on line {lineNum}  <i>Unused</i>
W3820	MSPEC_ERR_20	{subparam1}({rangeType1}) is not greater than or equal to {subparam2}({rangeType2}) for Model Spec defined on line {lineNum}  <i>The should not be less than for the [Model Spec] section defined on . Vinh+ should not be less than Vinh-; Vinl+ should not be less than Vinl-;</i>
E3821	MSPEC_ERR_21	Weak_R and Weak_I cannot be specified together in Model Spec  <i>Both Weak_R and Weak_I values cannot be specified in a Model Spec</i>
E3822	MSPEC_ERR_22	(Weak_R and Weak_V) or (Weak_I and Weak_V) must be specified in Model Spec  <i>Either the combination Weak_R; Weak_V or the combination Weak_I; Weak_V must be specified in a Model Spec</i>
B3900	RNG_ERR_0	Unable to Parse {text}: {sourceFile} {sourceLinenum}  <i>A generic error message which indicates that a parsing error related to</i>
E3901	RNG_ERR_1	( line {lineNum} ) - No {minimum maximum} Value Was Provided for {subparam}
E3902	RNG_ERR_2	( line {lineNum} ) - Incorrect Number of Line Items ( {numberOfItemsFound} ) For {paramName}: Expecting {numberOfItemsExpected}  <i>The sub parameter should have had items on the keyword line but only number of data items were found</i>
W3903	RNG_ERR_3	( line {lineNum} ) - Typ value is not in between Min and Max

Code	Symbol	Message/Comments
<b>B3904</b>	RNG_ERR_4	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>

## 4.9 MESSAGE CODES 4000 TO 4499

Code	Symbol	Message/Comments
<b>B4000</b>	MSEL_ERR_0	{sourceFile}:{sourceLinenum}:MSEL_Init unable to get IBIS? <i>Program data structures are corrupt in program file</i>
<b>E4001</b>	MSEL_ERR_1	( line {lineNum} ) - Orphan Model Selector keyword. <i>An unexpected [Model Selector] section was found</i>
<b>E4002</b>	MSEL_ERR_2	( line {lineNum} ) - Orphan Data Line. <i>A [Model Selector] related data line was found outside of a [Model Selector] section</i>
<b>B4003</b>	MSEL_ERR_3	{sourceFile}:{sourceLinenum}:Illegal keyword. <i>Program data structures are corrupt in program file</i>
<b>B4004</b>	MSEL_ERR_4	{sourceFile}:{sourceLinenum}:Illegal line type received. <i>Program data structures are corrupt in program file</i>
<b>E4005</b>	MSEL_ERR_5	Model Selector: '{modelSelectorName}' has no models defined <i>The [Model Selector] section did not have any models defined in it</i>
<b>W4006</b>	MSEL_ERR_6	Model Selector: '{modelSelectorName}' has only one model defined <i>The [Model Selector] section has only one model defined in it</i>
<b>E4007</b>	MSEL_ERR_7	( line {lineNum} ) - Unable to create new MSEL. <i>The code failed to allocate the required memory</i>
<b>E4008</b>	MSEL_ERR_8	( line {lineNum} ) - Unable to create new MSEL Model. <i>The code failed to allocate the required memory</i>
<b>E4009</b>	MSEL_ERR_9	Unable to Save Model Selector Name <i>The code failed to allocate the required memory</i>
<b>E4010</b>	MSEL_ERR_10	( line {lineNum} ) - 'Model Selector' Keyword Missing name <i>A [Model Selector] section should have a name defined on the keyword line</i>
<b>E4011</b>	MSEL_ERR_11	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For Keyword {keyword}: Expecting {numberOfItemsExpected} <i>The keyword should have had items on the keyword line but only number of data items were found</i>
<b>E4012</b>	MSEL_ERR_12	( line {lineNum} ) - Model Selector Name Over {maxChars} Characters Long
<b>E4013</b>	MSEL_ERR_13	( line {lineNum} ) - Invalid Model SelectorName ('{modelSelectorName}'), Reserved Word.
<b>E4014</b>	MSEL_ERR_14	( line {lineNum} ) - Model Selector Name Previously Defined ('{modelSelectorName}') <i>A [Model Selector] section with name should be defined at most once</i>
<b>B4015</b>	MSEL_ERR_15	Unable to Parse {text}: {sourceFile} {sourceLinenum}

Code	Symbol	Message/Comments
		<i>A generic error message which indicates that a parsing error related to</i>
<b>E4016</b>	MSEL_ERR_16	( line {lineNum} ) - 'Model Selector' Keyword: Missing model name
<b>E4017</b>	MSEL_ERR_17	( line {lineNum} ) - Model Name Over {maxChars} Characters Long <i>UNUSED</i>
<b>E4018</b>	MSEL_ERR_18	( line {lineNum} ) - Invalid Model Name ('NA')
<b>E4019</b>	MSEL_ERR_19	( line {lineNum} ) - Model Descriptor string '{descriptor}' is too long, truncating to {length} characters.
<b>B4020</b>	MSEL_ERR_20	{sourceFile}:{sourceLinenum}:Unable to get IBIS? <i>Program data structures are corrupt in program file</i>
<b>E4021</b>	MSEL_ERR_21	'{modelSelectorName}' is the name of a Model and a Model Selector <i>The Model Selector name is also the name of a Model in the file</i>
<b>W4022</b>	MSEL_ERR_22	Model {modelName} in Model Selector {modelSelectorName} is Differential, but this Model Selector contains Single Ended models too
<b>W4023</b>	MSEL_ERR_23	Model {modelName} in Model Selector {modelSelectorName} is Single Ended, but this Model Selector contains Differential models too
<b>E4024</b>	MSEL_ERR_24	Model '{modelName}' in Model Selector '{modelSelectorName}' is not defined in the file <i>The model referred to in the [Model Selector] section is not defined in the ibis file</i>
<b>E4025</b>	MSEL_ERR_25	( line {lineNum} ) - Model '{modelName}'. already used in this Model Selector <i>A model name can be referred to at most once in a [Model Selector] section</i>
<b>W4026</b>	MSEL_ERR_26	Model Selector '{modelSelectorName}' is not associated with any Pin or Series Pin Mapping <i>The [Model Selector] has not been associated with any Pin or Series Pin Mapping ( ie; it is unreferenced in the ibis file)</i>
<b>E4100</b>	IBIS_ERR_0	Unable to create IBIS. <i>Internal memory allocation error</i>
<b>E4101</b>	IBIS_ERR_1	Required keyword 'Component' not found. <i>The [Component] keyword is mandatory in an IBIS file</i>
<b>E4200</b>	DRVSH_ERR_0	( line {lineNum} ) - Driver Schedule: Already Defined for this model <i>More than one [Driver Schedule] section should not be defined for a model</i>
<b>B4201</b>	DRVSH_ERR_1	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>
<b>B4202</b>	DRVSH_ERR_2	Should Not Be Here: {sourceFile},{sourceLinenum}



Code	Symbol	Message/Comments
		<i>The code has a bug</i>
<b>B4203</b>	DRVSH_ERR_3	Unable to Parse {text}: {sourceFile} {sourceLinenum}
		<i>A generic error message which indicates that a parsing error related to</i>
<b>E4204</b>	DRVSH_ERR_4	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For {paramName}: Expecting {numberOfItemsExpected}
		<i>The sub parameter should have had items on the keyword line but only number of data items were found</i>
<b>E4205</b>	DRVSH_ERR_5	Model '{modelName}': The [Driver_Schedule] has no models defined
		<i>The [Driver Schedule] section for model is empty</i>
<b>W4206</b>	DRVSH_ERR_6	Model '{model}': The [Driver_Schedule] has only one model defined
		<i>The [Driver Schedule] section for model refers to only one model</i>
<b>E4207</b>	DRVSH_ERR_7	Model {refModel} used in the Driver Schedule of Model {modelName} is not defined
		<i>The model referred to in the [Driver Schdule] section of model is not defined</i>
<b>E4208</b>	DRVSH_ERR_8	Model {refModel} used in the Driver Schedule of Model {modelName} cannot itself have a Driver Schedule
		<i>The model referred to in the [Driver Schdule] section of model cannot itself have an associated driver schedule</i>
<b>E4209</b>	DRVSH_ERR_9	Model {refModel} used in the Driver Schedule of Model {modelName} should be an output model
		<i>The model referred to in the [Driver Schdule] section of model should be an output model type</i>
<b>E4210</b>	DRVSH_ERR_10	Unable to Set Model Name in Driver Schedule
		<i>Internal memory allocation error</i>
<b>E4211</b>	DRVSH_ERR_11	( line {lineNum} ) - 'Driver Schedule' Missing model Name
<b>E4212</b>	DRVSH_ERR_12	( line {lineNum} ) - Model Name Over {maxChars} Characters Long
<b>E4213</b>	DRVSH_ERR_13	( line {lineNum} ) - Model Name in Driver Schedule is the same as enclosing Model ('{modelName}')
<b>E4214</b>	DRVSH_ERR_14	( line {lineNum} ) - Invalid Model Name in Driver Schedule ('{modelName}'), Reserved Word.
		<i>A reserved word was used as a model name in a [Driver Schedule] section</i>
<b>E4215</b>	DRVSH_ERR_15	( line {lineNum} ) - Model Name ('{modelName}') previously used in this Driver Schedule
		<i>The model has been referred to more than once in a [Driver Schdedue] section</i>
<b>E4216</b>	DRVSH_ERR_16	( line {lineNum} ) - Unable to create new Driver Schedule Model.
		<i>Internal memory allocation error</i>

Code	Symbol	Message/Comments
<b>B4300</b>	EBDMDL_ERR_0	{sourceFile}:{sourceLinenum}:EBDMDL_Init unable to get IBIS? <i>Program data structures are corrupt in program file</i>
<b>E4301</b>	EBDMDL_ERR_1	( line {lineNum} ) - Orphan Electrical Board Description keyword.
<b>E4302</b>	EBDMDL_ERR_2	( line {lineNum} ) - Orphan Data Line.
<b>E4303</b>	EBDMDL_ERR_3	( line {lineNum} ) - Detected previous unterminated Forks
<b>B4304</b>	EBDMDL_ERR_4	{sourceFile}:{sourceLinenum}:Illegal keyword. <i>Program data structures are corrupt in program file</i>
<b>B4305</b>	EBDMDL_ERR_5	{sourceFile}:{sourceLinenum}:Illegal line type received. <i>Program data structures are corrupt in program file</i>
<b>E4306</b>	EBDMDL_ERR_6	Board Description '{ebdModel}' is duplicated within the .ebd file.
<b>E4307</b>	EBDMDL_ERR_7	( line {lineNum} ) - Unable to create new EBDMDL. <i>Memory allocation for a new EBD model failed</i>
<b>E4308</b>	EBDMDL_ERR_8	Ebd Model keyword 'Begin_Board_Description' not found or blank.
<b>E4309</b>	EBDMDL_ERR_9	( line {lineNum} ) - Duplicate [Number of Pins] keyword <i>There should only be a single [Number of Pins] section in an EBD model</i>
<b>E4310</b>	EBDMDL_ERR_10	( line {lineNum} ) - Blank Number_of_Pins value. <i>The number of pins was not specified with the [Number of Pins] keyword</i>
<b>E4311</b>	EBDMDL_ERR_11	( line {lineNum} ) - Duplicate Number_of_Pins keyword. <i>More than one [Number of Pins] keyword was found</i>
<b>W4312</b>	EBDMDL_ERR_12	( line {lineNum} ) - Suspicious Number_of_Pins value. <i>The number of pins value has a partially incorrect format</i>
<b>E4313</b>	EBDMDL_ERR_13	( line {lineNum} ) - Bad Number_of_Pins value. <i>The number of pins value could not be parsed</i>
<b>E4314</b>	EBDMDL_ERR_14	( line {lineNum} ) - Number_of_Pins = 0. <i>The number of pins was specified as 0</i>
<b>E4315</b>	EBDMDL_ERR_15	Number_of_Pins keyword not found or value bad for Ebd Model '{ebdModel}'.
<b>E4316</b>	EBDMDL_ERR_16	( line {lineNum} ) - No Pin_name found .
<b>E4317</b>	EBDMDL_ERR_17	( line {lineNum} ) - Pin name string too long. will be truncated.

Code	Symbol	Message/Comments
E4318	EBDMDL_ERR_18	( line {lineNum} ) - Number of Pins is zero,unable to add Pin Number.
E4319	EBDMDL_ERR_19	( line {lineNum} ) - Unable to allocate Pin_Name array. <i>The code failed to allocate the required memory</i>
E4320	EBDMDL_ERR_20	( line {lineNum} ) - More Pin Numbers names than Number of pins.
E4321	EBDMDL_ERR_21	( line {lineNum} ) - Unable to allocate PIN. <i>The code failed to allocate the required memory</i>
E4322	EBDMDL_ERR_22	( line {lineNum} ) - Duplicate Pin .
E4323	EBDMDL_ERR_23	( line {lineNum} ) - No signal_name found
E4324	EBDMDL_ERR_24	( line {lineNum} ) - signal_name too long. will be truncated.
E4325	EBDMDL_ERR_25	( line {lineNum} ) - Unexpected data after signal_name.
E4326	EBDMDL_ERR_26	Required keyword Pin_List not found.
E4327	EBDMDL_ERR_27	No Pin Numbers names found.
E4328	EBDMDL_ERR_28	Pin '{pinName}' was not referenced on any Electrical Path
W4329	EBDMDL_ERR_29	Pin '{pinName}' was referenced on Electrical Paths but is implicitly connected to a power or a gnd plane
E4330	EBDMDL_ERR_30	Pin '{pin}' was referenced {count} times on Electrical Paths
E4331	EBDMDL_ERR_31	Number of Pins not the same as count of Pin Numbers names found .
E4332	EBDMDL_ERR_32	Required End_Board_Description keyword not found.
E4333	EBDMDL_ERR_33	Keyword '{keyword}' not found or blank for Ebd Model '{ebdModel}'.
E4334	EBDMDL_ERR_34	( line {lineNum} ) - Duplicate '{keyword}' keyword found.
E4335	EBDMDL_ERR_35	( line {lineNum} ) - Extraneous data on '{keyword}' line.

Code	Symbol	Message/Comments
E4336	EBDMDL_ERR_36	( line {lineNum} ) - Duplicate [Pin List] keyword found.
E4337	EBDMDL_ERR_37	( line {lineNum} ) - Unable to find 'signal_name' after [Pin List] keyword.
E4338	EBDMDL_ERR_38	( line {lineNum} ) - 'signal_name' column header not found.
E4339	EBDMDL_ERR_39	( line {lineNum} ) - Unrecognized data after 'signal_name'
E4340	EBDMDL_ERR_40	( line {lineNum} ) - Unexpected '=' found
E4341	EBDMDL_ERR_41	( line {lineNum} ) - Unexpected '/' found
E4342	EBDMDL_ERR_42	( line {lineNum} ) - Detected the start of an orphan R/L/C section
B4343	EBDMDL_ERR_43	Internal program bug in {sourceFile} at {sourceLinenum} <i>UNUSED,The code has a bug</i>
E4344	EBDMDL_ERR_44	( line {lineNum} ) - Detected the start of an orphan 'NC'
E4345	EBDMDL_ERR_45	( line {lineNum} ) - Detected the start of an orphan 'Fork'
E4346	EBDMDL_ERR_46	( line {lineNum} ) - Detected the start of an orphan 'Endfork'
E4347	EBDMDL_ERR_47	( line {lineNum} ) - Empty Fork/Endfork found
E4348	EBDMDL_ERR_48	( line {lineNum} ) - Endfork found without enclosing Fork
E4349	EBDMDL_ERR_49	( line {lineNum} ) - No Pin Name found after Pin sub param
E4350	EBDMDL_ERR_50	( line {lineNum} ) - No ref_designator.pin found after Node sub param
E4351	EBDMDL_ERR_51	( line {lineNum} ) - Detected an orphan 'Node' sub param
E4352	EBDMDL_ERR_52	( line {lineNum} ) - Unknown token found: '{text}'
E4353	EBDMDL_ERR_53	( line {lineNum} ) - Unable to create new EBDPATH.

Code	Symbol	Message/Comments
		<i>The code failed to allocate the required memory</i>
E4354	EBDMDL_ERR_54	( line {lineNum} ) - Duplicate Path_Description '{path}'
E4355	EBDMDL_ERR_55	EBD Model '{ebdModel}' has no paths defined
E4356	EBDMDL_ERR_56	Path Descriptor '{path}' has no segments
E4357	EBDMDL_ERR_57	Path {path} or a branch does not terminate after NC
E4358	EBDMDL_ERR_58	Pin '{pin}' used in Path '{path}' not defined
E4359	EBDMDL_ERR_59	Reference Designator '{refdes}' used in Path '{path}' not defined
E4360	EBDMDL_ERR_60	( line {lineNum} ) - Could not allocate path element <i>The code failed to allocate the required memory</i>
E4361	EBDMDL_ERR_61	( line {lineNum} ) - Pin_name string too long. will be truncated.
W4362	EBDMDL_ERR_62	( line {lineNum} ) - Found a Pin Name '{pinName}' containing '/'. Possible syntax error
W4363	EBDMDL_ERR_63	( line {lineNum} ) - Found a Pin Name '{pinName}' containing '='. Possible syntax error
W4364	EBDMDL_ERR_64	( line {lineNum} ) - Found a Pin Name '{pinName}'. Possible syntax error
E4365	EBDMDL_ERR_65	( line {lineNum} ) - Cannot allocate path element <i>The code failed to allocate the required memory</i>
E4366	EBDMDL_ERR_66	( line {lineNum} ) - Cannot allocate path element pin <i>The code failed to allocate the required memory</i>
E4367	EBDMDL_ERR_67	( line {lineNum} ) - Cannot allocate path element node <i>The code failed to allocate the required memory</i>
E4368	EBDMDL_ERR_68	( line {lineNum} ) - Invalid Node specified. Missing ''
E4369	EBDMDL_ERR_69	( line {lineNum} ) - Node Reference designator string too long. will be truncated.
E4370	EBDMDL_ERR_70	( line {lineNum} ) - Node Pin name string too long. will be truncated.

Code	Symbol	Message/Comments
W4371	EBDMDL_ERR_71	( line {lineNum} ) - Found a Node '{nodeName}' containing '='. Possible syntax error
W4372	EBDMDL_ERR_72	( line {lineNum} ) - Found a Node '{nodeName}' containing '/'. Possible syntax error
W4373	EBDMDL_ERR_73	( line {lineNum} ) - Found a Node '{nodeName}'. Possible syntax error
E4374	EBDMDL_ERR_74	( line {lineNum} ) - Cannot allocate reference designator <i>The code failed to allocate the required memory</i>
E4375	EBDMDL_ERR_75	( line {lineNum} ) - Reference Designator name '{refdes}' too long. Will be truncated
E4376	EBDMDL_ERR_76	( line {lineNum} ) - Duplicate Reference Designator '{refdes}'
E4377	EBDMDL_ERR_77	( line {lineNum} ) - No Reference Designator name found
E4378	EBDMDL_ERR_78	( line {lineNum} ) - File name '{fileName}' too long. Will be truncated
E4379	EBDMDL_ERR_79	( line {lineNum} ) - No file name found
E4380	EBDMDL_ERR_80	( line {lineNum} ) - Component name '{compName}' too long. Will be truncated
E4381	EBDMDL_ERR_81	Reference Designator '{refdes}' refers to the Component '{compName}' itself being defined
E4382	EBDMDL_ERR_82	( line {lineNum} ) - Unknown data after component name
E4383	EBDMDL_ERR_83	( line {lineNum} ) - No Component name found
E4384	EBDMDL_ERR_84	( line {lineNum} ) - Invalid file name '{fileName}'. It has no extension
E4385	EBDMDL_ERR_85	( line {lineNum} ) - Unknown file extension '{extension}'. Should be '.ibs' or '.ebd'
E4386	EBDMDL_ERR_86	( line {lineNum} ) - File_name '{fileName}' contains an upper case character '{character}'.

Code	Symbol	Message/Comments
E4387	EBDMDL_ERR_87	File_name '{fileName}' contains a character '{character}' that is illegal for DOS.
E4388	EBDMDL_ERR_88	( line {lineNum} ) - File_name '{fileName}' contains more than one period.
E4389	EBDMDL_ERR_89	Pin '{pin}' not found on Component '{compName}' in file '{fileName}'
E4390	EBDMDL_ERR_90	Component '{component}' not found in file '{fileName}'
E4391	EBDMDL_ERR_91	Unable to allocate PINREF. <i>The code failed to allocate the required memory</i>
E4392	EBDMDL_ERR_92	Unable to allocate FILEREF. <i>The code failed to allocate the required memory</i>
E4393	EBDMDL_ERR_93	Length of Pin '{pin}' referenced for Component '{compName}' is too long
E4394	EBDMDL_ERR_94	Ebd file '{ebdFilename}' recursively references the component {compName} in the calling Ebd file '{calledFilename}'

## 4.10 MESSAGE CODES 4500 TO 4999

Code	Symbol	Message/Comments
<b>B4500</b>	DLY_ERR_0	Unable to Parse {text}: {sourceFile} {sourceLinenum}  <i>A generic error message which indicates that a parsing error related to missing values</i>
<b>E4501</b>	DLY_ERR_1	( line {lineNum} ) - No {Rise Fall_on off_dly} Value Was Provided for {subparam}
<b>E4502</b>	DLY_ERR_2	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For {paramName}: Expecting {numberOfItemsExpected}  <i>The sub parameter should have had items on the keyword line but only number of data items were found</i>
<b>B4503</b>	DLY_ERR_3	Unable to Allocate Memory: {sourceFile} {sourceLinenum}  <i>The code failed to allocate memory</i>
<b>E4504</b>	DLY_ERR_4	( line {lineNum} ) - At least two delays must be specified  <i>At least two numeric delays should be specified in a data line in a [Driver Schedule] section</i>
<b>E4505</b>	DLY_ERR_5	( line {lineNum} ) - {delayname1} and {delayname2} cannot be specified together  <i>delay and delay cannot be specified together in a data line in a [Driver Schedule] section (Rise_on_dly with Fall_off_dly and Rise_off_dly with Fall_on_dly)</i>
<b>E4506</b>	DLY_ERR_6	( line {lineNum} ) - {delayname} is less than zero  <i>The delay is less than 0 in a [Driver Schedule] section</i>
<b>E4507</b>	DLY_ERR_7	( line {lineNum} ) - [Driver Schedule] requires {delayname1} < or > {delayname2}  <i>Delay (Rise_on_dly) should not be equal to Delay (Rise_off_dly)</i>
<b>E4508</b>	DLY_ERR_8	( line {lineNum} ) - [Driver Schedule] requires {delayname1} < or > {delayname2}  <i>Delay (Fall_on_dly) should not be equal to Delay (Fall_off_dly)</i>
<b>E4509</b>	DLY_ERR_9	( line {lineNum} ) - [Driver Schedule] requires ( {'Rise_on_dly'} < {'Rise_off_dly'} ) AND { 'Fall_on_dly' } > { 'Fall_off_dly' } ) OR ( {'Rise_on_dly'} > { 'Rise_off_dly' } and { 'Fall_on_dly' } < { 'Fall_off_dly' } )  <i>(Rise_on_dly should be less than Rise_off_dly and Fall_on_dly should be greater than Fall_off_dly) OR (Rise_on_dly should be greater than Rise_off_dly and Fall_on_dly should be less than Fall_off_dly)</i>
<b>E4600</b>	ALGMOD_ERR_0	Expected a branch but found '{child}' as a leaf of '{parent}'  <i>UNUSED,A branch with a beginning '( was expected as a child of but found a token instead</i>
<b>E4601</b>	ALGMOD_ERR_1	( line {lineNum} ) - Algorithmic Model: Already Defined for this model  <i>An [Algorithmic Model] section should be defined at most once for a model</i>
<b>B4602</b>	ALGMOD_ERR_2	Unable to Allocate Memory: {sourceFile} {sourceLinenum}



Code	Symbol	Message/Comments
		<i>The code failed to allocate memory</i>
<b>B4603</b>	ALGMOD_ERR_3	Should Not Be Here: {sourceFile},{sourceLinenum}
		<i>The code has a bug</i>
<b>B4604</b>	ALGMOD_ERR_4	Unable to Parse {text}: {sourceFile} {sourceLinenum}
		<i>A generic error message which indicates that a parsing error related to</i>
<b>E4605</b>	ALGMOD_ERR_5	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For {paramName}: Expecting {numberOfItemsExpected}
		<i>The sub parameter should have had items on the keyword line but only number of data items were found</i>
<b>E4606</b>	ALGMOD_ERR_6	The Number of Bits should be 32 or 64 for Platform {platform} and Compiler {compiler} for Algorithmic Model defined on line {lineNum}
		<i>On the __bits line for the [Algorithmic Model] section defined on the bits should be 32 or 64</i>
<b>E4607</b>	ALGMOD_ERR_7	Duplicate Sub-Parameter: Platform {platform} Compiler {compiler} Bits {bits} for Algorithmic Model defined on line {lineNum}
		<i>A duplicate __ line for the [Algorithmic Model] defined on line has been found</i>
<b>B4608</b>	ALGMOD_ERR_8	Unable to Parse {subparam}: {sourceFile} {sourceLinenum}
		<i>A generic error message which indicates that a parsing error related to</i>
<b>E4609</b>	ALGMOD_ERR_9	( line {lineNum} ) - Unknown Line in Algorithmic Model
		<i>A line was found in the [Algorithmic Model] section wich was not a valid line</i>
<b>E4610</b>	ALGMOD_ERR_10	( line {lineNum} ) - Could not parse Platform,Compiler,Bits for [Algorithmic Model] Executable Sub-parameter
		<i>There was an error parsing the Platform_Compiler_Bits line</i>
<b>E4611</b>	ALGMOD_ERR_11	( line {lineNum} ) - Platform name too long {platform}
		<i>The string is longer than 44 characters</i>
<b>E4612</b>	ALGMOD_ERR_12	( line {lineNum} ) - Compiler name too long {compiler}
		<i>The string is longer than 44 characters</i>
<b>E4613</b>	ALGMOD_ERR_13	( line {lineNum} ) - Could not parse the Bits in {platform_bits_compiler} for [Algorithmic Model] Executable Sub-parameter
		<i>Expected an integer for the number of bits in string</i>
<b>E4614</b>	ALGMOD_ERR_14	Filename too long {fileName}
		<i>The File_name subparameter string is longer than 44 characters</i>
<b>E4615</b>	ALGMOD_ERR_15	Empty [Algorithmic Model] defined for Model {modelName}
		<i>There was no data defined in an [Algorithmic Model] section for model</i>
<b>E4616</b>	ALGMOD_ERR_16	Code file {fileName} not found. It was defined in [Algorithmic Model] for Model {modelName}
		<i>The code file associated with the[Algorithmic Model] section of model was not found</i>
<b>E4617</b>	ALGMOD_ERR_17	AMI Parameter file {fileName} should have '.ami' extension.

Code	Symbol	Message/Comments
		<i>The Parameter file for the [Algorithmic Model] section defined for model should have an '.ami' extension</i>
<b>E4618</b>	ALGMOD_ERR_18	AMI parameter file {fileName} not found. It was defined in [Algorithmic Model] for Model {modelName}
		<i>The parameter file associated with the[Algorithmic Model] section of model was not found</i>
<b>E4619</b>	ALGMOD_ERR_19	The Parameter file has mismatched parenthesis
		<i>The number of open parenthesis '(' should be equal to the number of close parenthesis ')'</i>
<b>E4620</b>	ALGMOD_ERR_20	The AMI parameter file should start with a parenthesis
		<i>The first character in a parameter file should be an open parenthesis '('</i>
<b>B4621</b>	ALGMOD_ERR_21	Internal error while parsing Parameter file
		<i>There is a bug in the code which parses AMI parameter file</i>
<b>E4622</b>	ALGMOD_ERR_22	No Reserved_Parameters found
		<i>No (Reserved_Parameters) section was found</i>
<b>E4623</b>	ALGMOD_ERR_23	Unknown branch {badSection} found
		<i>An unknown section was found</i>
<b>E4624</b>	ALGMOD_ERR_24	Unknown parameter {paramName} found as a child of {section}
		<i>An unknown parameter was found in section</i>
<b>E4625</b>	ALGMOD_ERR_25	{paramName} parameter is mandatory
		<i>Parameter is mandatory</i>
<b>E4626</b>	ALGMOD_ERR_26	{subparam}: Illegal format for {paramName}
		<i>The format of (Usage; Default; Type) of parameter is incorrect</i>
<b>E4627</b>	ALGMOD_ERR_27	Illegal {subparam} value {badValue} specified for {paramName}
		<i>The value of (Usage; Default;Type) of parameter is illegal</i>
<b>E4628</b>	ALGMOD_ERR_28	Found a branch {branchName} expecting a leaf for {paramName}
		<i>A list was expected for param but a branch was found instead</i>
<b>E4629</b>	ALGMOD_ERR_29	Unexpected parameter {subparam} specified for {paramName}
		<i>UNUSED,not used</i>
<b>E4630</b>	ALGMOD_ERR_30	{subparam} is mandatory for {paramName}
		<i>(Usage; Type or Default) is mandatory for parameter</i>
<b>U4631</b>	ALGMOD_ERR_31	{subparam1} or {subparam2} should be specified for Parameter {keyword}
		<i>UNUSED,not used</i>
<b>E4632</b>	ALGMOD_ERR_32	{subparam}: Illegal Format for {paramName}. Expected {expected} number(s)
		<i>The values for of parameter are incorrect. number of numeric values were expected</i>
<b>E4633</b>	ALGMOD_ERR_33	{subparam}: Illegal Format for {paramName}. Expected {expected} integer(s)

Code	Symbol	Message/Comments
		<i>UNUSED,not used</i>
E4634	ALGMOD_ERR_34	Invalid syntax of branch or leaf. At least 2 elements expected in a list <i>Any list should have at least 2 elements</i>
E4635	ALGMOD_ERR_35	Too few nodes in branches or leaves <i>There was a syntax error during parsing</i>
E4636	ALGMOD_ERR_36	Algorithmic Model is not allowed for model {modelName} which is of type {modelType} <i>Model is of type which is either Terminator; Series or Series_switch for which Algorithmic Model cannot be defined</i>
E4637	ALGMOD_ERR_37	AMI_Version should be the first parameter under Reserved_Parameters <i>If AMI_Version is specified; it should be the first parameter defined under the Reserved_Parameters section</i>
E4638	ALGMOD_ERR_38	AMI_Version {amiVersion} is not valid <i>An invalid AMI Version was specified</i>
E4639	ALGMOD_ERR_39	{paramName}: Both Format/Value and Default cannot be specified <i>For AMI parameter a Format of type Value and a Default were specified</i>
E4640	ALGMOD_ERR_40	{paramName}: {subparam} defined multiple times <i>For AMI parameter the sub parameter was defined multiple times</i>
E4641	ALGMOD_ERR_41	{paramName}: Either Format/Value or Default should be specified <i>For AMI Parameter either a Format of type Value or a Default value must be specified</i>
E4642	ALGMOD_ERR_42	{paramName}: defined multiple times <i>The AMI parameter was defined multiple times</i>
E4643	ALGMOD_ERR_43	Reserved_Parameters should precede Model_Specific <i>The Reserved_Parameters section should be defined before the Model_Specific section in an AMI file</i>
E4644	ALGMOD_ERR_44	{paramName}: Unexpected leaf {leafName} found <i>An unexpected leaf was found under AMI parameter &lt;param?</i>
E4645	ALGMOD_ERR_45	Illegal format for {format} for param {paramName}. Expected {count} {type} <i>The Format specified for parameter was found to be invalid. A total of tokens of type were expected.</i>
E4646	ALGMOD_ERR_46	Use_Init_Output is only allowed for AMI version 5.0 <i>The Use_Init_Output section is not allowed for AMI Versions greater than 5.0</i>
E4647	ALGMOD_ERR_47	{paramName} defined multiple times in Reserved_Parameters <i>The parameter was defined multiple times under Reserved_Parameters section</i>
E4648	ALGMOD_ERR_48	{paramName}: The {format} value {value} for Type {type} is invalid <i>A generic message which indicates that for AMI Parameter for Format subparam the value specified for Type is invalid</i>

Code	Symbol	Message/Comments
E4649	ALGMOD_ERR_49	{subparam} is not allowed for {paramName} <i>A generic message which indicates that the subparameter cannot be specified for AMI Parameter</i>
E4650	ALGMOD_ERR_50	{paramName}: {subparam1} cannot be specified when {subparam2} is specified <i>A generic message which indicates that for AMI Parameter ; the subparameter cannot be used in conjunction with subparameter</i>
E4651	ALGMOD_ERR_51	{paramName}: The number of {tableFeature1} {count1} does not match the number of {tableFeature2} {count2} in Table <i>A generic message which indicates that for AMI Parameter of Format Table; table feature has a count which does not match the count of table feature ; ie; number of lables; number of columns; number of types are mismatched</i>
E4652	ALGMOD_ERR_52	Illegal format for Labels in Format Table for param {paramName}. Expected a string <i>The Labels in Table definition for parameter were not found to be strings</i>
E4653	ALGMOD_ERR_53	Labels should be defined before data rows in Format Table for param {paramName}. <i>The Lables in Table definition for parameter were not defined before the rows of the table</i>
E4654	ALGMOD_ERR_54	{paramName}: Format Table should contain at least one row <i>The Table definition for parameter did not have any rows defined</i>
E4655	ALGMOD_ERR_55	{paramName}: Format Table does not have same number of entries in all rows <i>The Table definition for parameter contains rows with different number of columns</i>
E4656	ALGMOD_ERR_56	{paramName}: Format Table cannot contain a branch <i>The Table definition for parameter was found to contain a non leaf</i>
E4657	ALGMOD_ERR_57	{paramName}: Format {format} typ value ({typValue}) is not in between min value ({minValue}) and max value ({maxValue}) <i>UNUSED,For AMI parameter the Format definition has a typ value which is does not lie between the min value and the max value</i>
E4658	ALGMOD_ERR_58	{paramName}: Format {format} min value ({minValue}) should be less than or equal to max value ({maxValue}) <i>UNUSED,For AMI parameter the Format definition has a min value which is greater than the max value</i>
E4659	ALGMOD_ERR_59	{paramName}: Format {format} {formatPart} ({value}) cannot be negative or zero <i>UNUSED,For parameter ; for Format (Steps or Increment) the format parameter (Delta or #Steps) has a negative value</i>
E4660	ALGMOD_ERR_60	{paramName}: Default value ({default}) is not in between Format {format} min value ({minValue}) and max value ({maxValue}) <i>UNUSED,For Format for parameter the Default value was not between the min value and the max value</i>

Code	Symbol	Message/Comments
E4661	ALGMOD_ERR_61	{paramName}: Default value ({default}) does not match Format Corner typ value ({typValue}) or min value ({minValue}) or max value ({maxValue})  <i>UNUSED,For Format Corner for parameter ; the Default value must match one of the corner values ; or</i>
E4662	ALGMOD_ERR_62	{paramName}: Default value ({default}) is not in Format List  <i>For Format List for parameter ; the Default value must match one of the values defined in the list</i>
E4663	ALGMOD_ERR_63	{paramName}: Table Format requires (Type Float) or (Type UI) or (Type Integer Float Float) or (Type Integer UI Float)  <i>For parameter ; for Format Table; the Type sub parameter can only be (Type Float) or (Type UI) or (Type Integer Float Float) or (Type Integer UI Float)</i>
E4664	ALGMOD_ERR_64	Error Parsing ami file. An invalid token was found when a Leaf Node was expected  <i>A token was found when a Leafnode was expected during parsing</i>
E4665	ALGMOD_ERR_65	{paramName}: Invalid parameter name. Type Tap requires Parameter name to be a signed integer  <i>The Parameter Name associated with type Tap should be a signed integer string</i>
E4666	ALGMOD_ERR_66	{paramName}: Duplicate sub-branch {branchName} found  <i>A duplicate was found under</i>
W4667	ALGMOD_ERR_67	{paramName}: A branch name cannot be the same as a sub-branch name  <i>UNUSED,not used</i>
E4668	ALGMOD_ERR_68	An unexpected token found around: {text}  <i>There was a syntax error during parsing near string</i>
E4669	ALGMOD_ERR_69	Parameter '{paramname}' is not supported in AMI_Version {version}  <i>The Parameter is not specified in AMI files with version</i>
E4670	ALGMOD_ERR_70	Parameter '{paramname}': The number of values in ListTip ({listtipnum}) does not match the number of values in List ({listnum})  <i>The Parameter is of Format List but the number of entries in the List does not match the number of entries in the associated ListTip</i>
E4671	ALGMOD_ERR_71	Parameter '{paramname}': Duplicate value '{listipval}' found in ListTip but the corresponding values in List ('{listval1}', '{listval2}') are not the same  <i>The Parameter is of Format List but there are two entries and which have the same associated ListTip value</i>
E4672	ALGMOD_ERR_72	Parameter Repeater_Type {formatordefault} can only have values 'Redriver' or 'Retimer'  <i>The (Format or Default) value associated with AMI Parameter Repeater_Type can only be 'Redriver' or 'Retimer'</i>
E4673	ALGMOD_ERR_73	Parameter GetWaveExists should be true when a Repeater_Type Retimer is specified

Code	Symbol	Message/Comments
		<i>If an AMI parameter Repeater_Type with value Retimer is specified in a parameter file; then the GetWaveExists parameter in the same file should have a value of True</i>
E4674	ALGMOD_ERR_74	Parameter '{paramname}' value '{paramvalue}' contains back slashes '\'  <i>The parameter (DLL_Path or Supporting_Files) has a value which contains a backslash " character</i>
E4675	ALGMOD_ERR_75	Parameter '{paramname}' value '{paramvalue}' ends with a slash '/'  <i>The parameter (DLL_Path or Supporting_Files) has a value which ends with a slash '/' character</i>
E4676	ALGMOD_ERR_76	Parameter '{paramname}' value '{paramvalue}' is invalid  <i>The parameter has an invalid value</i>
E4677	ALGMOD_ERR_77	Parameter '{paramname}' row has more than 1 value: '{noofvalues}'  <i>The number of values in the table associated with parameter (Supporting Files) is more than 1 on some row (there should be one value on each row)</i>
E4678	ALGMOD_ERR_78	Parameter '{paramname}' value cannot be dot "."  <i>The parameter (Supporting_Files) cannot have a value which is just a string containing a dot (".")</i>
E4679	ALGMOD_ERR_79	Parameter '{paramname}' path '{paramvalue}' not found  <i>The parameter (Supporting_Files) specifies a path to a file which does not exist</i>
E4680	ALGMOD_ERR_80	Parameter '{paramname}' ListTip value is not string '{listipval}'  <i>The parameter has an associated ListTip which has a non string value</i>
E4681	ALGMOD_ERR_81	Parameter '{paramname}' ListTip value is invalid ""  <i>The parameter has ListTip specified in which one of the values is the empty (null) string</i>
E4682	ALGMOD_ERR_82	Missing Root Name  <i>UNUSED,The parameter file has a missing root name</i>
E4683	ALGMOD_ERR_83	Referenced parameter '{parmname}' not found in file '{fileName}'. {subparam} '{subparamname}' Ignored.  <i>UNUSED,The parameter file parameter referenced by Subparam (Parameters or Converter Parameters) parameter was not found in the parameter file</i>
E4684	ALGMOD_ERR_84	No Reserved_Parameters or Model_Specific branches found  <i>UNUSED,The parameter file contains neither a Reserved_Parameters branch nor a Model_Specific branch</i>
E4685	ALGMOD_ERR_85	Reserved_Parameters branch is not allowed for non AMI parameter files  <i>UNUSED,A non-AMI parameter file cannot have a Reserved_Parameters branch defined in it</i>
E4686	ALGMOD_ERR_86	{paramname}: Usage should be Info or In for parameters in AMI files. ({subparam} '{subparamname}')

Code	Symbol	Message/Comments
		<i>UNUSED, The parameter file parameter referenced by Subparam (Parameters or Converter Parameters) parameter should have a Usage of Info or In since it is defined in an AMI parameter file</i>
<b>E4687</b>	ALGMOD_ERR_87	{paramname}: Usage should be Info for parameters in non-AMI files. ({subparam} '{subparamname}')
		<i>UNUSED, The parameter file parameter referenced by Subparam (Parameters or Converter Parameters) parameter should have a Usage of Info since it is defined in a non-AMI parameter file</i>
<b>E4688</b>	ALGMOD_ERR_88	{paramname}: cannot be of Format Table, Guassian, Dual-Dirac, DjRj. ({subparam} '{subparamname}')
		<i>UNUSED, The parameter file parameter referenced by Subparam (Parameters or Converter Parameters) parameter cannot be of Format Table; Gaussina; Dual-Dirac or DjRj</i>
<b>E4689</b>	ALGMOD_ERR_89	[Algorithmic Model] Sub parameter {subparam} is not allowed for model {modelname} which is of type {modeltype}
		<i>Modle of type cannot use the subparam (Executable, Executable_Rx, Executable_Tx)</i>
<b>E4690</b>	ALGMOD_ERR_90	Reserved Parameter {paramname} is '{input output}' only' and may not be used since another '{output input}' only' Reserved Parameter has already been used earlier in this file
		<i>The Parameter is of type (Rx, Tx) but the parameter file has already been found to have an oppsite input out type</i>
<b>E4691</b>	ALGMOD_ERR_91	Sub parameter {subparam} is associated with a parameter file {paramfile} which was found to have a direction '{input output}-only'
		<i>The (Executable_Rx) has to be associated with a parameter file of type and the (Executable_Tx) has to be associated with a parameter file of type</i>
<b>E4692</b>	ALGMOD_ERR_92	{paramname}: Illegal {type} value {value} specified in {subparam}
		<i>The value of type specified for subparam of parameter is invalid</i>
<b>E4693</b>	ALGMOD_ERR_93	(({paramtype} '{paramname}'): Usage cannot be Dep for referenced parameter '{filename}' in AMI file when the file is not referenced in the [Algorithmic Model] section of the containing Model
		<i>The referenced parameter (Parameter, Converter Parameter) has a Usage Dep in Parameter file but is not referenced from within an [Algorithmic Model] section of a model</i>
<b>E4694</b>	ALGMOD_ERR_94	(({paramtype} '{paramname}'): Usage cannot be Dep for referenced parameter '{filename}' in AMI file when the file does not have a Resolve_Exists parameter with value True
		<i>The referenced parameter (Parameter, Converter Parameter) has a Usage Dep in Parameter file but the file does not have Resolve Exists parameter with a value True</i>
<b>E4695</b>	ALGMOD_ERR_95	A branch name cannot be empty
		<i>Every branchname in a parameter file should be a non empty string</i>
<b>E4696</b>	ALGMOD_ERR_96	{paramname} is only allowed in IBIS Version 6.1 or greater

Code	Symbol	Message/Comments
		<i>Parameter is only allowed for IBIS versions greater than equal to 6.1</i>
E4697	ALGMOD_ERR_97	PAM4_UpperThreshold and PAM4_LowerThreshold must be specified when Modulation is PAM4  <i>PAM4_UpperThreshold and PAM4_LowerThreshold must be specified when Modulation is PAM4 and the parameter file is of type Rx_only</i>
W4698	ALGMOD_ERR_98	{value1} should be less than {value2}  <i>value1 (PAM4_CenterThreshold) should be less than value2(PAM4_UpperThreshold) and value1(PAM4_LowerThreshold) should be less than value2(PAM4_CenterThreshold)</i>
E4699	ALGMOD_ERR_99	Model {modelname} of type {modeltype} is associated with a parameter file {filename} which was found to have a direction '{direction}-only'  <i>Model is of type but is associated with a Parameter file which was found to have direction (Rx, Tx)</i>
E4700	ALGMOD_ERR_100	Model {modelname} of type {modeltype} is a receiver associated with parameter file {filename} which has Modulation PAM4 defined but PAM4_UpperThreshold and PAM4_LowerThreshold are not specified  <i>Model of type is a Receiver and is associated with a Parameter file which defines a PAM4 Modulation but does not define PAM4_UpperThreshold and PAM4_LowerThreshold</i>
E4701	ALGMOD_ERR_101	ListTip is not associated with Format List  <i>A ListTip leaf was found which was not associated with a Format List in a parameter file</i>
E4702	ALGMOD_ERR_102	Code file {filename} does not contain required AMI_Init() function  <i>An Executable file does not define the AMI_Init() function</i>
E4703	ALGMOD_ERR_103	Code file {filename} does not contain required AMI_Close() function  <i>An Executable file does not define the AMI_Close() function</i>
E4704	ALGMOD_ERR_104	Code file {filename} does not contain AMI_GetWave() function, required because GetWave_Exists=True in AMI file {amifilename}  <i>An Executable file does not define the AMI_GetWave() function which is required because the associated AMI parameter file has defined the parameter GetWave_Exists as true</i>
E4705	ALGMOD_ERR_105	Code file {filename} does not contain AMI_Resolve() function, required because Resolve_Exists=True in AMI file {amifilename}  <i>An Executable file does not define the AMI_GetResolve() function which is required because the associated AMI parameter file has defined the parameter Resolve_Exists as true</i>
E4706	ALGMOD_ERR_106	Code file {filename} does not contain AMI_Resolve_Close() function, required because Resolve_Exists=True in AMI file {amifilename}  <i>An Executable file does not define the AMI_GetResolveClose() function which is required because the associated AMI parameter file has defined the parameter Resolve_Exists as true</i>
E4707	ALGMOD_ERR_107	{paramname}: Format/Value should be specified



Code	Symbol	Message/Comments
		<i>When a parameter has Usage Out, Format/Value can be specified ( but is optional ). Default should not be specified.</i>
E4708	ALGMOD_ERR_108	{filename}: Path cannot be specified in file name  <i>Referenced Executable and AMI parameter filenames should not have a path specified</i>
E4709	ALGMOD_ERR_109	Reserved_Parameter {paramname} cannot be specified in the Model_Specific section in AMI version {amiversion}  <i>A Reserved Parameter valid in AMI version was specified in the Model Specific section of an AMI file with version</i>
E4710	ALGMOD_ERR_110	Reserved_Parameter {paramname} must be specified when {paramname} is specified  <i>A must be specified if another has been specified</i>
E4711	ALGMOD_ERR_111	Reserved_Parameter {paramname} can only be specified when {paramname} is specified  <i>A can only be specified if another has already been specified</i>
E4712	ALGMOD_ERR_112	Special_Parameter_Name {specialparamname} not found in Model_Specific section  <i>A special parameter name was not found in the Model Specific section</i>
E4713	ALGMOD_ERR_113	Reserved_Parameters {paramname} and {paramname} cannot be specified together.  <i>These two parameter names cannot be specified simultaneously</i>
E4714	ALGMOD_ERR_114	Ts4file {fileName} does not exist.  <i>The Ts4file fileName was not found</i>
E4715	ALGMOD_ERR_115	{paramname}: Format Corner cannot be specified when Usage Out is specified.  <i>paramname has Usage Out but has Format Corner specified</i>
E4750	CMPNTEMI_ERR_0	  <i>UNUSED,not used</i>
E4751	CMPNTEMI_ERR_1	( line {lineNum} ) - {name} Already Defined For EMI Component  <i>CMPNTEMI_ERR_1</i>
B4752	CMPNTEMI_ERR_2	Unable to Parse {text}: {sourceFile} {sourceLinenum}  <i>A generic error message which indicates that a parsing error related to</i>
E4753	CMPNTEMI_ERR_3	( line {lineNum} ) - [Emi Component] is already defined for this Component  <i>A [Begin EMI Component] section can be defined at most once in a component</i>
E4754	CMPNTEMI_ERR_4	( line {lineNum} ) - Unexpected data '{text}' found after the Keyword  <i>Some extraneous data was specified after the [Begin EMI Component] keyword where none was expected.</i>
E4755	CMPNTEMI_ERR_5	( line {lineNum} ) - Orphan keyword line.  <i>A [Begin EMI Component] keyword was found where it was not expected</i>
E4756	CMPNTEMI_ERR_6	( line {lineNum} ) - Orphan data line

Code	Symbol	Message/Comments
		<i>A data line identified as belonging to a [Begin EMI Component] section was found outside of such a section</i>
<b>B4757</b>	CMPNTEMI_ERR_7	{sourceFile}:{sourceLinenum}:Illegal keyword passed to EMI Component. <i>Program data structures are corrupt in program file</i>
<b>B4758</b>	CMPNTEMI_ERR_8	{sourceFile}:{sourceLinenum}:Data for End EMI Component. <i>Program data structures are corrupt in program file</i>
<b>B4759</b>	CMPNTEMI_ERR_9	{sourceFile}:{sourceLinenum}:Unknown keyword received data. <i>Program data structures are corrupt in program file</i>
<b>B4760</b>	CMPNTEMI_ERR_10	{sourceFile}:{sourceLinenum}:Illegal line type passed to EMI Component. <i>Program data structures are corrupt in program file</i>
<b>E4761</b>	CMPNTEMI_ERR_11	( line {lineNum} ) - [End EMI Component] expected <i>A [Begin EMI Component] section should be terminated by a n [End EMI Component] keyword</i>
<b>W4762</b>	CMPNTEMI_ERR_12	( line {lineNum} ) - Empty Emi Component block found <i>A [Begin EMI Component] was terminated with an [End EMI Component] keyword with no intervening data</i>
<b>E4763</b>	CMPNTEMI_ERR_13	( line {lineNum} ) - Unable to create new EMI Component. <i>Memory allocation failed when trying to parse a [Begin EMI Component]</i>
<b>E4764</b>	CMPNTEMI_ERR_14	( line {lineNum} ) - C_Heatsink_gnd cannot be specified since C_Heatsink_float is already specified <i>A heat sink can be either floating or grounded</i>
<b>E4765</b>	CMPNTEMI_ERR_15	( line {lineNum} ) - C_Heatsink_float cannot be specified since C_Heatsink_gnd is already specified <i>A heat sink can be either floating or grounded</i>
<b>E4766</b>	CMPNTEMI_ERR_16	( line {lineNum} ) - Unknown Line after [Begin EMI Component] <i>A line was found in the [Begin EMI Component] section wich was not a valid line</i>
<b>B4767</b>	CMPNTEMI_ERR_17	Should Not Be Here: {sourceFile},{sourceLinenum} <i>The code has a bug</i>
<b>E4768</b>	CMPNTEMI_ERR_18	( line {lineNum} ) - '{paramName}' Subparameter Missing Setting <i>The sub parameter has no associated value specified</i>
<b>E4769</b>	CMPNTEMI_ERR_19	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For {paramName}: Expecting {numberOfItemsExpected} <i>The sub parameter should have had items on the keyword line but only number of data items were found</i>
<b>E4770</b>	CMPNTEMI_ERR_20	( line {lineNum} ) - Invalid {subparam/keyword} ('{badValue}') (try '{options}') <i>A generic error message which indicates that a wrong value was specified for a particular . The user must specify from one of the</i>

Code	Symbol	Message/Comments
E4771	CMPNTEMI_ERR_21	( line {lineNum} ) - Invalid {paramName} ('{paramValue}') <i>The sub parameter has an invalid value specified</i>
B4772	CMPNTEMI_ERR_22	Could not allocate memory in file {sourceFile} at line {sourceLinenum} <i>Memory allocation failed</i>
E4773	CMPNTEMI_ERR_23	( line {lineNum} ) - Invalid {paramName} Line <i>The sub parameter line has an invalid syntax</i>
E4774	CMPNTEMI_ERR_24	( line {lineNum} ) - [Pin Domain EMI]: Already Defined for this EMI Component <i>The [Pin Domain EMI] section should be defined at most one in a [Begin EMI Component] section</i>
E4775	CMPNTEMI_ERR_25	( line {lineNum} ) - Expected 'percentage' parameter after keyword <i>A [Pin Domain EMI] keyword should be followed by the the column header 'percentage'</i>
E4776	CMPNTEMI_ERR_26	( line {lineNum} ) - Unknown parameter '{badValue}': Expected 'percentage' <i>A [Pin Domin EMI] keyword should be followed by the column header 'percentage' but an unexpected column header was found</i>
E4777	CMPNTEMI_ERR_27	( line {lineNum} ) - domain_name '{domainName}' is redefined <i>The domain name was defined multiple times in a [Pin Domain EMI] section</i>
E4778	CMPNTEMI_ERR_28	( line {lineNum} ) - Invalid percentage '{badValue}'. {maxLength} <i>The percentage for a domain_name was specified using more than characters( where maxLength is 5)</i>
E4779	CMPNTEMI_ERR_29	( line {lineNum} ) - [Pin EMI]: Already defined for this EMI Component. <i>A [Pin EMI] section should be dfined at most once in a [Begin EMI Component] section</i>
E4780	CMPNTEMI_ERR_30	( line {lineNum} ) - Unable to find column headers after [Pin EMI] keyword. <i>The [Pin EMI] keyword should be followed by the column headers domain_name and clock_div</i>
E4781	CMPNTEMI_ERR_31	( line {lineNum} ) - '{columnHeader}' column header not found or out of order. <i>The column header was expected on the [Pin EMI] keyword definition line but was not found or found out of order</i>
E4782	CMPNTEMI_ERR_32	( line {lineNum} ) - Unable to add data for [Pin EMI] keyword. <i>There was an error parsing the data line specified in a [Pin EMI] section</i>
E4800	MDLEMI_ERR_0	( line {lineNum} ) - EMI Model: Already Defined for this model <i>There can be at most one [Begin EMI Model] section in a model</i>
E4801	MDLEMI_ERR_1	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For {paramName}: Expecting {numberOfItemsExpected} <i>The sub parameter should have had items on the keyword line but only number of data items were found</i>
B4802	MDLEMI_ERR_2	Unable to Parse {text}: {sourceFile} {sourceLinenum}

Code	Symbol	Message/Comments
		<i>A generic error message which indicates that a parsing error related to</i>
<b>B4803</b>	MDLEMI_ERR_3	Should Not Be Here: {sourceFile},{sourceLinenum} <i>The code has a bug</i>
<b>B4804</b>	MDLEMI_ERR_4	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>
<b>E4805</b>	MDLEMI_ERR_5	( line {lineNum} ) - {paramName} is already specified for the EMI Model <i>The subparameter has already been defined in a [Begin EMI Model] section</i>
<b>E4806</b>	MDLEMI_ERR_6	( line {lineNum} ) - '{paramName}' Subparameter Missing Setting <i>The subparameter does not have a value specified</i>
<b>E4807</b>	MDLEMI_ERR_7	( line {lineNum} ) - Invalid {subparam/keyword} ('{badValue}') (try '{options}') <i>A generic error message which indicates that a wrong value was specified for a particular . The user must specify from one of the</i>
<b>E4808</b>	MDLEMI_ERR_8	( line {lineNum} ) - Invalid {paramName} ('{badparamValue}') <i>The subparameter has an invalid value</i>
<b>E4900</b>	PINEMI_ERR_0	( line {lineNum} ) - Unable to add the line of Pin EMI data <i>Memory allocation for a Pin EMI data structure failed</i>
<b>E4901</b>	PINEMI_ERR_1	( line {lineNum} ) - pin_name not found <i>A data line in the [Pin EMI] section did not have the pin name specified</i>
<b>E4902</b>	PINEMI_ERR_2	( line {lineNum} ) - domain_name not found <i>A data line in the [Pin EMI] section did not have the domain name specified</i>
<b>E4903</b>	PINEMI_ERR_3	( line {lineNum} ) - clock_div not found <i>A data line in the [Pin EMI] section did not have clock div specified</i>
<b>E4904</b>	PINEMI_ERR_4	( line {lineNum} ) - clock_div should be at most {maxChars} characters long <i>The value of clock_div can be at most 5 characters long</i>
<b>E4905</b>	PINEMI_ERR_5	( line {lineNum} ) - Unexpected data '{text}' after clock_div <i>There was some extraneous data found at the end of a data line in the [Pin EMI] section</i>
<b>E4906</b>	PINEMI_ERR_6	( line {lineNum} ) - Duplicate Pin '{pinName}' <i>The pin is referred to multiple times in a [Pin EMI] section</i>
<b>B4907</b>	PINEMI_ERR_7	{sourceFile}:{sourceLinenum}:Unable to get IBIS? <i>Program data structures are corrupt in program file</i>
<b>E4908</b>	PINEMI_ERR_8	Component '{compName}': domain_name '{domainName}' found in [Pin Domain EMI] section was not associated with any pin_name in the [Pin EMI] section <i>In component ; a domain name was defined in the [Pin Domain EMI] section but was not found to be associated with any pin in the [Pin EMI] section</i>

Code	Symbol	Message/Comments
<b>E4909</b>	PINEMI_ERR_9	Component '{compName}': pin_name '{pinName}' found in [Pin EMI] section was not found in the [Pin] section  <i>The pin referred to in the [Pin EMI] section of Component was not defined in the [Pin] section of the component</i>
<b>E4910</b>	PINEMI_ERR_10	( line {lineNum} ) - Unable to allocate new Pin EMI.  <i>Memory allocation error for a Pin EMI failed while trying to parse the [Pin EMI] section</i>
<b>E4911</b>	PINEMI_ERR_11	( line {lineNum} ) - Component '{compName}': Pin '{pinName}' is of model '{modelName}' and cannot be referened in a [Pin EMI] section  <i>The pin referred to in the [Pin EMI] section of component has a model type of 'GND'; 'NC'; 'POWER'; 'CIRCUITCALL' or 'NA' and hence cannot be referenced in a [Pin EMI] section</i>

## 4.11 MESSAGE CODES 5000 TO 5499

Code	Symbol	Message/Comments
E5000	CCORNER_ERR_0	( line {lineNum} ) - [C Comp Corner] Already defined for this model <i>A [C Comp Corner] section can only be defined once in a Model</i>
B5001	CCORNER_ERR_1	Unable to Allocate Memory: {sourceFile} {sourceLinenum} <i>The code failed to allocate memory</i>
B5002	CCORNER_ERR_2	Should Not Be Here: {sourceFile}, {sourceLinenum} <i>The code has a bug</i>
B5003	CCORNER_ERR_3	Unable to Parse {text}: {sourceFile} {sourceLinenum} <i>A generic error message which indicates that a parsing error related to</i>
E5004	CCORNER_ERR_4	( line {lineNum} ) - Incorrect Number of Line Items ({numberOfItemsFound}) For {keyword}: Expecting {numberOfItemsExpected} <i>The keyword should have had items on the keyword line but only number of data items were found</i>
E5005	CCORNER_ERR_5	( line {lineNum} ) - Unknown line found among [C Comp Corner] data <i>A line was found in the [C Comp Corner] section wich was not a valid line</i>
E5006	CCORNER_ERR_6	( line {lineNum} ) - [C Comp Corner] parameter {paramName} is already defined <i>The subparameter occurs more than once in a [C Comp Corner] section</i>
E5007	CCORNER_ERR_7	( line {lineNum} ) - Typ value cannot be NA <i>The typical value in a Range cannot be NA</i>
W5008	CCORNER_ERR_8	( line {lineNum} ) - {paramName}: Min value is not the smallest value listed <i>UNUSED,The Min corner value for [C Comp Corner] subparameter should be the smallest among all the corner values</i>
W5009	CCORNER_ERR_9	( line {lineNum} ) - {paramName}: Max value is not the largest value listed <i>UNUSED,The Max corner value for [C Comp Corner] subparameter should be the largest among all the corner values</i>
E5010	CCORNER_ERR_10	Model {modelName}: Empty [C Comp Corner] section <i>There were no data lines in a [C Comp Corner] section for model</i>
W5011	CCORNER_ERR_11	Model {modelName}: [C Comp Corner] C_comp should not be specified when C_comp_pullup, C_comp_pulldown, C_comp_power_clamp or C_comp_gnd_clamp is specified <i>In model C_comp subparameter was sepcified in a [C Comp Corner] section even though the other sub parameters were also specified</i>
E5012	CCORNER_ERR_12	( line {lineNum} ) - [C Comp Corner] parameter {paramName}: {Typ Min Max} value cannot be negative <i>The Corner value for sub parameter in a [C Comp Corner] section was less than 0</i>
E5100	REPPIN_ERR_0	( line {lineNum} ) - Unable to alloc REPPIN. <i>The code failed to allocate memory</i>

Code	Symbol	Message/Comments
E5101	REPPIN_ERR_1	( line {lineNum} ) - Too many Repeater Pin data columns. <i>Extraneous data was found while parsing a [Repeater_Pin] data line</i>
E5102	REPPIN_ERR_2	( line {lineNum} ) - No Repeater_Pin column entry. <i>The pin column was missing while parsing a [Repeater_Pin] data line</i>
E5103	REPPIN_ERR_3	( line {lineNum} ) - No Repeater tx_non_inv_pin column entry. <i>The tx_non_inv_pin column was missing while parsing a [Repeater_Pin] data line</i>
E5104	REPPIN_ERR_4	( line {lineNum} ) - Repeater_Pin column pin same as tx_non_inv_pin column pin. <i>The pin specified cannot be the same as the tx_non_inv_pin specified on a [Repeater_Pin] data line</i>
E5105	REPPIN_ERR_5	Component '{componentname}': Repeater_Pin '{pinname}' not previously declared in Pin section. <i>The pin specified in a [Repeater Pin] section was not defined in the [Pin] section of Component</i>
E5106	REPPIN_ERR_6;	Component '{componentname}': Repeater tx_non_inv_pin '{noninvpinname}' not previously declared in Pin section. <i>The tx_non_inv_pin specified in a [Repeater Pin] section was not defined in the [Pin] section of Component</i>
W5107	REPPIN_ERR_7	Component '{componentname}': Repeater_Pin '{pinname}' is not unique. <i>The same pin is referenced more than once in the [Repeater Pin] section of Component</i>
E5108	REPPIN_ERR_8	Component '{componentname}': Repeater tx_non_inv_pin '{noninvpinname}' already in use as a Repeater_pin. <i>The tx_non_inv_pin was previously defined as a pin in the [Repeater Pin] section of Component</i>
E5109	REPPIN_ERR_9	Component '{componentname}': Repeater_pin '{pinname}' already in use as an tx_non_inv_pin. <i>The pin was previously defined as a tx_non_inv_pin in the [Repeater Pin] section of Component</i>
E5110	REPPIN_ERR_10	Component '{componentname}': Repeater tx_non_inv_pin '{noninvpinname}' is not unique. <i>The same tx_non_inv_pin is referenced more than once in the [Repeater Pin] section of Component</i>
E5111	REPPIN_ERR_11	Component '{componentname}': Repeater_Pin '{pinname}' is not previously declared in Diff Pin section. <i>The pin specified in a [Repeater Pin] section of component is not defined in the [Diff Pin] section of the component.</i>
E5112	REPPIN_ERR_12	Component '{componentname}': Repeater tx_non_inv_pin '{noninvpinname}' is not previously declared in Diff Pin section. <i>The tx_non_inv_pin specified in a [Repeater Pin] section of component is not defined in the [Diff Pin] section of the component.</i>

Code	Symbol	Message/Comments
E5113	REPPIN_ERR_13	Component '{componentname}': Repeater_Pin '{pinname}' is not associated with a model which is of type Input or Input_Diff  <i>The pin specified in a [Repeater Pin] section of component is associated with a model which is not of type Input or Input_Diff</i>
E5114	REPPIN_ERR_14	Component '{componentname}': Repeater tx_non_inv_pin '{noninvpinname}' is not associated with a model which is of type Output or Ouptut_Diff  <i>The tx_non_inv_pin specified in a [Repeater Pin] section of component is associated with a model which is not of type Output or Output_Diff</i>
B5115	REPPIN_ERR_15	{fileName}:{linenumber}:Unable to get IBIS?  <i>Program data structures are corrupt in program file at</i>
E5116	REPPIN_ERR_16	Component '{componentname}': Repeater_Pin '{pinname}' is associated with a model '{modelname}' which has no Algorithmic Model  <i>The pin specified in the [Repeater Pin] section of component is associated with a model which has no [Algorithmic Model] defined</i>
E5117	REPPIN_ERR_17	Component '{componentname}': Repeater tx_non_inv_pin '{noninvpinname}' is associated with a model '{modelname}' which has no Algorithmic Model  <i>The tx_non_inv_pin specified in the [Repeater Pin] section of component is associated with a model which has no [Algorithmic Model] defined</i>
E5118	REPPIN_ERR_18	Component '{componentname}': Repeater_Pin '{pinname}' is associated with a model '{modelname}' whose AMI Parameter file '{fileName}' does not have a Repeater_Type defined  <i>The pin specified in the [Repeater Pin] section of component is associated with a model whose [Algoritihmic Model] refers to an AMI Parameter file which does not have the parameter Repeater_Type defined in it</i>
B5200	PARAMFILE_ERR_0	{fileName}:{linenumber}:Unable to get IBIS.  <i>UNUSED,Program data structures are corrupt in program file at</i>
B5201	PARAMFILE_ERR_1	Unable to alloc PFILE.  <i>UNUSED,The code failed to allocate memory</i>
W5202	PARAMFILE_ERR_2	Parameter file name {fileName} does not seem to have an extension  <i>UNUSED,not used</i>
E5203	PARAMFILE_ERR_3	( line {lineNum} ) - Parameter file name {fileName} invalid. '.ibs', '.ebd', '.ims' or '.pkg' extensions are not allowed  <i>UNUSED,The parameter file has an extension which is illegal</i>
E5204	PARAMFILE_ERR_4	( line {lineNum} ) - Parameter file {fileName} not found.  <i>UNUSED,The parameter file could not be opened for parsing</i>
E5205	PARAMFILE_ERR_5	Parameter file {fileName} : Expected a parenthesis or a branch or found an invalid parameter in a list  <i>The parameter file is possibly empty or does not start with a parenthesis</i>
E5206	PARAMFILE_ERR_6	( line {lineNum} ) - Parameter file {fileName} : Filename should not end with a dot '.'  <i>A parameter file cannot end in a '.'</i>



Code	Symbol	Message/Comments
<b>B5300</b>	MPINS_ERR_0	Unable to Allocate Memory: {filename} {linenum} <i>Memory allocation failed in program file at</i>
<b>E5301</b>	MPINS_ERR_1	Unable to alloc MPIN <i>Memory allocation failed</i>
<b>E5302</b>	MPINS_ERR_2	Unable to save [Merged Pins] Pin <i>Parsing of [Merged Pins] failed</i>
<b>E5303</b>	MPINS_ERR_3	Unable to parse [Merged Pins] Pin not found <i>The MergingPin was not defined on the [Merged Pins] line</i>
<b>E5304</b>	MPINS_ERR_4	Incorrect Number of Line Items ({numberOfItemsFound}) For {keyName}: Expecting {numberOfItemsExpected} <i>The should have had items on the keyword line but only were found</i>
<b>E5305</b>	MPINS_ERR_5	[Merged Pins] Pin Name {pinName} over {maxLength} characters long <i>The Pin defined in [Merged Pins] is too long. Should be at most long</i>
<b>E5306</b>	MPINS_ERR_6	Invalid [Merged Pins] Pin Name {pinName}. Reserved word. <i>UNUSED</i>
<b>E5307</b>	MPINS_ERR_7	[Merged Pins] section already defined for Pin {pinName} <i>A [Merged Pins] section already exists for Pin</i>
<b>E5308</b>	MPINS_ERR_8	Pin {mergedPinName} has already been connected to a Merging Pin {mergingPinName} <i>The merged Pin is already connected to merging Pin</i>
<b>E5309</b>	MPINS_ERR_9	Pin {pinName} cannot be connected to the Merging Pin {mergePinName} as it is defined in the [Pin Numbers] section <i>UNUSED</i>
<b>E5400</b>	IDLY_ERR_0	[Initial_Delay] Already defined for this model
<b>E5401</b>	IDLY_ERR_1	Unable to Allocate Memory: {filename} {linenum} <i>Memory allocation failed in program file at</i>
<b>B5402</b>	IDLY_ERR_2	Should Not Be Here: {filename}, {linenum} <i>The code has a bug in file at line</i>
<b>B5403</b>	IDLY_ERR_3	Unable to Parse {keyword}: {filename} {linenum} <i>Could not parse keyword at file at line</i>
<b>E5404</b>	IDLY_ERR_4	Incorrect Number of Line Items ({numberOfItemsFound}) For {keyName}: Expecting {numberOfItemsExpected} <i>The should have had items on the keyword line but only were found</i>
<b>E5405</b>	IDLY_ERR_5	Unknown line found among [Initial_Delay] data <i>An unrecognized line was found in the [Initial Delay] section</i>
<b>E5406</b>	IDLY_ERR_6	[Initial_Delay] parameter {paramname} is already defined

Code	Symbol	Message/Comments
		<i>The [Initial Delay] parameter (V_T, I_T) has already been defined</i>
<b>E5407</b>	IDLY_ERR_7	Typ value cannot be NA
		<i>The typical value in a Range cannot be NA</i>
<b>E5408</b>	IDLY_ERR_8	{V-T I-T}: Min value is not the smallest value listed
		<i>UNUSED</i>
<b>E5409</b>	IDLY_ERR_9	{V-T I-T}: Max value is not the largest value listed
		<i>UNUSED</i>
<b>E5410</b>	IDLY_ERR_10	{'Model'} {modelname}: Empty [Initial_Delay] section defined on line {linenum}
		<i>An empty [Initial Delay] section was defined for Model on line</i>
<b>E5411</b>	IDLY_ERR_11	[Initial_Delay] parameter {paramname}: {subparam} value cannot be negative
		<i>The [Initial Delay] parameter (V_T, I_T) has a (Typ, Min, Max) which is negative</i>

## 4.12 MESSAGE CODES 5500 TO 5999

Code	Symbol	Message/Comments
<b>B5500</b>	EXEFILE_ERR_0	{sourceFile}:{sourceLinenum}:Unable to get IBIS. <i>Program data structures are corrupt in program file</i>
<b>B5501</b>	EXEFILE_ERR_1	Unable to alloc EFILE. <i>Memory allocation for a EFILE structure failed</i>
<b>E5502</b>	EXEFILE_ERR_2	Code file {filename} not found. <i>The code file '%s' was not found</i>
<b>W5503</b>	EXEFILE_ERR_3	'{filename}' extension may be required. <i>The code file may require a .so or .dll extension</i>
<b>E5600</b>	CHKEXE_ERR_0	Unable to load code file {filename}: {errmsg} <i>There was an error when loading the code file in memory</i>
<b>W5601</b>	CHKEXE_ERR_1	Unable to lookup symbol {symbolname} in code file {filename}: {errmsg} <i>There was an error when trying to locate a symbol in the code file</i>
<b>E5602</b>	CHKEXE_ERR_2	Unable to unload code file {filename}: {errmsg} <i>There was an error when unloading the code file from memory</i>
<b>E5700</b>	DSPAD_ERR_0	( line {linenum} ) - Extra data found: {data} <i>Extraneous data was found while parsing a [Die Supply Pads] data line</i>
<b>E5701</b>	DSPAD_ERR_1	( line {linenum} ) - Missing pad name <i>Die Pad name was not specified</i>
<b>E5702</b>	DSPAD_ERR_2	( line {linenum} ) - Missing signal_name <i>Signal Name was not specified</i>
<b>E5703</b>	DSPAD_ERR_3	( line {linenum} ) - Duplicate pad name: {padname} <i>Die Pad name was already specified</i>
<b>E5704</b>	DSPAD_ERR_4	( line {lineNum} ) - Unable to allocate memory <i>Memory allocation failed</i>
<b>W5705</b>	DSPAD_ERR_5	( line {linenum} ) - Possibly reserved word used as a '{itemname}': {itemvalue} <i>The value specified for Item is a reserved word</i>
<b>E5706</b>	DSPAD_ERR_6	Component {compname}: Die Supply Pad '{padname}': Signal_name {signalname} is not associated with a Pin with Model POWER or GND <i>In Component , the Die Supply Pad is associated with a signal_name which is not POWER or GND</i>
<b>E5800</b>	BUSLABEL_ERR_0	( line {linenum} ) - Extra data found: {data} <i>Extraneous data was found while parsing a [Bus Label] line</i>
<b>E5801</b>	BUSLABEL_ERR_1	( line {linenum} ) - Missing bus label name <i>Bus label name was not specified</i>
<b>E5802</b>	BUSLABEL_ERR_2	( line {linenum} ) - Missing signal_name

Code	Symbol	Message/Comments
		<i>Signal Name was not specified</i>
<b>E5803</b>	BUSLABEL_ERR_3	( line {linenum} ) - Duplicate bus label name: {busname}
		<i>Bus Label was already specified</i>
<b>E5804</b>	BUSLABEL_ERR_4	( line {lineNum} ) - Unable to allocate memory
		<i>Memory allocation failed</i>
<b>W5805</b>	BUSLABEL_ERR_5	( line {linenum} ) - Possibly reserved word used as a '{itemname}': {itemvalue}
		<i>The value specified for Item is a reserved word</i>
<b>E5806</b>	BUSLABEL_ERR_6	Component {componentname}: Bus Label '{buslabelname}': Signal_name {signalname} is not associated with a Pin with Model POWER or GND
		<i>A has a which is not of type POWER or GND in componet</i>
<b>E5807</b>	BUSLABEL_ERR_7	Component {componentname}: signal_name {signalname1} (associated with Pad {padname}, bus_label {busname1}) conflicts with signal_name {signalname2} also associated with bus_label {busname2}
		<i>A Signal name (associated with a particular Pad , Bus Label ) conflicts with also associated with Bus Label in component</i>
<b>E5808</b>	BUSLABEL_ERR_8	Component {componentname}: signal_name {signalname1} (associated with Pin {pinname}, {refname} {refv}) conflicts with signal_name {signalname2} also associated with bus_label {buslabel}
		<i>A SignalName is associated with Pin whose Reference is and it conflicts with also associated with buslabel in component</i>
<b>E5809</b>	BUSLABEL_ERR_9	Component {componentname}: signal_name {signalname1} (associated with Pin {pinname}) conflicts with signal_name {signalname2} (associated with bus {buslabel})
		<i>Signal name (associated with Pin ) conflicts with (associated with bus ) in component</i>
<b>E5900</b>	IMG_ERR_0	( line {linenum} ) - Unable to create new Interconnect Model Set Entry.
		<i>Memory allocation failed at linenum</i>
<b>E5901</b>	IMG_ERR_1	( line {linenum} ) - Incorrect Number of Line Items ( {numitems} ) For Keyword {keywordname}: Expecting {expectednumitems}
		<i>For keyword , tokens were found while tokens were expected</i>
<b>B5902</b>	IMG_ERR_2	( line {linenum} ) - Unable to Parse {keywordname}: {filename} {linenum}
		<i>Error in parsing keyword at in file</i>
<b>E5903</b>	IMG_ERR_3	( line {linenum} ) - Interconnect Model Group Keyword: Missing Interconnect Model Set name
		<i>Interconnect Model Set Name was not defined in a Interconnect Model Group</i>
<b>E5904</b>	IMG_ERR_4	( line {linenum} ) - Interconnect Model Set Name Over {length} Characters Long
		<i>An Interconnect Model Set Name was more than the expected</i>
<b>W5905</b>	IMG_ERR_5	(line {linenum}) - Interconnect Model Set Name is a reserved word
		<i>A reserved word was used as an Interconnect Model Set name</i>

Code	Symbol	Message/Comments
E5906	IMG_ERR_6	( line {linenum} ) - Interconnect Model Set '{interconnectmodelsetname}'. already used in this Interconnect Model Group  <i>The is already used in the current Interconnect Model Group</i>
E5907	IMG_ERR_7	( line {linenum} ) - Interconnect Model Group: '{interconnectmodelgroupname}' has no Interconnect Model Sets defined  <i>The has no Interconnect Model Sets defined</i>
E5908	IMG_ERR_8	[Component] {componentname} [Interconnect Model Group] {interconnectmodelgroupname}: {terminaltype} Pin {pinname} appears in a terminal without the Aggressor_Only attribute in more than one contained model in the group  <i>In Component and in a Pin of appears in a terminal without the Aggressor_Only attribute in more than one contained model in the group</i>
E5909	IMG_ERR_9	[Component] {componentname} [Interconnect Model Group] {interconnectmodelgroupname} [Interconnect Model Set] {interconnectmodelsetname}: {pintype} Pin {pinname} appears in a terminal without the Aggressor_Only attribute in more than one contained model in the set  <i>Unused</i>
E5910	IMG_ERR_10	[Component] {componentname} [Interconnect Model Group] {interconnectmodelgroupname} : For I/O terminals only a pin to die pad, a pin to buffer or a die pad to buffer interface can be specified in a group  <i>For I/O terminals only a pin to die pad, a pin to buffer or a die pad to buffer interface can be specified in a group but it is not so in of component</i>
E5911	IMG_ERR_11	[Component] {componentname} [Interconnect Model Group] {interconnectmodelgroupname} : For Rail terminals all three interface(pin to die pad, pin to buffer or die pad to buffer) cannot be specified in the same group  <i>Unused</i>
E5912	IMG_ERR_12	[Component] {componentname} [Interconnect Model Group] {interconnectmodelgroupname} : '{interfacename1}' interface cannot be specified if a '{interfacename2}' interface has already been specified in a group  <i>Interfaces and cannot be specified together in in</i>

## 4.13 MESSAGE CODES 6000 TO 6499

Code	Symbol	Message/Comments
<b>B6000</b>	IMSMDL_ERR_0	( line {linenum} ) - {filename}:{linenum}:IMSMDL_Init unable to get IBIS? <i>Internal Error at line in file</i>
<b>E6001</b>	IMSMDL_ERR_1	( line {linenum} ) - Orphan Interconnect Model Set keyword. <i>A keyword associated with an Interconnect Model Set was found without an enclosing Interconnect Model Set definition</i>
<b>E6002</b>	IMSMDL_ERR_2	( line {linenum} ) - Orphan Data Line. <i>A data line was found with no enclosing keyword</i>
<b>B6003</b>	IMSMDL_ERR_3	( line {linenum} ) - {filename}:{linenum}:Illegal keyword. <i>An illegal keyword was found at line in file</i>
<b>E6004</b>	IMSMDL_ERR_4	( line {linenum} ) - Either File_TS or File_IBIS-ISS must be defined before Number_of_terminals is defined <i>File_TS or File_IBIS-iSS must be specified before the number of terminals is specified</i>
<b>B6005</b>	IMSMDL_ERR_5	( line {linenum} ) - {filename}:{linenum}:Illegal line type received. <i>An incorrect data line was found at line in file</i>
<b>E6006</b>	IMSMDL_ERR_6	( line {lineNum} ) - Unable to create new '{itemtype}'. <i>Memory allocation when trying to allocate a structure for</i>
<b>E6007</b>	IMSMDL_ERR_7	( line {linenum} ) - Keyword '{keywordname}' expected <i>Keyword was expected</i>
<b>E6008</b>	IMSMDL_ERR_8	Duplicate '{keywordname}' keyword found. <i>Unused</i>
<b>E6009</b>	IMSMDL_ERR_9	( line {linenum} ) - Extraneous data on '{keywordname}' line. <i>Extra data was found on data line for Keyword</i>
<b>B6010</b>	IMSMDL_ERR_10	( line {linenum} ) - Unable to Parse {text}: {filename} {linenum} <i>There was an error parsing data at linenum in file</i>
<b>B6011</b>	IMSMDL_ERR_11	( line {lineNum} ) - Should not be here: {fileName}, {lineNum} <i>There is a bug at line in file</i>
<b>E6012</b>	IMSMDL_ERR_12	( line {linenum} ) - Could not parse '{paramname}' line <i>There was an error parsing parameter</i>
<b>E6013</b>	IMSMDL_ERR_13	( line {linenum} ) - Param: Illegal format: '{formatname}' <i>In incorrect format was specified</i>
<b>E6014</b>	IMSMDL_ERR_14	( line {linenum} ) - {paramorsubparam} '{paramname}' already defined <i>A is already defined</i>
<b>E6015</b>	IMSMDL_ERR_15	( line {linenum.} ) - {Subparam}: already defined <i>The Sub Parameter is already defined</i>
<b>E6016</b>	IMSMDL_ERR_16	( line {linenum} ) - File '{filename}' does not exist

*File was not found*

<b>E6017</b>	IMSMDL_ERR_17	( line {linenum} ) - {fileibisissorfilets1} cannot be specified when {fileibisissorfilets2} is already specified
		<i>File_TS and File_IBIS-ISS cannot be specified together</i>
<b>E6018</b>	IMSMDL_ERR_18	( line {linenum} ) - Sub parameter Number_of_terminals should be specified after all other subparameters have been specified
		<i>The Number_Of_Terminals should be the last sub parameter in an Interconnect Model definition</i>
<b>E6019</b>	IMSMDL_ERR_19	( line {linenum} ) - Missing '='
		<i>An equal sign was expected</i>
<b>W6020</b>	IMSMDL_ERR_20	( line {linenum} ) - Suspicious {value} value.
		<i>The number has some syntax issues</i>
<b>E6021</b>	IMSMDL_ERR_21	( line {linenum} ) - Bad {value} value.
		<i>The number has a bad format</i>
<b>E6022</b>	IMSMDL_ERR_22	( line {lineum} ) - {itemname} cannot be less than or equal to 0.
		<i>The value of Item cannot be less than 0</i>
<b>E6023</b>	IMSMDL_ERR_23	( line {linenum} ) - Number_of_terminals should be at least 2 when File_IBIS-ISS is specified.
		<i>At least two terminals have to be specified for IBIS-ISS File type in an Interconnect Model</i>
<b>E6024</b>	IMSMDL_ERR_24	( line {linenum} ) - Terminal {terminal} is larger than the Number_of_terminals {numberofterminals}
		<i>A terminal number is greater than the total in an Interconnect Model</i>
<b>E6025</b>	IMSMDL_ERR_25	( line {linenum} ) - Terminal {terminal} is already defined
		<i>A terminal number has been defined more than once in an Interconnect Model</i>
<b>E6026</b>	IMSMDL_ERR_26	( line {linenum} ) - Unknown {itemname} {value}
		<i>The Item has a value which is not among the list of permissible values</i>
<b>E6027</b>	IMSMDL_ERR_27	( line {linenum} ) - {expectevalue} Expected but {actualvalue} Found
		<i>The string was not found, instead the string was found</i>
<b>E6028</b>	IMSMDL_ERR_28	( line {linenum} ) - When File_TS is specified, A_gnd can only be specified with the last terminal
		<i>The TerminalType A_gnd can only be specified with the last terminal when File_TS is specified</i>
<b>E6029</b>	IMSMDL_ERR_29	( line {lineum} ) - {closingkeyword} found without corresponding {openingkeyword}
		<i>An end keyword was found without a corresponding start keyword</i>
<b>E6030</b>	IMSMDL_ERR_30	( line {linenum} ) - Only allowed qualifier(s) is(are): {qualifiernames}
		<i>A qualifier was specified which was not in the list of allowed for this TerminalType</i>
<b>E6031</b>	IMSMDL_ERR_31	( line {lineNum} ) - {value} is not allowed for {terminaltype}
		<i>The value is not allowed for the Terminal_type</i>

<b>E6032</b>	IMSMDL_ERR_32	No [Interconnect Model] defined in [Interconnect Model Set] {interconnectmodelset}	<i>An empty Interconnect Model Set containing no Interconnect Models was found</i>
<b>E6033</b>	IMSMDL_ERR_33	[Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel}: Either File_TS or File_IBIS-ISS must be defined	<i>The Interconnect Model in Interconnect Model Set has neither File_TS or File_IBIS-ISS sub parameters defined</i>
<b>E6034</b>	IMSMDL_ERR_34	[Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel}: Unused port termination cannot be specified when File_IBIS-ISS is specified	<i>Unused port termination cannot be specified since File_IBIS-ISS sub parameter is specified in in</i>
<b>E6035</b>	IMSMDL_ERR_35	[Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel}: No terminals were specified	<i>There were no Terminal definitions in Interconnect Model in Interconnect Model Set</i>
<b>E6036</b>	IMSMDL_ERR_36	[Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel}: Terminal {terminalnum1} and Terminal {terminalnum2} both don't have Aggressor_Only defined though the pin_name is same	<i>Unused</i>
<b>E6037</b>	IMSMDL_ERR_37	[Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel}: Pin interface, Pad interface and Buffer interface cannot be specified together	<i>Pin interface, Pad interface and Buffer interface were specified simultaneously in Interconnect Model in Interconnect Model Set</i>
<b>E6038</b>	IMSMDL_ERR_38	[Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel}: Model has a single {interface} only and only Rail terminal type is allowed	<i>Only a single Interface (Pad, Pin or Buffer) is defined in Interconnect Model in Interconnect Model Set so only Rail terminals can be specified</i>
<b>E6039</b>	IMSMDL_ERR_39	[Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel}: Terminals {terminal1} and {terminal2} are duplicates	<i>Terminal and Terminal have identical definitions in Interconnect Model in Interconnect Model Set</i>
<b>E6040</b>	IMSMDL_ERR_40	[Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel}: Pin '{pinname}' used as both I/O and Rail	<i>Unused</i>
<b>E6041</b>	IMSMDL_ERR_41	[Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel}: At least two interfaces for Pin '{pinname}' as an I/O expected	<i>I/O Pin should be used in at least 2 of the interfaces (Pad, Pin, Buffer) in Model in Interconnect Model Set</i>
<b>E6042</b>	IMSMDL_ERR_42	[Component] {compname} [Interconnect Model Group] {interconnectmodelgroup} [Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel} : {qualifiername} '{qualifier}' not found .ibs file	



*In Component , Interconnect Model Group , Interconnect Model Set , Interconnect Model the Qualifier has a value which is not found in the .ibs file*

<b>E6043</b>	IMSMDL_ERR_43	[Component] {compname} [Interconnect Model Group] {interconnectmodelgroup}: [Interconnect Model Set] {interconnectmodelset} not found in {filename}
		<i>In Component , Interconnect Model Group the Interconnect Model Set referenced is not found in the .ibs file</i>
<b>C6044</b>	IMSMDL_ERR_44	[Component] {compname} [Interconnect Model Group] {interconnectmodelgroup} [Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel} : NC Pin '{pinname}' used as an I/O
		<i>I/O Pin referenced in Component , Interconnect Model Group , Interconnect Model Set , Interconnect Model has a model type of NC</i>
<b>E6045</b>	IMSMDL_ERR_45	[Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel} : Terminal {terminal} is not defined
		<i>Terminal number was not defined in Model in Interconnect Model Set</i>
<b>E6046</b>	IMSMDL_ERR_46	[Component] {compname} [Interconnect Model Group] {interconnectmodelgroup} [Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel} : Buffer Rail Terminal {terminal1} with pin_name {pinname} whose {refname} is {refbus} duplicates Terminal {terminal2} with signal_name {signalname}
		<i>Buffer Rail Terminal with pin_name whose Reference is duplicates signal_name associated with Terminal in Component , Interconnect Model Group , Interconnect Model Set , Interconnect Model</i>
<b>E6047</b>	IMSMDL_ERR_47	[Component] {compname} [Interconnect Model Group] {interconnectmodelgroup} [Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel} : Buffer Rail Terminal {terminal1} with pin_name {pinname} whose {refname} is {refbus} duplicates Terminal {terminal2} with bus_label {buslabel}
		<i>Buffer Rail Terminal with pin_name whose Reference is duplicates Terminal with bus_label in Component , Interconnect Model Group , Interconnect Model Set , Interconnect Model</i>
<b>E6048</b>	IMSMDL_ERR_48	[Component] {compname} [Interconnect Model Group] {interconnectmodelgroup} [Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel} : Pad Rail Terminal {terminal1} with signal_name {signalname} duplicates Terminal {terminal2} with bus_label {buslabel}
		<i>Pad Rail Terminal with signal_name duplicates Terminal with bus_label in Component , Interconnect Model Group , Interconnect Model Set , Interconnect Model</i>
<b>E6049</b>	IMSMDL_ERR_49	[Component] {compname} [Interconnect Model Group] {interconnectmodelgroup} [Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel} : Pad Rail Terminal {terminal1} with signal_name {signalname1} duplicates Terminal {terminal2} with pad_name {signalname2}
		<i>Pad Rail Terminal with signal_name duplicates Terminal with signal_name in Component , Interconnect Model Group , Interconnect Model Set , Interconnect Model</i>
<b>E6050</b>	IMSMDL_ERR_50	[Component] {compname} [Interconnect Model Group] {interconnectmodelgroup} [Interconnect Model Set] {interconnectmodelset} [Interconnect Model]

		{interconnectmodel} : Pad Rail Terminal {terminal1} with bus_label {buslabel} duplicates Terminal {terminal2} with pad_name {padname}
		<i>Pad Rail Terminal with bus_label duplicates Terminal with pad_name in Component , Interconnect Model Group , Interconnect Model Set , Interconnect Model</i>
<b>E6051</b>	IMSMDL_ERR_51	[Component] {compname} [Interconnect Model Group] {interconnectmodelgroup} [Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel} : Pin Rail Terminal {terminal1} with signal_name {signalname} duplicates Terminal {terminal2} with bus_label {buslabel}
		<i>Pin Rail Terminal with signal_name duplicates Terminal with bus_label in Component , Interconnect Model Group , Interconnect Model Set , Interconnect Model</i>
<b>E6052</b>	IMSMDL_ERR_52	[Component] {compname} [Interconnect Model Group] {interconnectmodelgroup} [Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel} : Pin Rail Terminal {terminal1} with signal_name {signalname} duplicates Terminal {terminal2} with pin_name {pinname}
		<i>Pin Rail Terminal with signal_name duplicates Terminal with pin_name which has the same signal_name</i>
<b>E6053</b>	IMSMDL_ERR_53	[Component] {compname} [Interconnect Model Group] {interconnectmodelgroup} [Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel} : Pin Rail Terminal {terminal1} with bus_label {buslabel} duplicates Terminal {terminal2} with pin_name {pinname}
		<i>Pin Rail Terminal with bus_label duplicates Terminal with pin_name as both are associated with the same signal_name in Component , Interconnect Model Group , Interconnect Model Set , Interconnect Model</i>
<b>E6054</b>	IMSMDL_ERR_54	[Component] {compname} [Interconnect Model Group] {interconnectmodelgroup} [Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel} : Buffer Rail Terminal {terminal1} with signal_name {signalname} duplicates Terminal {terminal2} with bus_label {buslabel}
		<i>Buffer Rail Terminal with signal_name duplicates Terminal with bus_label which is associated with the same signal_name in Component , Interconnect Model Group , Interconnect Model Set , Interconnect Model</i>
<b>E6055</b>	IMSMDL_ERR_55	[Component] {compname} [Interconnect Model Group] {interconnectmodelgroup} [Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel} : {interfacename} Terminal {terminal1} with signal_name {signalname} duplicates Terminal {terminal2} with the same signal_name
		<i>At Interface Terminal with signal_name duplicates Terminal with the same signal_name in Component , Interconnect Model Group , Interconnect Model Set , Interconnect Model</i>
<b>E6056</b>	IMSMDL_ERR_56	[Component] {compname} [Interconnect Model Group] {interconnectmodelgroup} [Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel} : {interfacename} Terminal {terminal1} with bus_label {buslabel} duplicates Terminal {terminal2} with the same bus_label
		<i>At Interface Terminal with bus_label duplicates Terminal with the same bus_label in Component , Interconnect Model Group , Interconnect Model Set , Interconnect Model</i>
<b>E6057</b>	IMSMDL_ERR_57	[Component] {compname} [Interconnect Model Group] {interconnectmodelgroup} [Interconnect Model Set] {interconnectmodelset} [Interconnect Model]

		{interconnectmodel} : {interfacename} Terminal {terminal1} with pin_name {pinname} duplicates Terminal {terminal2} with the same pin_name
		<i>At Interface Terminal with pin_name duplicates Terminal with the same pin_name in Component , Interconnect Model Group , Interconnect Model Set , Interconnect Model</i>
<b>E6058</b>	IMSMDL_ERR_58	[Component] {compname} [Interconnect Model Group] {interconnectmodelgroup} [Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel} : {interfacename} Terminal {terminal1} with pad_name {padname} duplicates Terminal {terminal2} with the same pad_name
		<i>At Interface Terminal with pad_name duplicates Terminal with the same pad_name in Component , Interconnect Model Group , Interconnect Model Set , Interconnect Model</i>
<b>W6059</b>	IMSMDL_ERR_59	[Component] {compname} [Interconnect Model Group] {interconnectmodelgroup} [Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel} : Buffer Rail Terminal {terminal} has a {refname} specified for Pin {pinname} but the IBIS file has no corresponding Pin Mapping
		<i>Buffer Rail Terminal has a Reference specified for Pin but the IBIS file has no corresponding Pin Mapping in Component , Interconnect Model Group , Interconnect Model Set , Interconnect Model</i>
<b>E6060</b>	IMSMDL_ERR_60	Interconnect Model Set '{interconnectmodelset}' is duplicated within the file.
		<i>The same Interconnect Model Set is defined more than once</i>
<b>W6061</b>	IMSMDL_ERR_61	All pin_names considered Aggressor_Only, victim cannot be identified in [Interconnect Model] {interconnectmodel} and cross-talk may be incomplete
		<i>All the pins in InterconnectModel have been marked Aggressor_Only so no victims could be identified</i>
<b>E6062</b>	IMSMDL_ERR_62	[Interconnect Model Set] {interconnectmodelset} : [Interconnect Model] {interconnectmodel1} and [Interconnect Model] {interconnectmodel2} seem to be identical
		<i>Interconnect Models and in Interconnect Model Set seem to have the same exact definition</i>
<b>E6063</b>	IMSMDL_ERR_63	[Component] {componentname} [Interconnect Model Group] {interconnectmodelgroup} : [Interconnect Model Set] {interconnectmodelset1} [Interconnect Model] {interconnectmodel1} and [Interconnect Model Set] {interconnectmodelset2} [Interconnect Model] {interconnectmodel2} seem to be identical
		<i>Interconnect Model in InterconnectModelSet and in in in Component seem to have the same exact definition</i>
<b>E6064</b>	IMSMDL_ERR_64	All pin_names have been considered Aggressor_Only, a victim cannot be identified and cross-talk may be incomplete for Component {compname}, Interconnect Model Group {interconnectmodelgroup}, Interconnect Model Set {interconnectmodelset}, Interconnect Model {interconnectmodel}
		<i>All pin_names have been considered Aggressor_Only, a victim cannot be identified and cross-talk may be incomplete for Component , Interconnect Model Group , Interconnect Model Set , Interconnect Model</i>
<b>E6065</b>	IMSMDL_ERR_65	All pin_names have been considered Aggressor_Only, a victim cannot be identified and full path cross-talk may be incomplete for Component {compname},

		Interconnect Model Group {interconnectmodelgroup}, Interconnect Model Set {interconnectmodelset}, Interconnect Model {interconnectmodel}
		<i>All pin_names have been considered Aggressor_Only, a victim cannot be identified and full path cross-talk may be incomplete for Component , Interconnect Model Group , Interconnect Model Set , Interconnect Model</i>
<b>E6066</b>	IMSMDL_ERR_66	( line {linenum} ) - Interconnect Model '{interconnectmodel}' is duplicated within the Interconnect Model Set '{interconnectmodelset}'.
		<i>Interconnect Model is defined more than once in Interconnect Model Set</i>
<b>E6067</b>	IMSMDL_ERR_67	[Component] {compname} [Interconnect Model Group] {interconnectmodelgroup} [Interconnect Model Set] {interconnectmodelset} [Interconnect Model] {interconnectmodel} : Buffer Rail Terminal {terminal1} with pin_name {pinname} duplicates Terminal {terminal2} with the same pin_name
		<i>Buffer Rail Terminal with pin_name duplicates Terminal with the same pin_name in Component , Interconnect Model Group , Interconnect Model Set , Interconnect Model</i>
<b>B6200</b>	IMSFILE_ERR_0	{filename}:{linenum}:Unable to get IBIS.
		<i>Internal Error at line in file</i>
<b>B6201</b>	IMSFILE_ERR_1	Unable to alloc IFILE.
		<i>Memory allocation failed</i>
<b>E6202</b>	IMSFILE_ERR_2	Interconnect Model file name {filename} does not seem to have an extension
		<i>has no extension specified</i>
<b>E6203</b>	IMSFILE_ERR_3	Interconnect Model file name {filename} invalid. Should have '.ims' extension
		<i>Extension '.ims' was missing in</i>
<b>E6204</b>	IMSFILE_ERR_4	Interconnect Model file {filename} not found.
		<i>The interconnect model file was not found</i>